


iléktró

MKIII USER INSTRUCTIONS AND INSTALLATION MANUAL

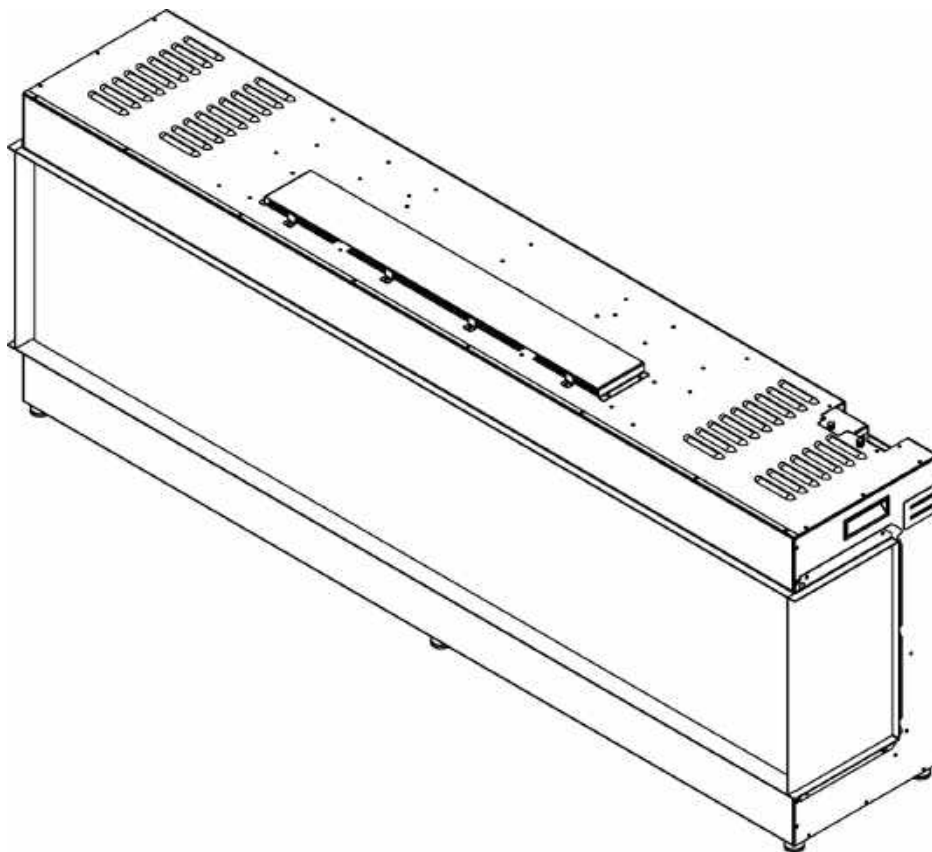

Version 1 09/02/26

Contents of manual may be updated without notice.

For the latest version of this manual please refer to our
website: www.paulagnewdesigns.com.au

IMPORTANT NOTE

THE HEATER OUTLET GRILLE BECOMES VERY HOT WHILST IN OPERATION. DO NOT COVER THE OUTLET GRILLE OR ANY PART OF THE APPLIANCE. FOR USE WITH 230V - 240V 50HZ ELECTRICITY SUPPLY ONLY. PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION KEEP THE INSTRUCTIONS IN A SAFE PLACE. THEY WILL BE NEEDED WHEN MAINTENANCE OR SERVICING IS REQUIRED. THIS APPLIANCE MUST BE EARTHED.

PAUL AGNEW

DESIGNS

USER MANUAL CONTENTS

THIS MANUAL COVERS THE FOLLOWING MODELS ONLY:

950 A, 950 L, 1250 L, 1650 L, 2000 L, 2600 L

A - ASPECT

L - LANDSCAPE

BOX CONTENTS	3
HOW TO USE YOUR APPLIANCE	
1. IMPOTANT SAFETY INFORMATION	4
2. APP CONNECTING INSTRUCTIONS	6
3. REMOTE CONTROL INSTRUCTIONS	10
4. OPERATING INSTRUCTION	11
5. MAINTENANCE AND CARE	12
HOW TO INSTALL YOUR APPLIANCE	
6. TECHNICAL SPECIFICATION	13
7. GENERAL INSTALLATION	14
8. CONFIGURING YOUR WINDOW	15
9. INSTALLATION	19
10. SETTING THE FUEL BED	21
11. ELECTRICAL CONNECTION	22
SERVICING INSTRUCTIONS	
12. GENERAL INFORMATION	23
13. FAULT FINDING	24
14. SERVICING REQUIREMENTS	25
15. REMOVING THE GLASS	26
REFERENCE INFORMATION	
16. WIRING DIAGRAM	27
17. EXPLODED DIAGRAM	32

TERMS AND CONDITIONS WARRANTY

148 COCHRANES ROAD, MOORABBIN,
VICTORIA 3189

FULL TERMS AND CONDITIONS ARE DETAILED
IN THE WARRANTY STATEMENT ON THE
WEBSITE WWW.PAULAGNEWDESIGNS.COM.AU.

IN THE EVENT OF ANY CONFLICT OF
INFORMATION THE WORDING ON THE WEBSITE
SHALL PREVAIL. IMPORTANT NOTE: SHOULD
ANY PROBLEMS BE EXPERIENCED WITH YOUR
PRODUCT, CLAIMS MUST FIRST BE SUBMITTED
TO THE RETAILER WHERE THE APPLIANCE
WAS PURCHASED FROM WHO WILL OFFER
IMMEDIATE ASSISTANCE.

REGISTRATION NUMBER:
IN ACCORDANCE WITH EUROPEAN DIRECTIVE
2012/19/ EU, WASTE ELECTRICAL AND
ELECTRONIC EQUIPMENT (WEEE) MUST NOT
BE DISPOSED OF WITH HOUSEHOLD WASTE.
AT THE END OF ITS USEFUL LIFE PLEASE TAKE
THIS PRODUCT TO AN APPROPRIATE
RECYCLING CENTRE OR COLLECTION POINT.
YOU CAN FIND

YOUR NEAREST RECYCLING CENTRE BY USING
THE BANK LOCATOR AT
WWW.RECYCLE-MORE.CO.UK FOR UK
CUSTOMERS,
WWW.ACOR.ORG.AU FOR AUSTRALIA
CUSTOMERS
WWW.WEEEIRELAND.IE FOR CUSTOMERS
IN THE REPUBLIC OF IRELAND, OR BY
CONTACTING YOUR LOCAL AUTHORITY



BOX CONTENTS

PLEASE CHECK THAT THE FOLLOWING COMPONENTS ARE INCLUDED WITHIN THE BOX. IF ANYTHING IS MISSING OR DAMAGED, PLEASE CONTACT THE RETAILER AND DO NOT USE THE APPIANCE UNTIL YOU HAVE EVERYTHING.

- ☒ APPLIANCE WITH TRAILING LEAD WITH MOULDED 13AMP
- ☒ PLUG REMOTE CONTROLHANDSET
- ☒ FIXING BRACKETS/SIDE PLATE BEADS.
- ☒ INSTRUCTION MANUAL.
- ☒ LOG SET.
- ☒ GLASS REMOVAL SUCTION PAD(S).
- ☒ MAGNET TOOL.
- ☒ BLACK VERMICULITE.
- ☒ BLACK AND EMBER CRYSTALS.
- ☒ WOOD CHIPS

HOW TO USE YOUR APPLIANCE

1. IMPORTANT SAFETY INFORMATION

- READ ALL OF THE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE. INSTRUCTIONS ARE AVAILABLE ONLINE AT WWW.PAULAGNEWDESIGNS.COM
- REMOVE ALL PACKAGING AND DISPOSE OF AT AN APPROPRIATE RECYCLING FACILITY.
- DO NOT USE THIS APPLIANCE IN THE IMMEDIATE SURROUNDINGS OF A BATH, SHOWER, SWIMMING POOL OR ANY OTHER AREA WHERE THE APPLIANCE COULD COME INTO CONTACT WITH WATER OR HUMIDITY, E.G. A BATHROOM.
- DO NOT ALLOW THE APPLIANCE TO BE COVERED OR LET THE AIR INLET/OUTLET BECOME OBSTRUCTED AS THE APPLIANCE MAY OVERHEAT. PLEASE NOTE THE WARNING SYMBOL ON THE APPLIANCE. FOR INDOOR USE ONLY. THIS APPLIANCE IS NOT SUITABLE FOR USE OUTSIDE THE HOUSE.
- KEEP THE POWER CORD AWAY FROM HOT SURFACES AND HOT CONDITIONS. DO NOT ROUTE THE POWER LEAD IN FRONT OF THE APPLIANCE.
- THIS APPLIANCE MUST BE INSTALLED IN A PURPOSE BUILT STUD-WORK ENCLOSURE OR A SUITABLY PREPARED FIREPLACE
- . ENSURE THE APPLIANCE IS LEVEL AND THAT FURNITURE, CURTAINS ETC. ARE POSITIONED NO CLOSER THAN 1M.
- WHEN THE APPLIANCE HAS BEEN INSTALLED THE POSITION OF THE PLUG MUST BE ACCESSIBLE OR AN ISOLATION SWITCH WILL BE INSTALLED AWAY FROM THE APPLIANCE.
- WHERE THE ELECTRICITY SUPPLY CABLE HAS TO PASS THROUGH A MASONRY WALL, STONE SURROUND ETC. ENSURE SUITABLE RUBBER BUSHES ARE FITTED AT POSSIBLE WEAR POINTS.
- **NEVER** LEAVE CHILDREN UNSUPERVISED WITH AN UNGUARDED HEATER.
- **NEVER** OBSTRUCT OR COVER THE HEATER OUTLET.
- **NEVER** INSTALL OR USE THIS PRODUCT WHERE IT MAY COME IN CONTACT WITH WATER I.E. A BATHROOM OR WET ROOM.
- **NEVER** USE AEROSOLS OR STEAM CLEANERS NEAR THIS PRODUCT.
- **NEVER** ROUTE THE ELECTRIC CABLE NEAR THE HEATER OUTLET.
- **NEVER** ROUTE THE ELECTRIC CABLE UNDER CARPETS OR FLOOR COVERINGS.
- **NEVER** INSTALL THIS PRODUCT CLOSE TO CURTAINS OR COMBUSTIBLE MATERIALS.
- **NEVER** USE THE HEATER TO DRY CLOTHES OR OTHER OBJECTS.
- **NEVER** REMOVE THE FIREPLACE SURROUNDING WITHOUT ISOLATING THE ELECTRIC SUPPLY.

HOW TO USE YOUR APPLIANCE

1. IMPORTANT SAFETY INFORMATION

- IF THE ELECTRICITY SUPPLY CABLE IS DAMAGED DO NOT USE THE APPLIANCE UNTIL IT HAS BEEN REPLACED. FOR SAFETY REASONS THE REPLACEMENT HAS TO BE CARRIED OUT BY A SERVICE AGENT OR A SIMILARLY COMPETENT ELECTRICIAN.
- CAUTION: IN ORDER TO AVOID A HAZARD DUE TO INADVERTENT RESETTING OF THE THERMAL CUT OUT, THIS APPLIANCE MUST NOT BE SUPPLIED THROUGH AN EXTERNAL SWITCHING DEVICE, SUCH AS A TIMER, OR CONNECTED TO A CIRCUIT THAT IS REGULARLY SWITCHED ON AND OFF BY THE UTILITY
- DO NOT OPERATE THE APPLIANCE IF IT IS DAMAGED.
- REPAIRS OF ELECTRICAL APPLIANCES MUST ONLY BE PERFORMED BY AN ELECTRICAL ENGINEER. SHOULD THE APPLIANCE FAIL TO OPERATE, OR IN CASE OF ANY DAMAGE, PLEASE CONTACT THE RETAILER FROM WHOM THE APPLIANCE WAS PURCHASED.
- **CAUTION:** SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION MUST BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
- CHILDREN AGED FROM 3 YEARS AND LESS THAN 8 YEARS SHALL ONLY SWITCH ON/OFF THE APPLIANCE PROVIDED THAT IT HAS BEEN PLACED OR INSTALLED IN ITS INTENDED NORMAL OPERATING POSITION AND THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN AGED FROM 3 YEARS AND LESS THAN 8 YEARS SHALL NOT PLUG IN, REGULATE AND CLEAN THE APPLIANCE OR PERFORM USER MAINTENANCE

IF YOU ARE INSTALLING YOUR APPLIANCE IN TO AN EXISTING CHIMNEY CAVITY

- ENSURE THE FLOOR AREA THE APPLIANCE WILL SIT ON IS FLAT AND FREE FROM LOOSE MATERIAL
- ENSURE THE FLUE OUT FROM THE CHIMNEY CAVITY IS SEALED
- IN ORDER TO INSTALL YOUR APPLIANCE EFFECTIVELY DISCUSS WITH YOUR SELLER THE SURROUND NEEDED TO ENCLOSE YOUR APPLIANCE INTO THE INSTALLATION LOCATION
- TO PROVIDE POWER TO THE APPLIANCE INSTRUCT A QUALIFIED ELECTRICIAN TO INSTALL AND POWER SOCKET INSIDE THE CHIMNEY CAVITY, ENSURING THERE IS AN ISOLATION SWITCH ACCESSIBLE OUTSIDE THE CAVITY

2. APP CONNECTION INSTRUCTIONS

1. App download

- Download "**Tuya Smart**" from the app store.
- Scan the **QR** code.
- Turn on the "**GPS**" from your mobile device.



3. Add device

After account is created, log into account and select the "Add Device" button.

NOTE: make sure your mobile phone is well connected to the nearest WIFI signal.

2. Login


- Register with your email ID or Mobile phone number as the user name.
- Setup your account password.



3. Add device - Continued


There are three methods to add your Electric Fireplace.

- Method 1: Add Manually on "P0" mode. Please follow below steps A,B,C,D.
- Method 2: Add Manually on "P1" mode. Please follow below steps A,B,C,D.
- Method 3: Add by Bluetooth. Open Bluetooth on your mobile phone before adding.

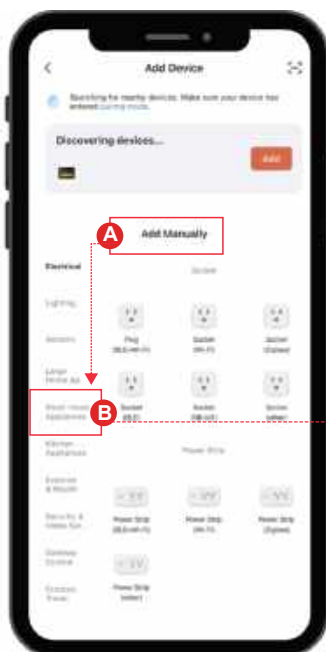


4. Connecting method 1 - (P0)

- Press & hold  from remote control or control panel until display on control panel shows “P0”.
- Enter the WIFI name and password, then press “Next” button for pairing.
- Press the **Blink Quickly** button for “P0”, device being added.
When complete, display on control panel shows “P4”, LED Ember-light shows **GREEN** color and flashes 6 times.

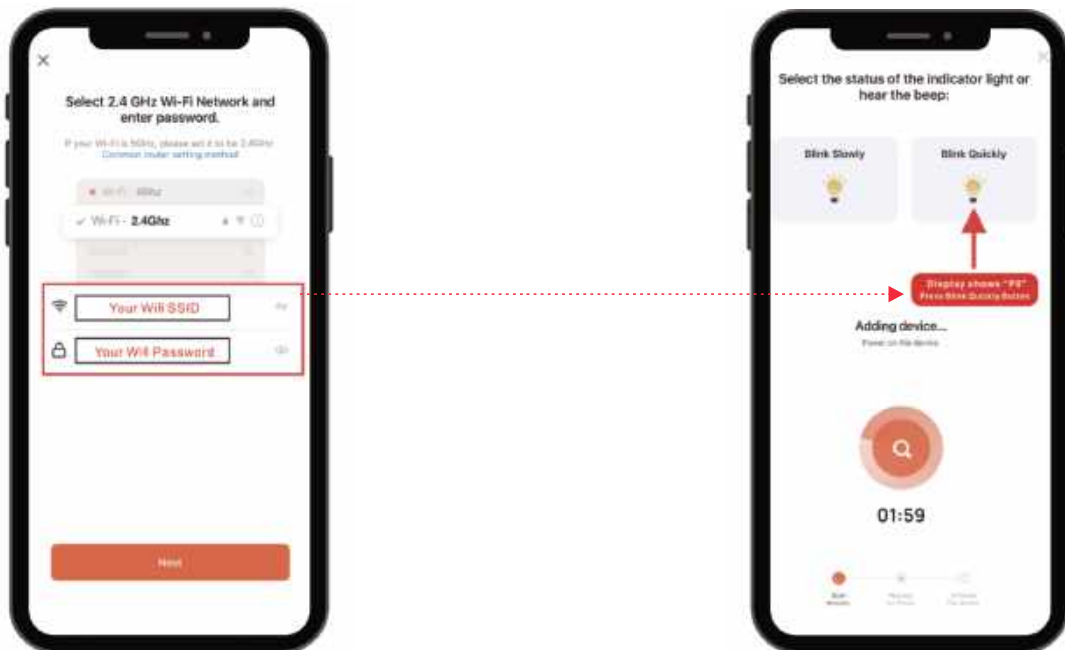

4. Connecting method 2 - (P1)

- Press & hold  from remote control or control panel until display on control panel shows “P1”.
- Enter the WIFI name and password, then press “Next” button for pairing.
- Press the **Blink Slowly** button for “P1”, Then go to connect your mobile phone to the device’s hotspot.
- Select device’s hotspot (**SmartLife-xxxx**), then back to device. Device being added.
- When complete, display on control panel shows “P4”, LED Ember-light shows **GREEN** color and flashes 6 times.

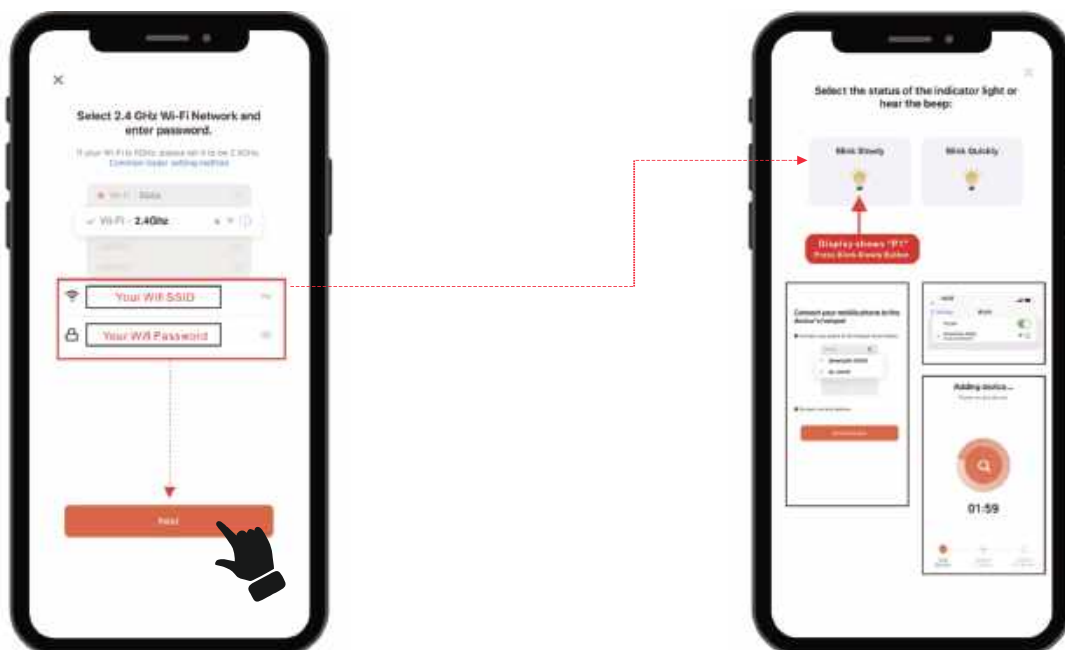


4. Connecting method 3 - (Bluetooth)

- Press & hold  from remote control or control panel until display on control panel shows “P0”.
- Press the **Add** button when you see the device named “ilektro XXXX” for example “ilektro 950A”.
- Enter the WIFI name and password, then press “Next” button for pairing.
- When complete, display on control panel shows “P4”, LED Ember-light shows **GREEN** color and flashes 6 times.




5. Complete

- Press **Done** to complete.

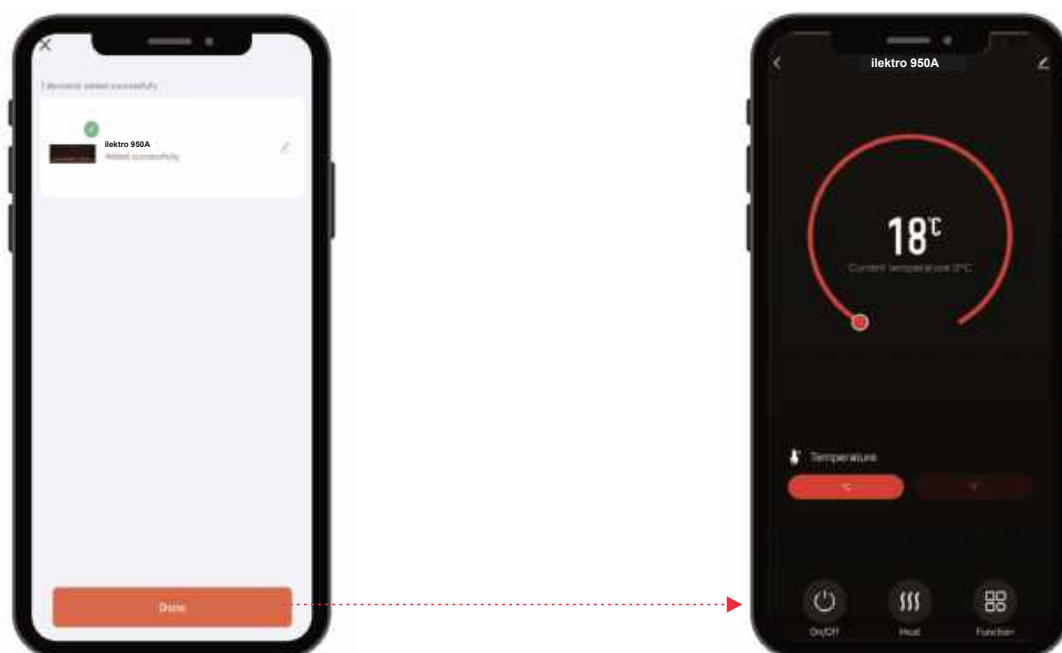


APP Operating Instruction

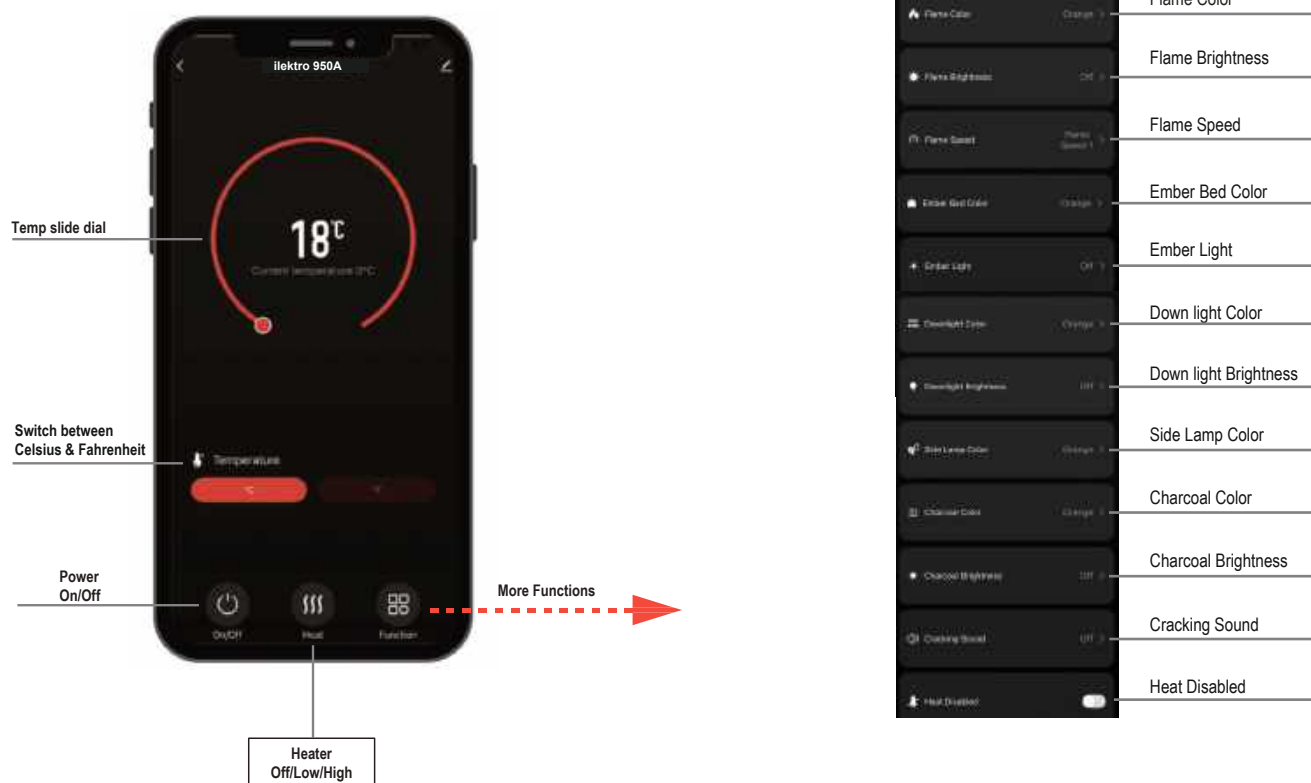

HOW TO USE YOUR APPLIANCE

3. REMOTE CONTROL INSTRUCTIONS

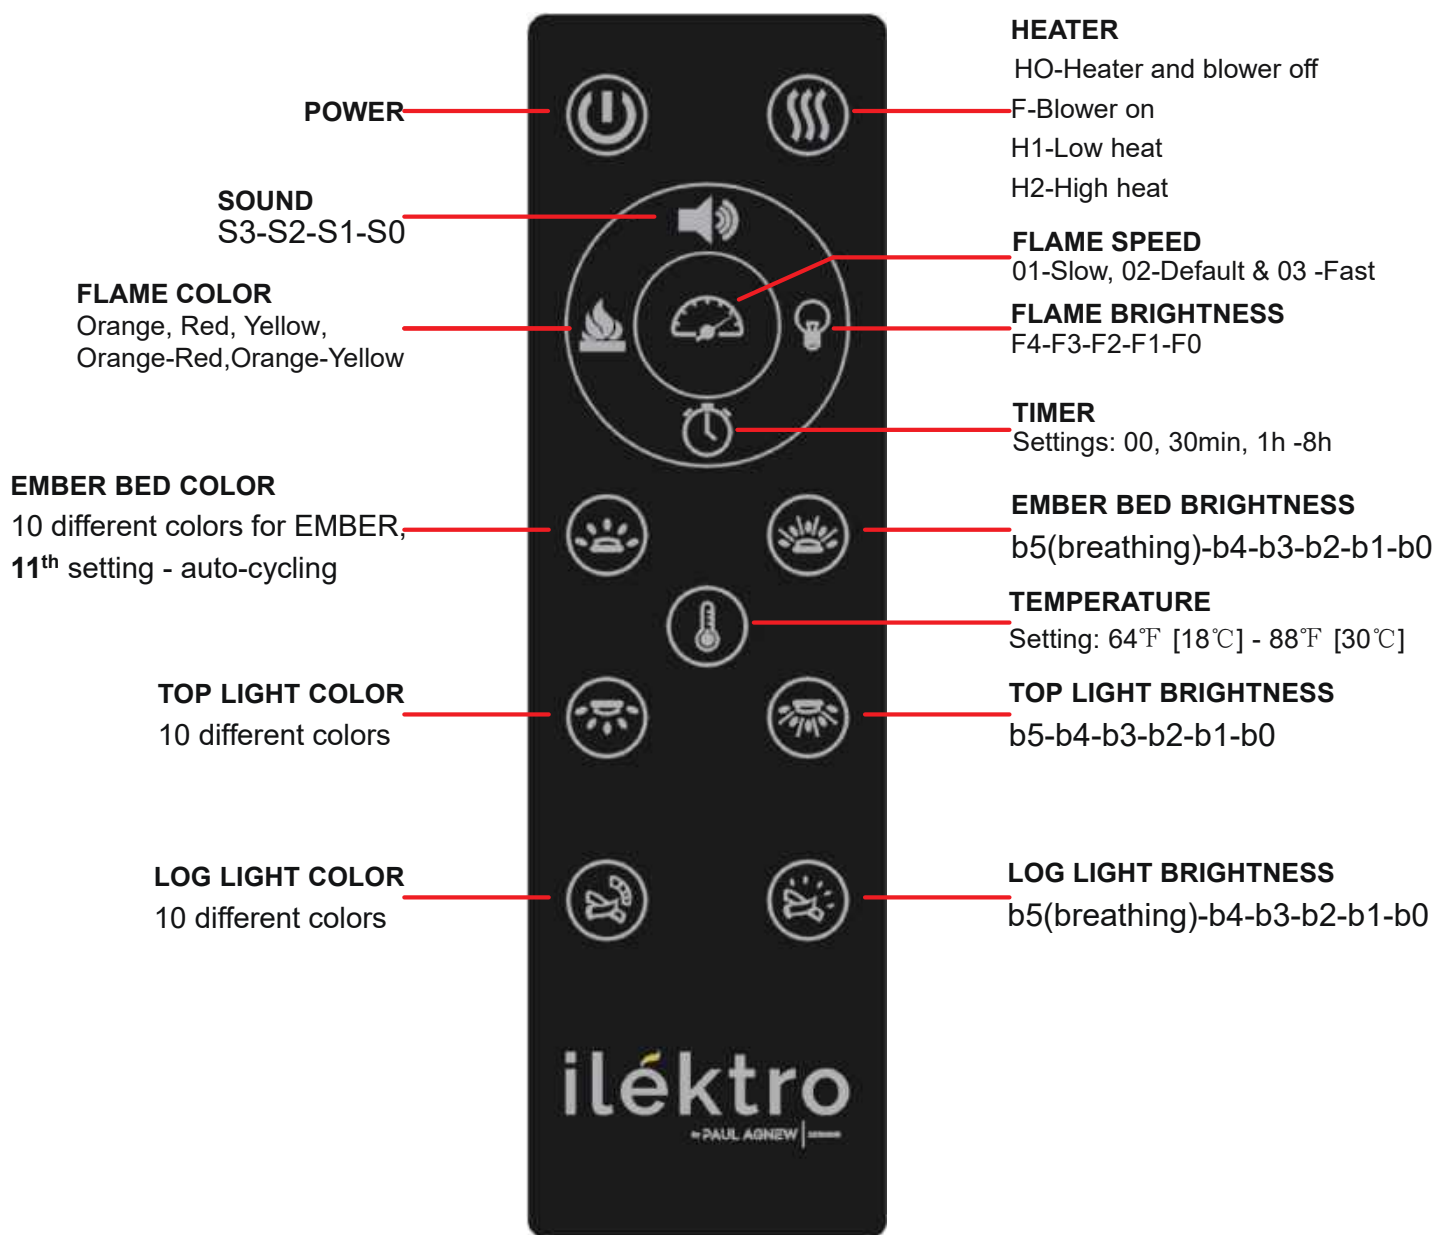

NOTICE

When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

NOTICE

To improve operation, aim the remote control at the front of the fireplace. **DO NOT** press the buttons too quickly. Give the unit time to respond to each command.

Remote Control Battery Information

- This remote control uses CR2032 **battery(included)**.
- Instructions for battery installation are on the Remote Control battery compartment.

HOW TO USE YOUR APPLIANCE

4. OPERATING INSTRUCTIONS

THERMAL SAFETY CUT OUT

IF THE SAFETY CUT OUT FOR THE HEATER TRIPS THE APPLIANCE HAS OVERHEATED. IF THIS HAPPENS:

- SWITCH OFF THE DEVICE FROM THE ISOLATION SWITCH AND ALLOW IT TO COOL DOWN FOR A MINIMUM OF 2 HOURS
- CHECK THE HEATER OUTLET VENTS FOR ANY OBSTRUCTION AND CLEAR IF NECESSARY. SEE MAINTENANCE SECTION FOR GUIDANCE
- PLUG IN THE APPLIANCE AND SWITCH IT ON. THE CUT OUT WILL RESET AND THE APPLIANCE SHOULD FUNCTION NORMALLY.
- IF THE APPLIANCE CONTINUES TO NOT FUNCTION CORRECTLY, CONTACT THE RETAILER OR PLACE OF PURCHASE.

HOW TO USE YOUR APPLIANCE

5. MAINTENANCE AND CARE

THE AIR INLET GRILLES ON THE TOPSIDE AND BACK OF THE APPLIANCE SHOULD BE UNOBSTRUCTED. FREE AIR NEEDS TO CIRCULATE IN THIS AREA.

ALWAYS SWITCH OFF THE APPLIANCE FROM THE ISOLATION SWITCH BEFORE CLEANING OR UNDERTAKING AND MAINTENANCE.

GENERAL CLEANING

- ONLY CLEAN THE GLASS WHEN ITS COLD
- DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THE APPLIANCE
- USE A LINT FREE CLOTH TO WIPE ANY SURFACES
- DO NOT SPRAY CLEANER INTO THE APPLIANCE

CLEANING THE FUEL BED

TO ACCESS THE FUEL EFFECT IT WILL BE NECESSARY TO REMOVE THE FRONT GLASS VIEWING PANEL, SEE SERVICING SECTION


- ENSURE THE APPLIANCE IS SWITCHED OFF AT ISOLATION SWITCH.
- REMOVE THE LOGS AND DUST CLEAN. DO NOT WET THE LOGS.
- USE A LINT FREE DUSTER.
- LIFT ALL FUEL MEDIUM OUT OF THE FIRE AND WIPE FUEL BED DOWN.
- ENSURE NO MOISTURE REMAINS BEFORE RETURNING THE LOGS INTO POSITION. SEE LOG INSTALLATION PROCESS.
- CAUTION: REPLACE FRONT TRIM WHILE REMOVING LOGS AND FUEL MATERIAL TO ENSURE PIECES DO NOT FALL INTO THE APPLIANCE
- REPLACE THE GLASS AND TRIM AS DESCRIBED IN THE SERVICING INSTRUCTION SECTION.

HOW TO USE YOUR APPLIANCE

5. MAINTENANCE AND CARE

CLEANING THE OUTLETS

- ENSURE THE APPLIANCE IS SWITCHED OFF AT THE ISOLATION SWITCH
- CLEAN THE AIR OUTLET GRILLES REGULARLY WITH A SOFT CLOTH OR THE NOZZLE OF A VACUUM CLEANER

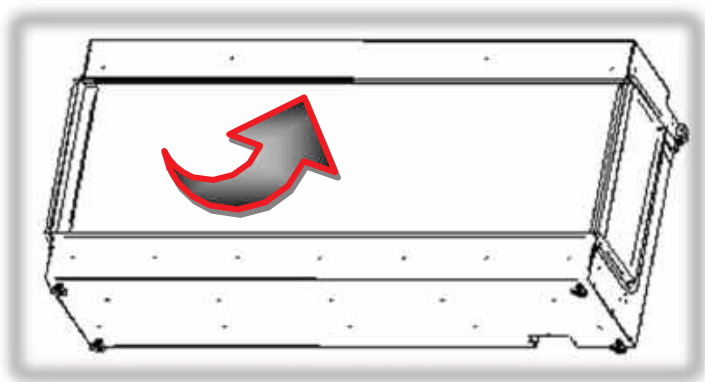

- DUST BUILD-UP CAN INHIBIT EFFICIENT PERFORMANCE OF THE FAN AND LEAD TO THE SAFETY CUT-OUT OPERATING.
- KEEP THE AREA AROUND THE APPLIANCE CLEAN AND FREE OF FLUFF, DUST OR PET HAIR.
- IN PARTICULAR, BUILD-UP OF DUST ETC. CAN OCCUR AROUND THE HEATER VENT AREA. TAKE PARTICULAR CARE TO KEEP THIS AREA FREE FROM SUCH PARTICLES ON A REGULAR BASIS TO PREVENT BUILD-UP.

BATTERY REPLACEMENT

WHEN THE REMOTE BATTERIES IS LOW IT MUST BE CHANGED IMMEDIATELY. INSTALL CORRECT REPLACEMENTS AND DISPOSE OF THE OLD BATTERIES CAREFULLY.

REMOTE CONTROL BATTERY

THE REMOTE CONTROL USES ONE CR2032 BATTERY (INCLUDED).

INSTALLING THE REMOTE CONTROL BATTERY

1. TURN THE REMOTE CONTROL OVER AND, USING A SCREWDRIVER, REMOVE THE FIXING SCREW FROM THE BACK COVER. LOCATE THE SMALL HOLE MARKED WITH A PAPERCLIP SYMBOL.
2. USING THE SUPPLIED PUSH TOOL (OR A PAPERCLIP), INSERT THE TOOL INTO THE SMALL HOLE AND PRESS GENTLY UNTIL THE FACEPLATE SEPARATES FROM THE BACK PLATE OF THE REMOTE.
3. CAREFULLY REMOVE THE FACEPLATE, ENSURING THAT THE LED AT THE FRONT OF THE REMOTE IS NOT DAMAGED.
4. TAKE THE SUPPLIED BATTERY AND LOCATE THE SIDE MARKED WITH THE "+" SYMBOL.
5. ENSURE THE "+" SIDE OF THE BATTERY FACES AWAY FROM THE GREEN CIRCUIT BOARD, THEN SLIDE THE BATTERY INTO THE BATTERY HOLDER. THE "+" SYMBOL ON THE BATTERY SHOULD ALIGN WITH THE "+" MARKING ON THE BATTERY HOLDER.
6. CAREFULLY PLACE THE FACEPLATE BACK ONTO THE MAGNETIC BACK PLATE, STARTING BY ALIGNING AND INSERTING THE FRONT EDGE OF THE FACEPLATE FIRST.

REPLACING THE REMOTE CONTROL BATTERY

1. FOLLOW THE STEPS IN "INSTALLING THE REMOTE CONTROL BATTERY" TO OPEN THE REMOTE AND EXPOSE THE EXISTING BATTERY.
2. USING THE PUSH TOOL (OR A PAPERCLIP), GENTLY PUSH THE OLD BATTERY OUT OF THE BATTERY HOLDER.
3. DISPOSE OF THE USED BATTERY AT A LOCAL HAZARDOUS MATERIALS RECYCLING OR DISPOSAL FACILITY.
4. INSTALL A NEW BATTERY BY FOLLOWING THE STEPS IN "INSTALLING THE REMOTE CONTROL BATTERY."

HOW TO INSTALL YOUR APPLIANCE

6. TECHNICAL SPECIFICATION

MODEL		950 A	950 L	1250 L	1650 L	2000 L	2600 L
WEIGHT KG		43	36	56	76	81	121
VOLTAGE		230V 50HZ	230V 50HZ	230V 50HZ	230V 50HZ	230V 50HZ	230V 50HZ
BATTERY HANDSET		12V MN 21/23	12V MN 21/25	12V MN 21/26	12V MN 21/27	12V MN 21/28	12V MN 21/28
TRANSMITTER ELECTRICAL POWER CONSUMPTION	FLAME PICTURE ONLY	12W	12W	15W	22W	30W	40W
	HEATING ON	2000 WATT	2000 WATT	2000 WATT	2000 WATT	2000 WATT	2000 WATT
SUPPLY CORD	UK	BS1363 UK13A	BS1363 UK13A	BS1363 UK13A	BS1363 UK13A	BS1363 UK13A	BS1363 UK13A
	AUSTRALIAN	AS/NZS3112	AS/NZS3112	AS/NZS3112	AS/NZS3112	AS/NZS3112	AS/NZS3112
	EUROPEAN	VDE 0620	VDE 0620	VDE 0620	VDE 0620	VDE 0620	VDE 0620

NOTE:

WEIGHTS UNIT ONLY NOT INCLUDING PACKAGING
SUITE APPLIANCE (S) WEIGHTS ARE NOT INCLUDING WOODEN SURROUND

THIS APPLIANCE MUST BE EARTHED

THIS APPLIANCE HAS BEEN CERTIFIED FOR USE IN COUNTRIES OTHER THAN THOSE STATED. TO INSTALL THIS APPLIANCE IN THESE COUNTRIES, IT IS ESSENTIAL TO OBTAIN THE TRANSLATED INSTRUCTIONS AND IN SOME CASES THE APPLIANCE WILL REQUIRE MODIFICATION. CONTACT YOUR RETAILER FOR FURTHER INFORMATION.

FOR PRODUCT DIMENSIONS AND INSTALLATION GUIDES FOR BUILDING YOUR APPLIANCE INTO A LOCATION, PLEASE GO TO WEBSITE: PAULAGNEWDESIGNS.COM.AU. TO DOWNLOAD THE SPEC SHEET FOR YOUR APPLIANCE

HOW TO INSTALL YOUR APPLIANCE

7. GENERAL INSTALLATION

NOTE: INSTALLATION SHOULD BE CARRIED OUT BY A TRAINED INSTALLATION TECHNICIAN. **IF THE PRODUCT IS INSTALLED INCORRECTLY YOUR WARRANTY MAY BE INVALID.**

IT IS VERY IMPORTANT THAT THE AIR INLET GRILLES ON THE TOPSIDE AND BACK OF THE APPLIANCE ARE UNOBSTRUCTED AND ADEQUATE SPACE IS LEFT TO ALLOW FREE CIRCULATION OF AIR AROUND THIS AREA.

TOOLS REQUIRED

A SCREWDRIVER, SPIRIT LEVEL, SPANNER M5 8mm, M4 7mm AND DRILL MAY BE NEEDED.

UNPACKING THE FIREPLACE

WARNING! DO NOT USE THIS APPLIANCE IF ANY PART HAS BEEN EXPOSED TO WATER. IMMEDIATELY CALL A QUALIFIED SERVICE TECHNICIAN TO INSPECT AND TO REPLACE ANY PART OF THE ELECTRICAL SYSTEM IF NECESSARY.

- CAREFULLY UNPACK THE APPLIANCE. TAKE CARE NOT TO DAMAGE THE SURFACE OF THE APPLIANCE OR THE INSTALLATION AREA. KEEP PLASTIC WRAPPING AWAY FROM CHILDREN. BE RESPONSIBLE WHEN HANDLING THE PACKING MATERIALS.
- CHECK ALL PARTS AND ACCESSORIES ARE REMOVED BEFORE DISPOSING OF ANY PACKAGING.
- IF NECESSARY, KEEP THE ORIGINAL PACKAGING FOR FUTURE TRANSPORT AND/OR STORAGE.

FITTING THE APPLIANCE

TAKE CARE WHEN LIFTING THE APPLIANCE, OBTAIN ASSISTANCE IF REQUIRED AND ALWAYS FOLLOW SAFE MANUAL HANDLING TECHNIQUES.

WHEN IN DOUBT CONSULT YOUR RETAILER OR SUITABLY QUALIFIED PERSON.

INSTALLATION OPTIONS

MODELS 950 A ASPECT MODELS CAN BE INSTALLED WITH A SURROUND OR MANTEL

PLEASE DISCUSS THIS WITH YOUR RETAILER

MODELS 1250L 1650L 2000L LANDSCAPE MODELS SHOULD BE INSTALLED AS PER THE INSTALLATION SPECIFICATION SHEET.

IF YOU ARE IN DOUBT WHICH INSTALLATION OPTION IS RIGHT FOR YOU CONTACT YOUR RETAILER.


HOW TO INSTALL YOUR APPLIANCE

8. CONFIGURING YOUR WINDOW

THE CONFIGURATION OF THE APPLIANCE MUST BE COMPLETED BY A QUALIFIED INSTALLATION TECHNICIAN.

THE APPLIANCE COMES FITTED WITH BOTH A BLANKING PLATE AND A SIDE TRIM.

BY USING A COMBINATION OF THESE PARTS, THE APPLIANCE CAN BE CONFIGURED TO ANY GLASS ARRANGEMENT

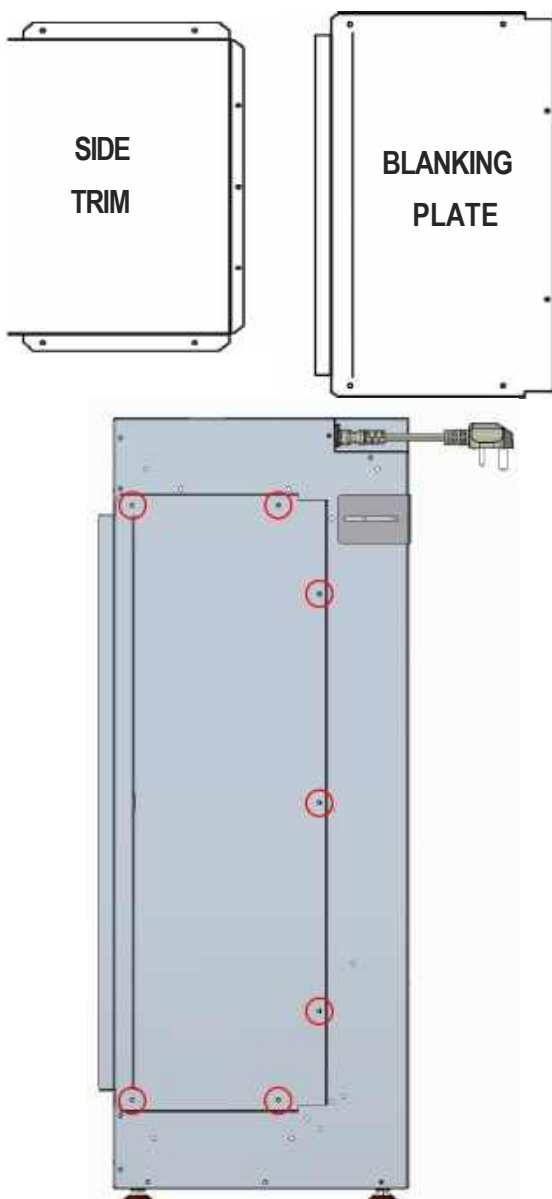

LOCATE THE BLANKING PLATE MOUNTING SCREWS ON EITHER SIDE OF THE APPLIANCE. AS SHOW ON THE IMAGE BELOW.

- REMOVE THE 7 SCREWS USING THE CORRECT SCREWDRIVER.
- RETAIN THE SCREWS FOR RE-ASSEMBLY.
- IF YOU ARE BUILDING THE APPLIANCE AS A BAY WINDOW. REMOVE BOTH THE BLANKING PLATE AND THE SIDE TRIM. REPLACE JUST THE BLANKING PLATE USING THE ORIGINAL SCREWS INTO THE ORIGINAL MOUNTING HOLES. X6
- IF THE APPLIANCE IS BEING CONFIGURED AS A LEFT HAND, RIGHT HAND OR FRONT GLASS ONLY. REMOVE THE SIDE TRIM FROM THE BLANKING PLATE AND REPLACE THE SCREWS LEAVING THE BLANKING PLATE ON THE CHOSEN SIDE.

CONVERSION OPTIONS AS FOLLOWS:

- **OPTION 1 - GF VERSION:** HEATER UNIT WITH 2 BLANKING PLATES
- **OPTION 2 - GF2L VERSION:** HEATER UNIT WITH 1 BLANKING PLATE AND 1 SIDE TRIM
- **OPTION 3 - GF2R VERSION:** HEATER UNIT WITH 1 BLANKING PLATE AND 1 SIDE TRIM
- **OPTION 4 - GF3 VERSION:** HEATER UNIT WITH 2 SIDE TRIMS

HOW TO REMOVE BLACK FLIM FROM SIDE GLASS

THE CONFIGURATION OF THE APPLIANCE MUST BE COMPLETED BY A QUALIFIED INSTALLATION TECHNICIAN.

THE APPLIANCE SIDE GLASSES COMES WITH PEAL OFF BLACK FLIM.


TO GIVE BETTER REFLECTION OF THE FLAME ON THE SIDES.

ADVISED TO BE ON BOTH SIDE GLASS FOR GLASS FRONTED VERISON (GF), WHILE ON RIGHT SIDE ONLY IN GF2R VERSION AND ONLY LEFT SIDE IN GF2L VERSION.


WALL MOUNT OPTION

1. REFER TO THE DIAGRAM AND REMOVE THE SCREWS LOCATED AT THE BOTTOM OF THE WALL-MOUNTED BRACKET.
2. INSTALL THE WALL-MOUNTED BRACKET ONTO THE WALL AND CAREFULLY HANG THE UNIT ONTO THE BRACKET.
3. IF ADDITIONAL SECURITY IS REQUIRED, REINSERT AND TIGHTEN THE BOTTOM SCREWS AS DESCRIBED IN STEP 1 TO PREVENT THE UNIT FROM BEING ACCIDENTALLY LIFTED OR FALLING OFF.


1. REMOVE TWO SCREWS FROM THE BOTTOM SECTION AS SHOWN

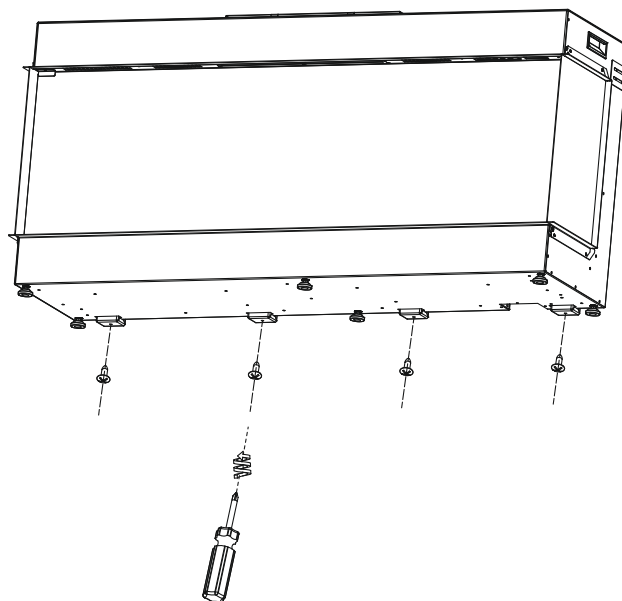


2. MOUNT THE WALL-MOUNT BRACKET INTO THE WALL AS SHOWN AND HANG THE UNIT.

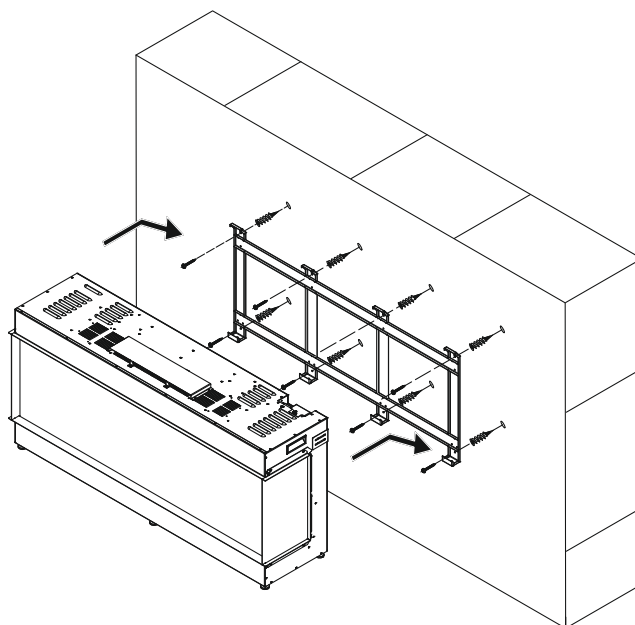

OPTION 1 - GF VERSION (BLANKING PLATES ONLY)

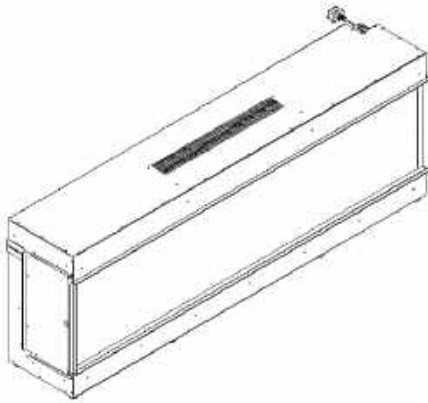


OPTION 1 -GF AFTER INSTALLATION (REFERENCE ONLY)

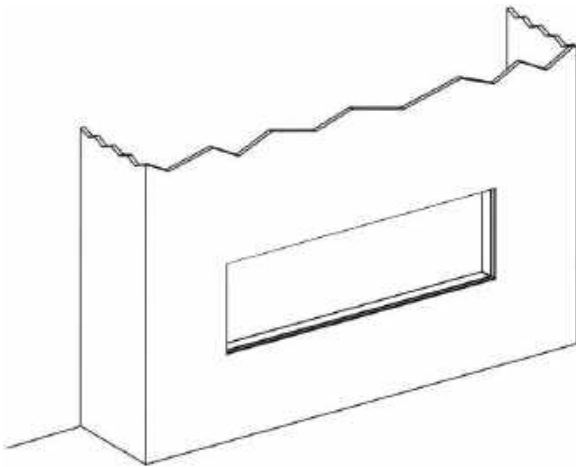


CONVERSION OPTION 2 & 3 - GF2L & GF2R (1 BLANKING PLATE & 1 SIDE TRIM)

STEP 1

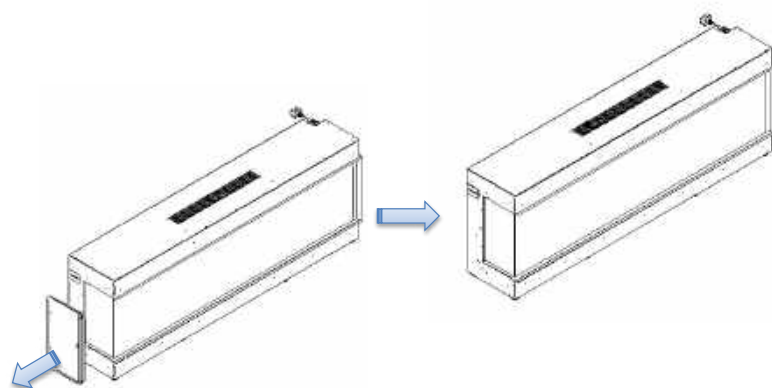


STEP 2

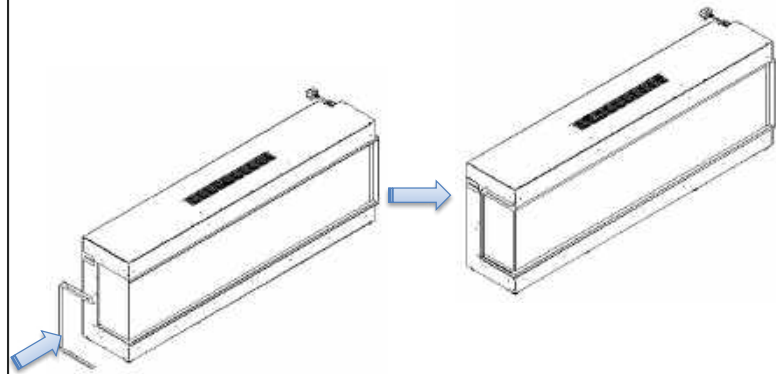


OPTION 2 - GF2L AFTER INSTALLATION (REFERENCE ONLY)

Note: Black film to be removed from the side glass (See through side) Example: only on the left side glass in GF2L. Refer **page 21** for more details.

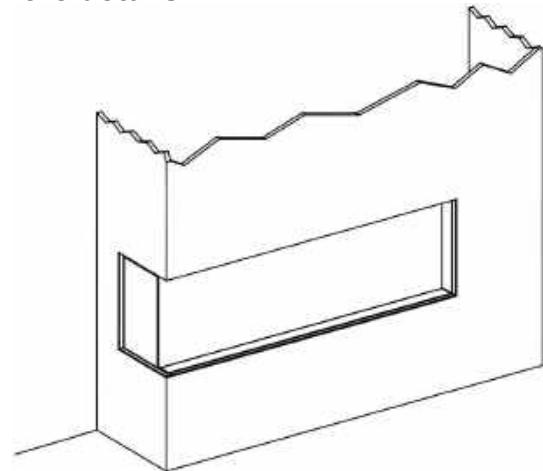


OPTION 3 - GF2R AFTER INSTALLATION (REFERENCE ONLY)

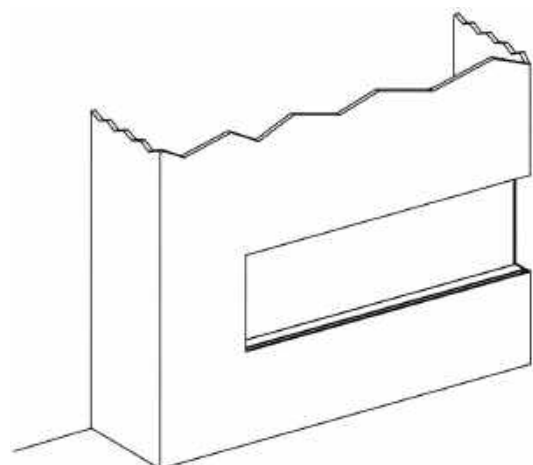


CONVERSION OPTION 4 - GF3 (SIDE TRIMS ONLY)

STEP 1

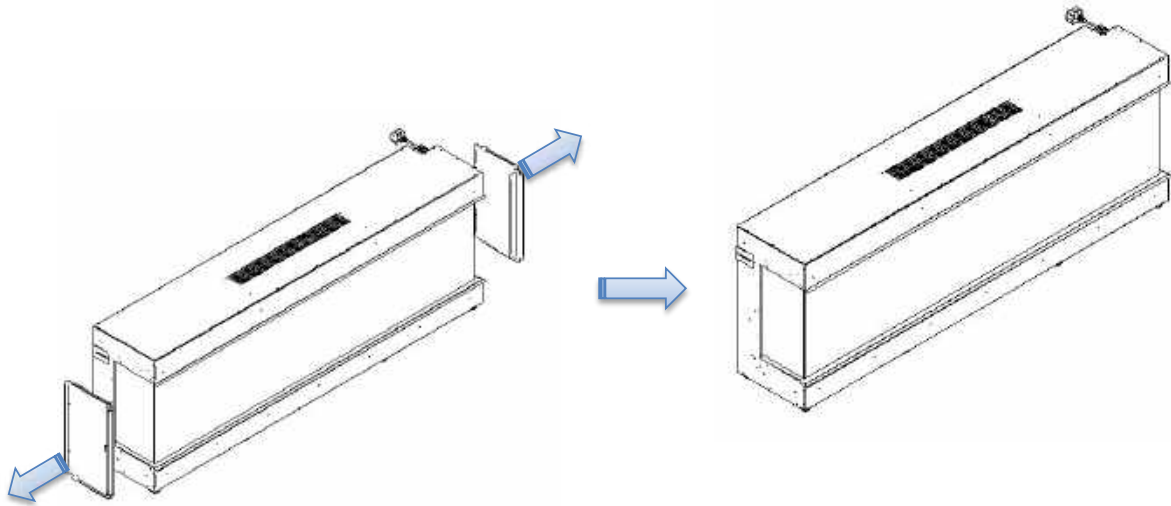


STEP 2

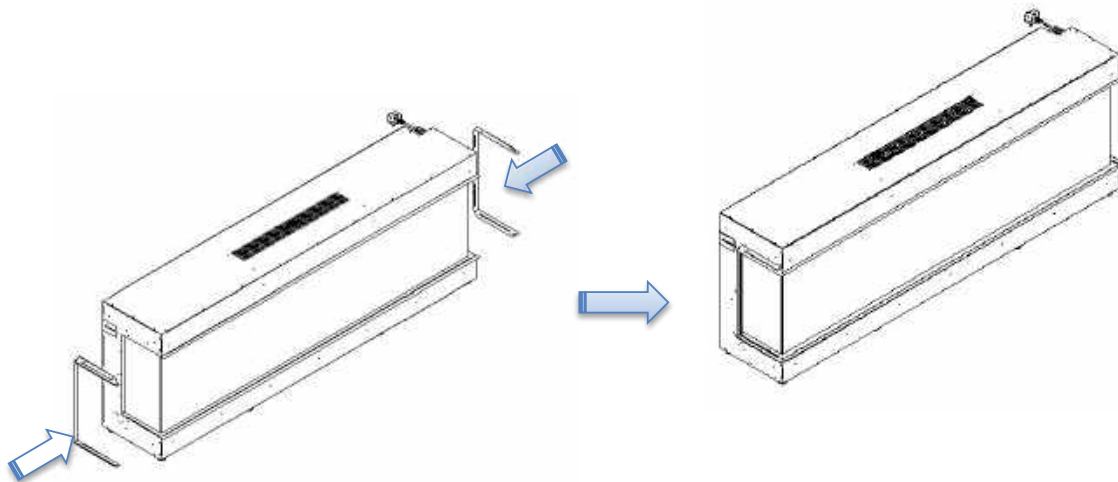

OPTION 4 - GF3 AFTER INSTALLATION (REFERENCE ONLY)

Note: Black film to be removed from the side glass (See through sides).
Refer [page 21](#) for more details.

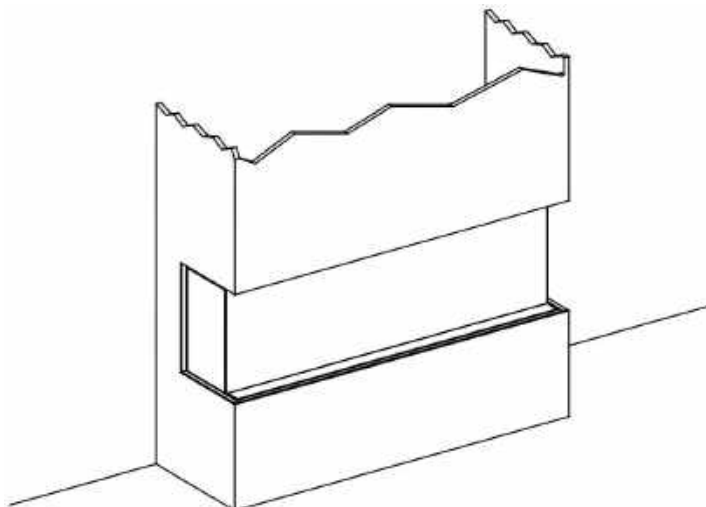

HOW TO INSTALL YOUR APPLIANCE

9. INSTALLATION

POSITIONING YOUR APPLIANCE


- YOUR NEW APPLIANCE MAY BE INSTALLED VIRTUALLY ANYWHERE IN YOUR HOME. HOWEVER, WHEN CHOOSING A LOCATION ENSURE THAT THE GENERAL INSTRUCTIONS ARE FOLLOWED.
- THE POSITIONING OF THE APPLIANCE SHOULD IDEALLY BE FITTED INTO/ ONTO A FLAT WALL OF BLOCK/BRICK CONSTRUCTION OR AN INTERNAL WOODEN FRAME PLASTER BOARD WALL. NO FIXINGS ARE PROVIDED WITH YOUR APPLIANCE. PLEASE SEEK ADVICE FROM YOUR RETAILER REGARDING FIXING METHODS, BASED ON YOUR CHOSEN INSTALLATION POSITION AND YOUR WALL MATERIAL.
- ALWAYS ENSURE THE APPLIANCE IS ADEQUATELY SUPPORTED AND SITS ON A FIRM STRUCTURE WHEN MOUNTING ABOVE FLOOR LEVEL.
- IF THE POWER CORD IS DAMAGED, IT MUST BE REPAIRED BY THE MANUFACTURER, ITS AUTHORIZED SERVICE CENTRE OR PROFESSIONAL PERSON.
- ENSURE THAT CURTAINS AND FURNITURE ARE NOT POSITIONED CLOSE TO THE CHOSEN POSITION, AS THIS WOULD CREATE A POTENTIAL FIRE HAZARD OR BLOCK THE HEATER OUTLET DUCTS. FOR BEST RESULTS, INSTALL OUT OF DIRECT SUNLIGHT.
- THE APPLIANCE SHOULD IDEALLY BE LOCATED CLOSE TO A SUITABLE MAINS SOCKET TO ENABLE CONNECTION. THE ELECTRICAL SOCKET MUST BE EASILY ACCESSIBLE TO ALLOW DISCONNECTION WHEN THE APPLIANCE IS FITTED.
- WARNING! IF THE ELECTRICAL SOCKET IS NOT ACCESSIBLE ONCE THE APPLIANCE HAS BEEN INSTALLED THEN A QUALIFIED ELECTRICIAN WILL NEED TO INSTALL AN ISOLATION SWITCH.
- WARNING! KEEP ANY FURNISHINGS OR COMBUSTIBLE MATERIALS AT LEAST 1m FROM THE FRONT OF THE ELECTRIC FIREPLACE.

HOW TO INSTALL YOUR APPLIANCE


9. INSTALLATION

POSITIONING YOUR APPLIANCE

- DO NOT INSULATE OR PACK YOUR APPLIANCE INTO ITS LOCATION. FOR THE HEATER AND FLAME AFFECT TO FUNCTION IT REQUIRES CIRCULATION OF AIR
- THE APPLIANCE SHOULD BE LOCATED ON A FLAT FLOOR OR SURFACE.
- IF INSTALLED INSIDE A WALL CAVITY ENSURE THE BASE CONSTRUCTED FOR THE APPLIANCE IS LEVEL AND CLEAR OF OBJECTS TO ALLOW AIR FLOW
- IN ALL INSTALLATION SCENARIOS ENSURE THE WALL MOUNTING BRACKETS ARE USED TO SECURE THE APPLIANCE
- FOR VENTILATION AND NORMAL FUNCTION OF THE APPLIANCE ENSURE A 10mm MINIMUM GAP EXISTS BETWEEN THE BACK OF THE APPLIANCE AND THE WALL THE APPLIANCE IS FIXED TO.

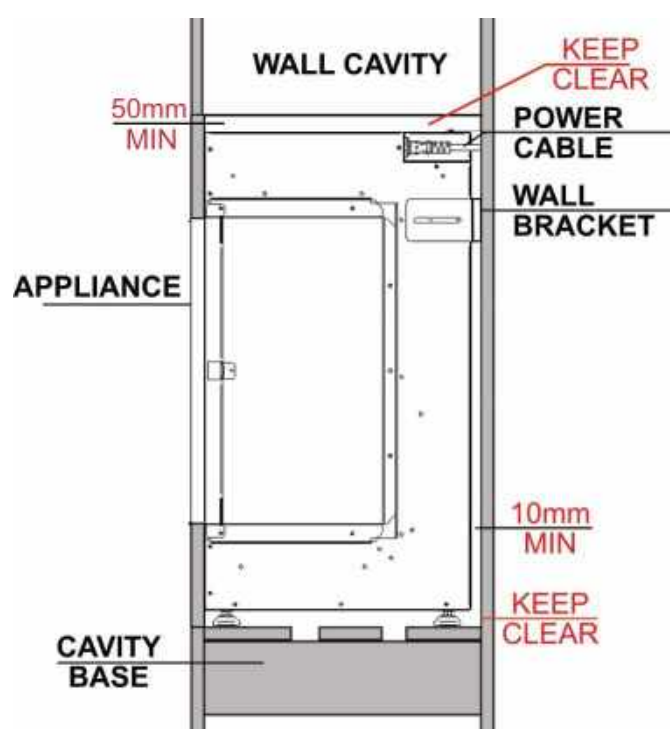

- REMOVE THE WALL BRACKET SCREWS AND ROTATE THE BRACKET AND ROTATE AS SHOWN IN THE IMAGE BELOW
- REATTACH THE BRACKETS AS SHOWN SO THEY ARE FLAT AGAINST THE FIXING WALL AND ALIGN WITH THE MOUNT HOLES ON YOUR APPLIANCE. RETURN THE BRACKET SCREWS LOOSELY

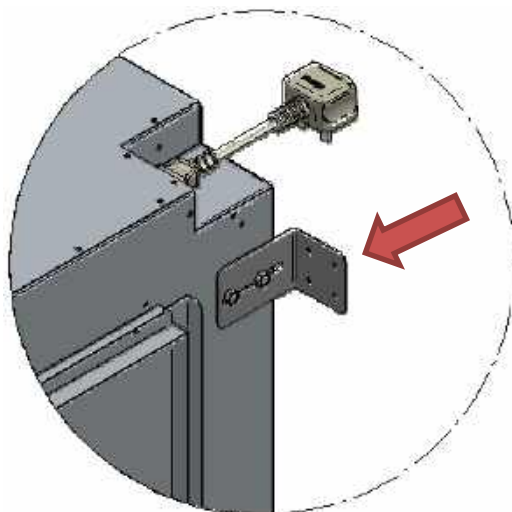


- NOTE: NO FIXTURES ARE SUPPLIED TO SECURE THE APPLIANCE TO THE CHOSEN WALL. ENSURE AN APPROPRIATE FIXING METHOD IS USED DEPENDING ON THE CONSTRUCTION MATERIAL OF THE WALL.
- WHEN INSTALLING INTO A WALL CAVITY SPACE, A STUD WORK ENCLOSURE SHOULD BE BUILT TO HOUSE THE APPLIANCE. SEE FRAME OUT BUILD SHEET OR CONTACT THE RETAILER FOR FURTHER INFORMATION.
- FINISH THE ENCLOSURE IN THE CHOSEN MATERIAL ENSURING PANELS ARE PUSHED UP-TO THE EDGE FRAME LEAVING THE EDGE RETURNS VISIBLE.
- ENSURE THAT CURTAINS, FURNISHINGS AND COMBUSTIBLE MATERIALS ARE NOT POSITIONED CLOSER THAN 1 METRE TO THE HEATER AS THIS COULD CREATE A POTENTIAL FIRE HAZARD.
- IF YOUR APPLIANCE IS NOT LEVEL WHEN INSTALLED THE GLASS CORNER FIT WILL BE MISALIGNED.

10. SETTING THE FUEL BED

- INCLUSIONS:
CERAMIC LOG SETS AND LED LOGS SETS
BLACK VERMICULITE
AMBER CRYSTALS
BLACK CRYSTALS
COALS CHIP
- CAUTION LOG SETS ARE DELICATE. TAKE CARE WHEN HANDLING.
- STEP 1: PLUG IN THE LED LOGS AS SHOWN
- STEP 2: SPREAD AMBER CRYSTALS ON FUEL BED
- STEP 3: SPREAD VERMICULITES (WHITE & BLACK) EVENLY ACROSS THE FUEL BED SURFACE.
- STEP 4: POSITION CERAMIC LOG AS PER THE DIAGRAM AS SHOWN BELOW. RANDOMLY STACK AND OVERLAY LOGS AGAINST EACH OTHER.
- STEP 5: DISTRIBUTE THE BLACK CRYSTALS EVENLY ACROSS THE FUEL BED.
- STEP 6: DISTRIBUTE THE COALS CHIPS EVENLY ACROSS THE FUEL BED.

PLUG IN THE LED LOGS AS SHOWN BELOW

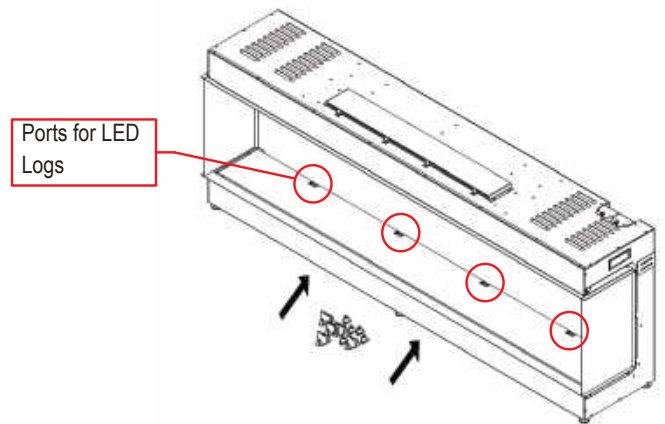

SCAN THE QR CODE

LOG ARRANGEMENTS FOR ILEKTRO UNITS



WLS - 1650L LOG ARRANGEMENTS



HOW TO INSTALL YOUR APPLIANCE

11. ELECTRICAL CONNECTION


WARNING

ENSURE THE APPLIANCE IS FULLY ASSEMBLED AND THE FRONT GLASS WITH TRIM IS BACK IN THE APPLIANCE BEFORE THE APPLIANCE IS CONNECTED TO MAINS POWER

CONNECTING TO MAINS SUPPLY

- CHECK WHETHER THE MAINS SUPPLY CAN ACCOMMODATE THE ADDITIONAL LOAD OF 1000 OR 2000 WATT

- CONNECT THE POWER CABLE TO AN EARTHED SOCKET
- ONLY USE THE POWER CABLE PROVIDED WITH YOUR APPLIANCE AS IT WILL BE CORRECT FOR YOUR REGION

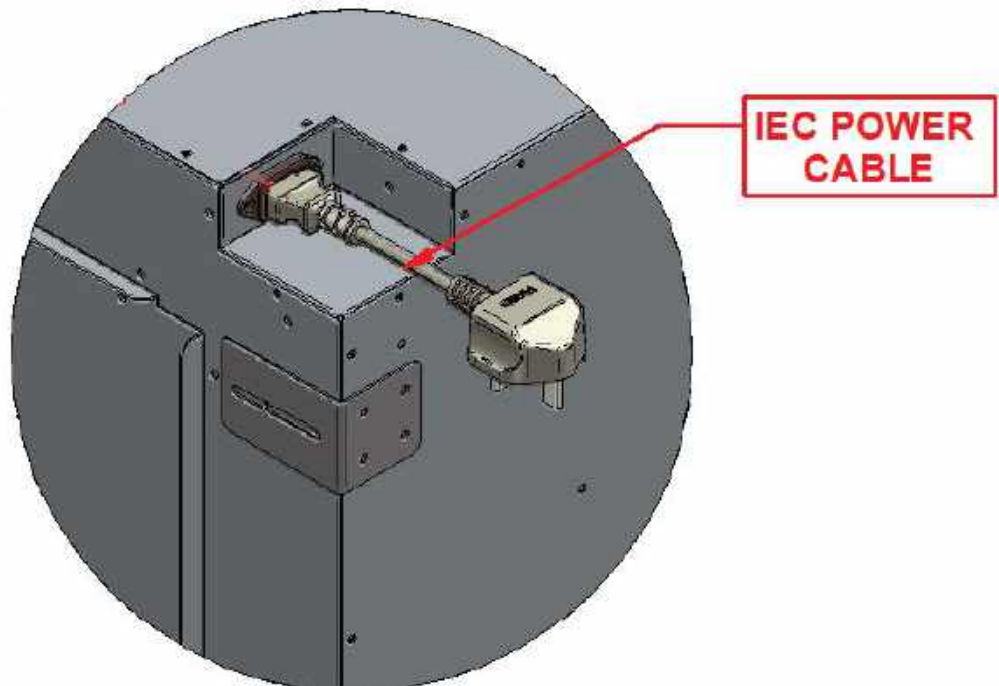

SERVICING INSTRUCTIONS

12. GENERAL INFORMATION

THIS APPLIANCE MUST ONLY BE SERVICED BY A SUITABLY QUALIFIED PERSON.

BEFORE UNDERTAKING ANY WORK ON THE APPLIANCE: SWITCH OFF THE APPLIANCE FROM THE ISOLATION SWITCH.

WAIT FOR AT LEAST 10 MINUTES UNTIL THE APPLIANCE HAS COOLED DOWN.

REMOTE HANDSET BATTERY REPLACEMENT
THE REMOTE-CONTROL HANDSET, USES 2 X AAA BATTERIES FOR POWER OPERATION, THESE WILL NEED REPLACING OVER A PERIOD OF TIME.

FOR REPLACEMENT:

- OPEN THE BATTERY COMPARTMENT COVER ON THE REAR OF THE HANDSET.
- REMOVE THE OLD BATTERIES AND REPLACE OBSERVING THE CORRECT POLARITY (+ & -) AS MARKED UPON THE BATTERIES AND
- HANDSET REMOTE CONTROL. REPLACE THE HANDSET COVER.

MAINTENANCE OF MOTORS

THE MOTORS USED ON THE FAN AND FLAME EFFECT ARE PRE-LUBRICATED FOR EXTENDED BEARING LIFE AND REQUIRE NO FURTHER LUBRICATION. HOWEVER, PERIODIC CLEANING/ VACUUM OF THE FAN/HEATER UNIT IS RECOMMENDED.

RESETTING THE THERMAL CUT OUT SWITCH

THE APPLIANCE IS FITTED WITH AN ELECTRONIC SAFETY CONTROL (E.S.). THIS IS A SAFETY DEVICE WHICH SWITCHES OFF THE HEAT ONLY IF, THE APPLIANCE OVERHEATS FOR ANY REASON
E.G. WHEN COVERED.

IF THE HEATER STOPS OPERATING WHILST THE FLAME EFFECT CONTINUES NORMALLY, THIS INDICATES THAT THE E.S. CONTROL IS IN OPERATION.

THE E.S. CONTROL CAN ONLY BE RE-SET AFTER THE APPLIANCE HAS COOLED DOWN.

TO RE-SET THE E.S:

- SWITCH OFF THE APPLIANCE (ISOLATION SWITCH) AND LEAVE FOR UP TO 2 HOURS.
- REMOVE ANY OBSTRUCTION TO THE FAN HEATER OUTLET OR OTHER INTERNAL PARTS.
- SWITCH ON APPLIANCE AND THE E.S. CONTROL WILL RE-SET.
- ENSURE THAT THE APPLIANCE IS FUNCTIONING CORRECTLY. IF THE E.S. CONTROL OPERATES AGAIN, THE APPLIANCE SHOULD BE CHECKED BY A COMPETENT ELECTRICIAN.

IF THE POWER SUPPLY IS INTERRUPTED (POWER FAILURE) OR THE APPLIANCE IS TURNED OFF AT THE ISOLATION SWITCH WHILST THE HEATER IS ON, IT WILL BE NECESSARY TO DISCONNECT THE APPLIANCE FROM THE MAINS SUPPLY AND LEAVE FOR 5 MINUTES IN ORDER TO DISCHARGE THE ELECTRONICS BEFORE ATTEMPTING TO TURN THE APPLIANCE ON.

SERVICING INSTRUCTIONS

13. FAULT FINDING

OPERATE APPLIANCE BEFORE COMMISSIONING

1. CLICK ON THE REMOTE HANDSET POWER BUTTON. IF THE APPLIANCE DOES NOT FUNCTION, THEN, FOLLOW POINTS 1, 2, 3, 4 AND 5 RESPECTIVELY.
2. CHECK THE POWER CONNECTION AT THE ISOLATION SWITCH IS IN THE ON POSITION.
3. CHECK THE ISOLATION SWITCH ON THE APPLIANCE (SEE STICKER ON THE APPLIANCE). THE SWITCH MUST BE SET TO THE "I" POSITION
4. CHECK THE BATTERIES IN YOUR HANDSET. CHECK IF THE BATTERIES ARE IN THE CORRECT POSITION AND REFIT IF NECESSARY.
5. IF AFTER CHECKING 1, 2, 3 & 4 NOTHING STILL HAS HAPPENED, THEN DISCONNECT THE POWER FROM THE MAINS (UNPLUG FROM SOCKET), AND WAIT FOR 60 SECONDS, THEN PLUG IT BACK IN AND REPEAT STEPS 1 TO 4. IF YOU DO NOT HAVE ACCESS TO THE MAINS SWITCH, BECAUSE IT IS BUILT-IN, THEN SWITCH OFF THE UNIT FROM ISOLATION SWITCH.

FAULT: THE HEATING DOES NOT TURN-ON WHEN YOU SELECT HEATING MODE BUT THE FLAME EFFECT IS RUNNING.

A) CHECK THE BATTERIES IN YOUR HAND SET. THE RED LED MUST BE SHOWING BRIGHTLY.

B) TRY SELECTING HEATING MODE AGAIN, BUT CLOSER TO THE APPLIANCE.

C). TURN OFF APPLIANCE, THEN TURN IT ON AGAIN. WAIT FOR 10 SECONDS, THEN SELECT HEATING MODE AGAIN.

SERVICING INSTRUCTIONS

14. SERVICING REQUIREMENTS

TO SERVICE THE APPLIANCE PLEASE FOLLOW THE STEPS AS DETAILED:

1. TURN ON THE FLAME EFFECT.
BUTTON (B)
B3. IF APPLIANCE DOES NOT WORK, THEN FOLLOW THE FAULT FINDING GUIDE.
2. CYCLE ALL BUTTONS
B2 FLAME BRIGHTNESS
B3 COLOUR OF FLAME
B4 BRIGHTNESS OF TOP LIGHT
B5 COLOUR OF TOP LIGHTING
B6 BRIGHTNESS OF FUEL BED
B7 FUEL BED COLOUR
B8 SOUND SETTINGS
B9 SPEED OF FLAME
3. IF STEPS 2 ARE OK, THEN USE YOUR HANDSET TO IF IT WORKS THEN OPERATE HEAT SETTINGS
B10 AT VARIOUS LEVELS H1 AND H2
4. TURN OFF THE SWITCH ON THE FIRE. THE ISOLATION SWITCH ON
5. TURN OFF POWER CONNECTION MAINS SWITCH ON THE WALL TO OFF POSITION. IF YOU DO NOT HAVE ACCESS TO THE MAINS ON/OFF SWITCH, BECAUSE IT IS BUILT-IN, THEN DISCONNECT FROM ISOLATION SWITCH.

ONCE THESE STEPS HAVE BEEN FOLLOWED:

6. CHANGE THE BATTERIES IN THE HANDSET.
7. REMOVE THE TRIMS & GENTLY REMOVE THE GLASS FROM THE FIRE, SEE SECTION 6.
8. GENTLY REMOVE THE EFFECTS SCREEN AND OUTER SCREEN FROM THE FIRE. SEE PAGE 28

1. CLEAN THE EFFECTS SCREEN AND OUTER SCREEN WITH SCREEN CLEANER AND CLOTH.
2. CLEAN THE GLASS WITH GLASS CLEANER AND CLOTH.
3. CONNECT / RESTORE MAINS ELECTRICITY AND ON/OFF SWITCH BACK-TO 1 POSITION.
4. RUN THE FIRE WHILE THE SCREEN AND GLASS UNATTACHED FOLLOWING
5. STEPS 1, 2 AND 3, FOR 5 MINUTES.
6. TURN OFF THE FIRE FROM YOUR HANDSET.
7. ATTACH SCREEN AND THEN ATTACH THE GLASS.
8. FIT THE TRIMS.
9. RUN THE FIRE WHILE THE SCREEN AND GLASS IN PLACE

CLEANING

DO NOT USE WATER, DETERGENTS, ABRASIVE CLEANING POWDERS OR POLISH OF ANY KIND ON THE BODY OF THE APPLIANCE. LIGHTLY DUST USING A DRY DUSTER OR A MEDIUM SOFT BRUSH.
TO CLEAN THE GLASS USE GLASS OR WINDOW CLEANER.

SERVICING INSTRUCTIONS

15. REMOVING THE GLASS

WARNING

BEFORE UNDERTAKING ANY WORK ON THE APPLIANCE: SWITCH OFF THE APPLIANCE AND ISOLATE IT FROM THE MAINS BY UNPLUGGING THE UNIT.

REMOVING THE GLASS SHOULD ONLY BE UNDERTAKEN WHEN ABSOLUTELY NECESSARY.

IF REQUIRED PLEASE CONTACT YOUR DEALER FOR FURTHER SUPPORT.


CAUTION: BROKEN GLASS CAN CAUSE SERIOUS INJURY. TAKE EXTRA CARE WHEN HANDLING THE APPLIANCE WINDOW

GLASS IS NOT UNDER WARRANTY


DO NOT OPERATE THE APPLIANCE WITHOUT THE GLASS WINDOW INSTALLED

STEPS TO REMOVE THE FRONT GLASS

STEP-1 : CAREFULLY REMOVE THE SCREWS FROM THE L BRACKETS THAT SECURES THE GLASS IN POSITION AS SHOWN. USE THE GLASS SUCTION PADS TO SAFELY HOLD THE GLASS IN PLACE.

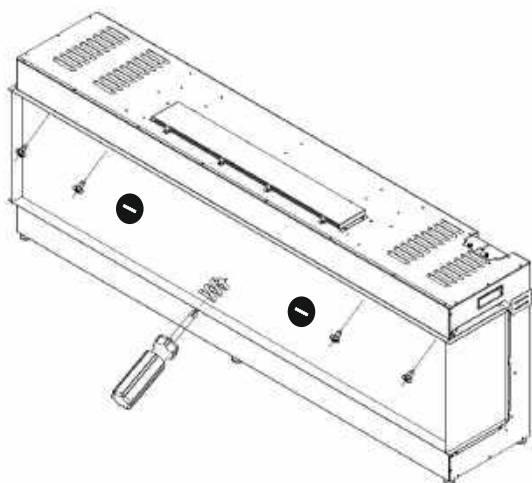


STEP-2 : CAREFULLY USE THE SUCTION PADS TO REMOVE THE GLASS. CONSIDERING THE SIZE AND WEIGHT, LIFT THE GLASS OUT AND PLACE IT IN A CLEAN, SAFE AREA TO AVOID SCRATCHES OR DAMAGE. TWO PEOPLE ARE REQUIRED TO PERFORM THIS TASK.

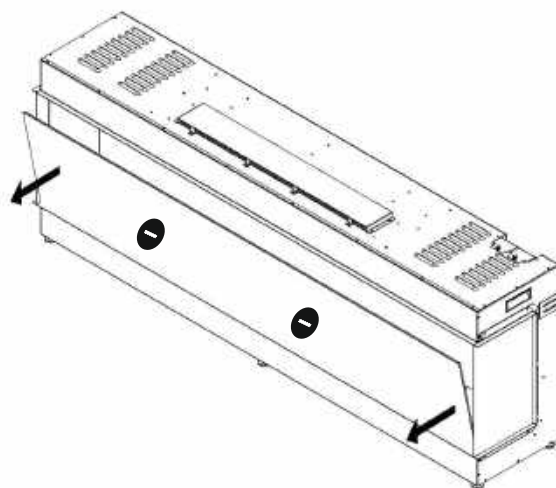



REFERENCE INFORMATION


16. WIRING DIAGRAM

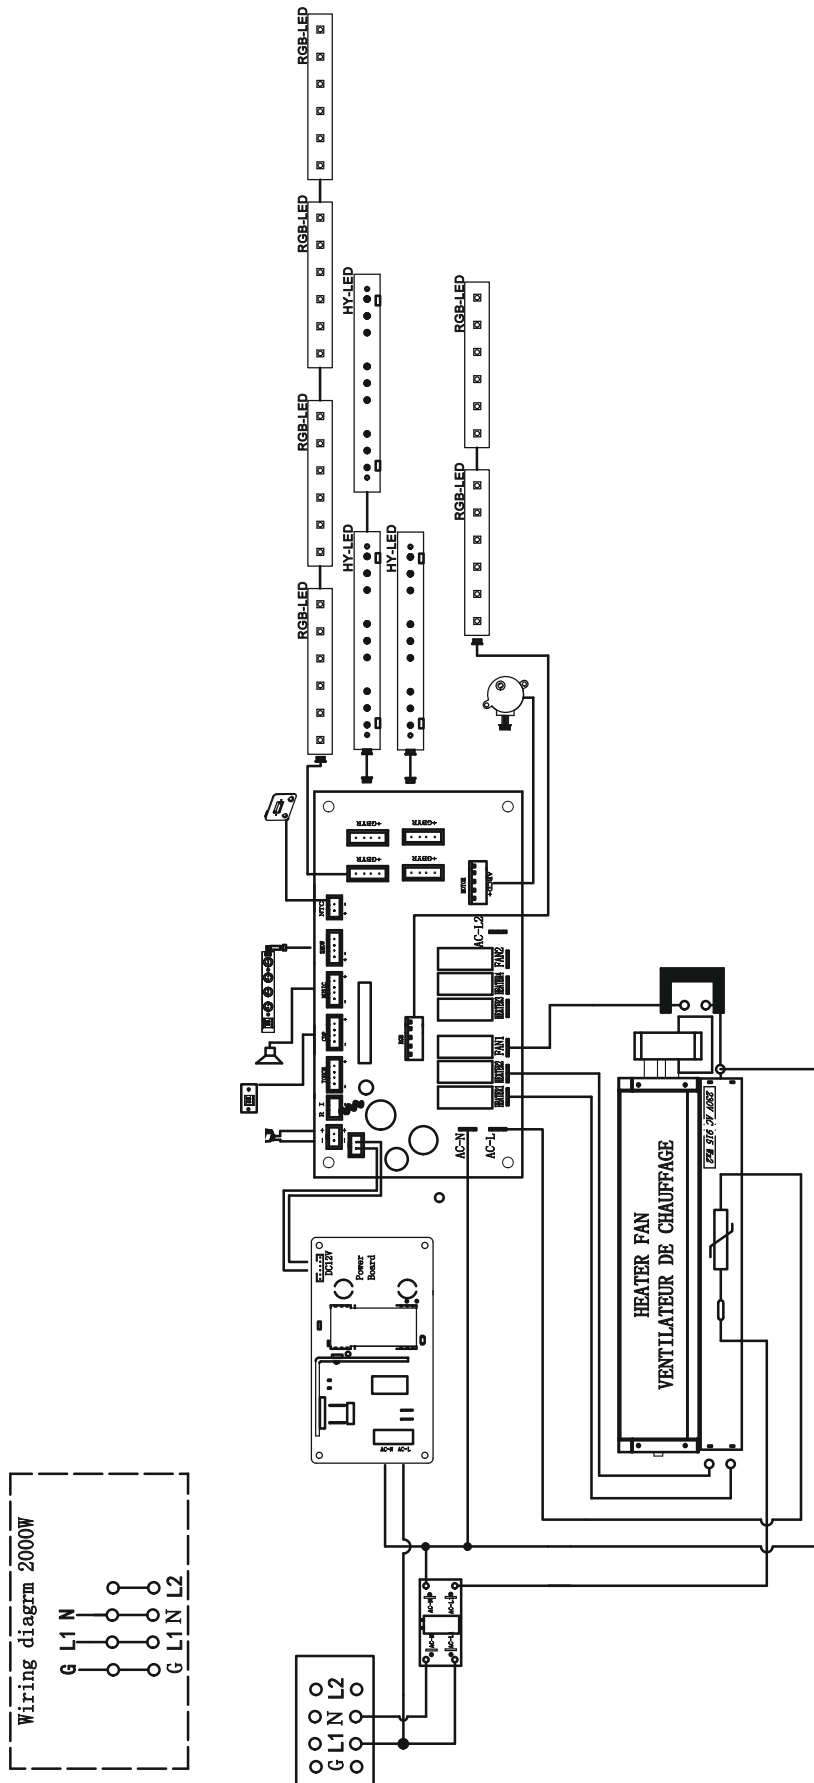

ilektro 1250L

REFERENCE INFORMATION


16. WIRING DIAGRAM

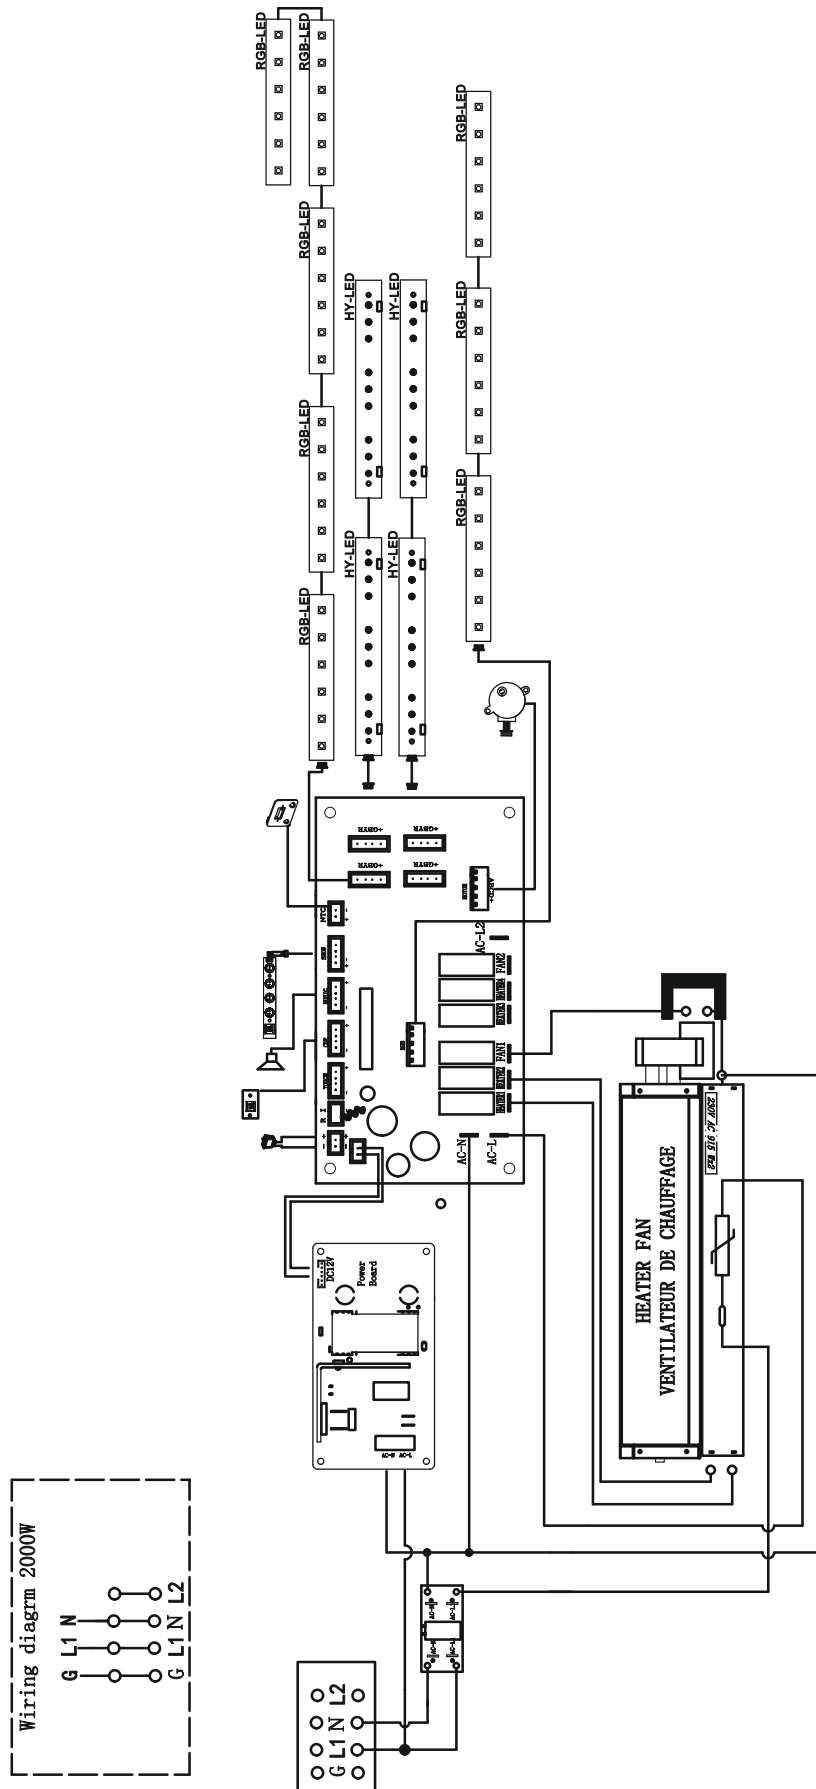

ilektro 1650L

REFERENCE INFORMATION


16. WIRING DIAGRAM

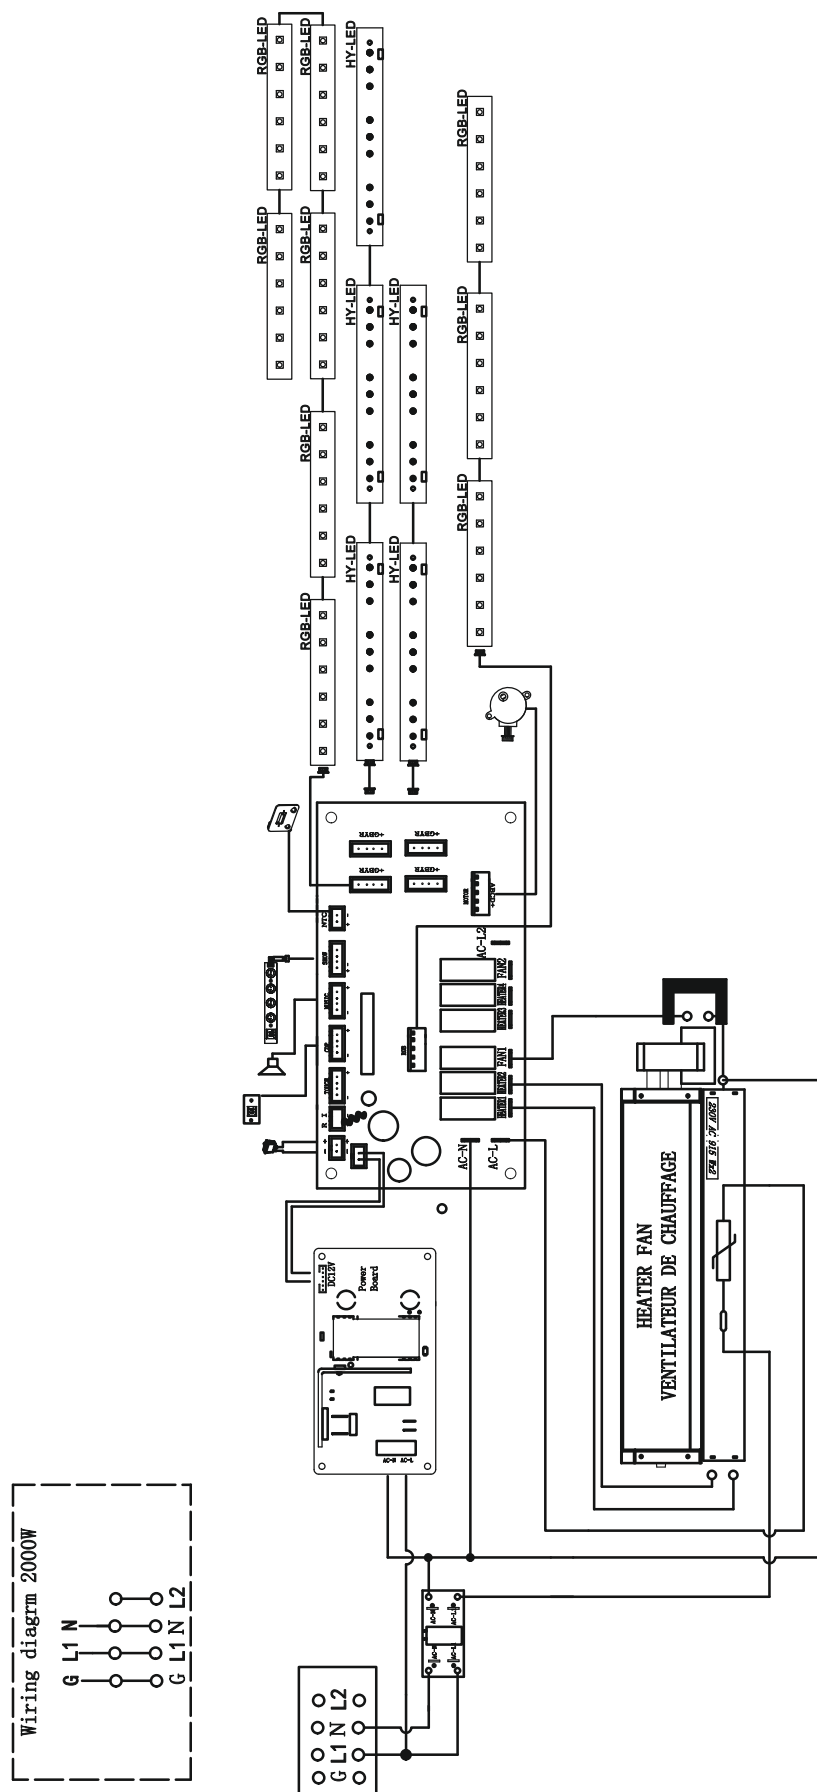

ilektro 2000L


REFERENCE INFORMATION

16. WIRING DIAGRAM

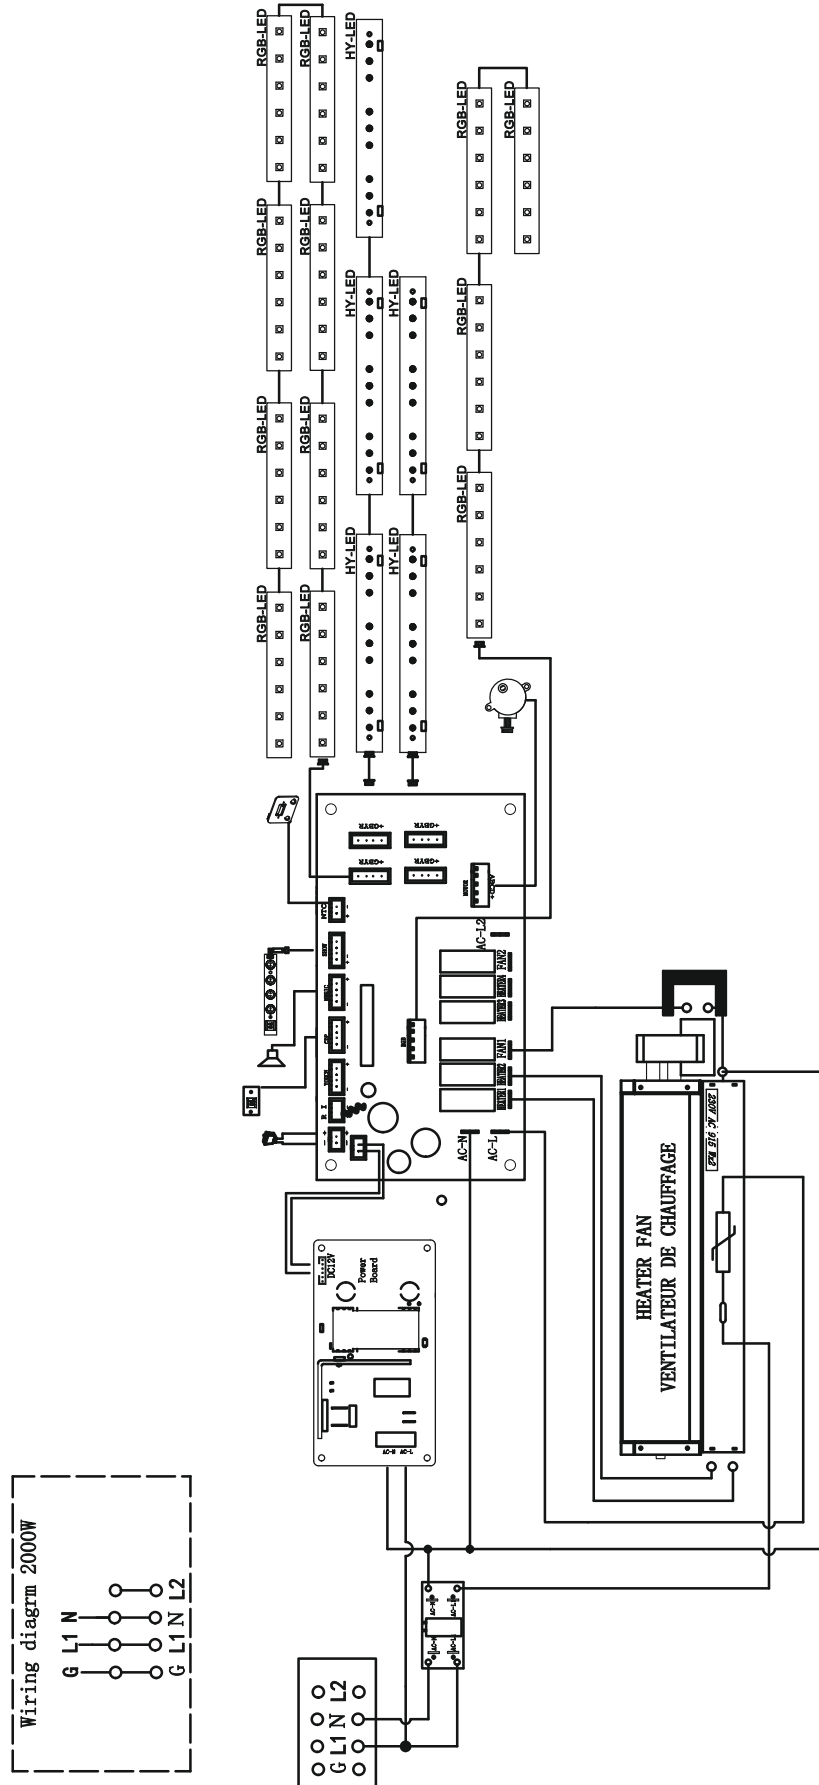

ilektrö 2600L

REFERENCE INFORMATION
17. EXPLODED DIAGRAM

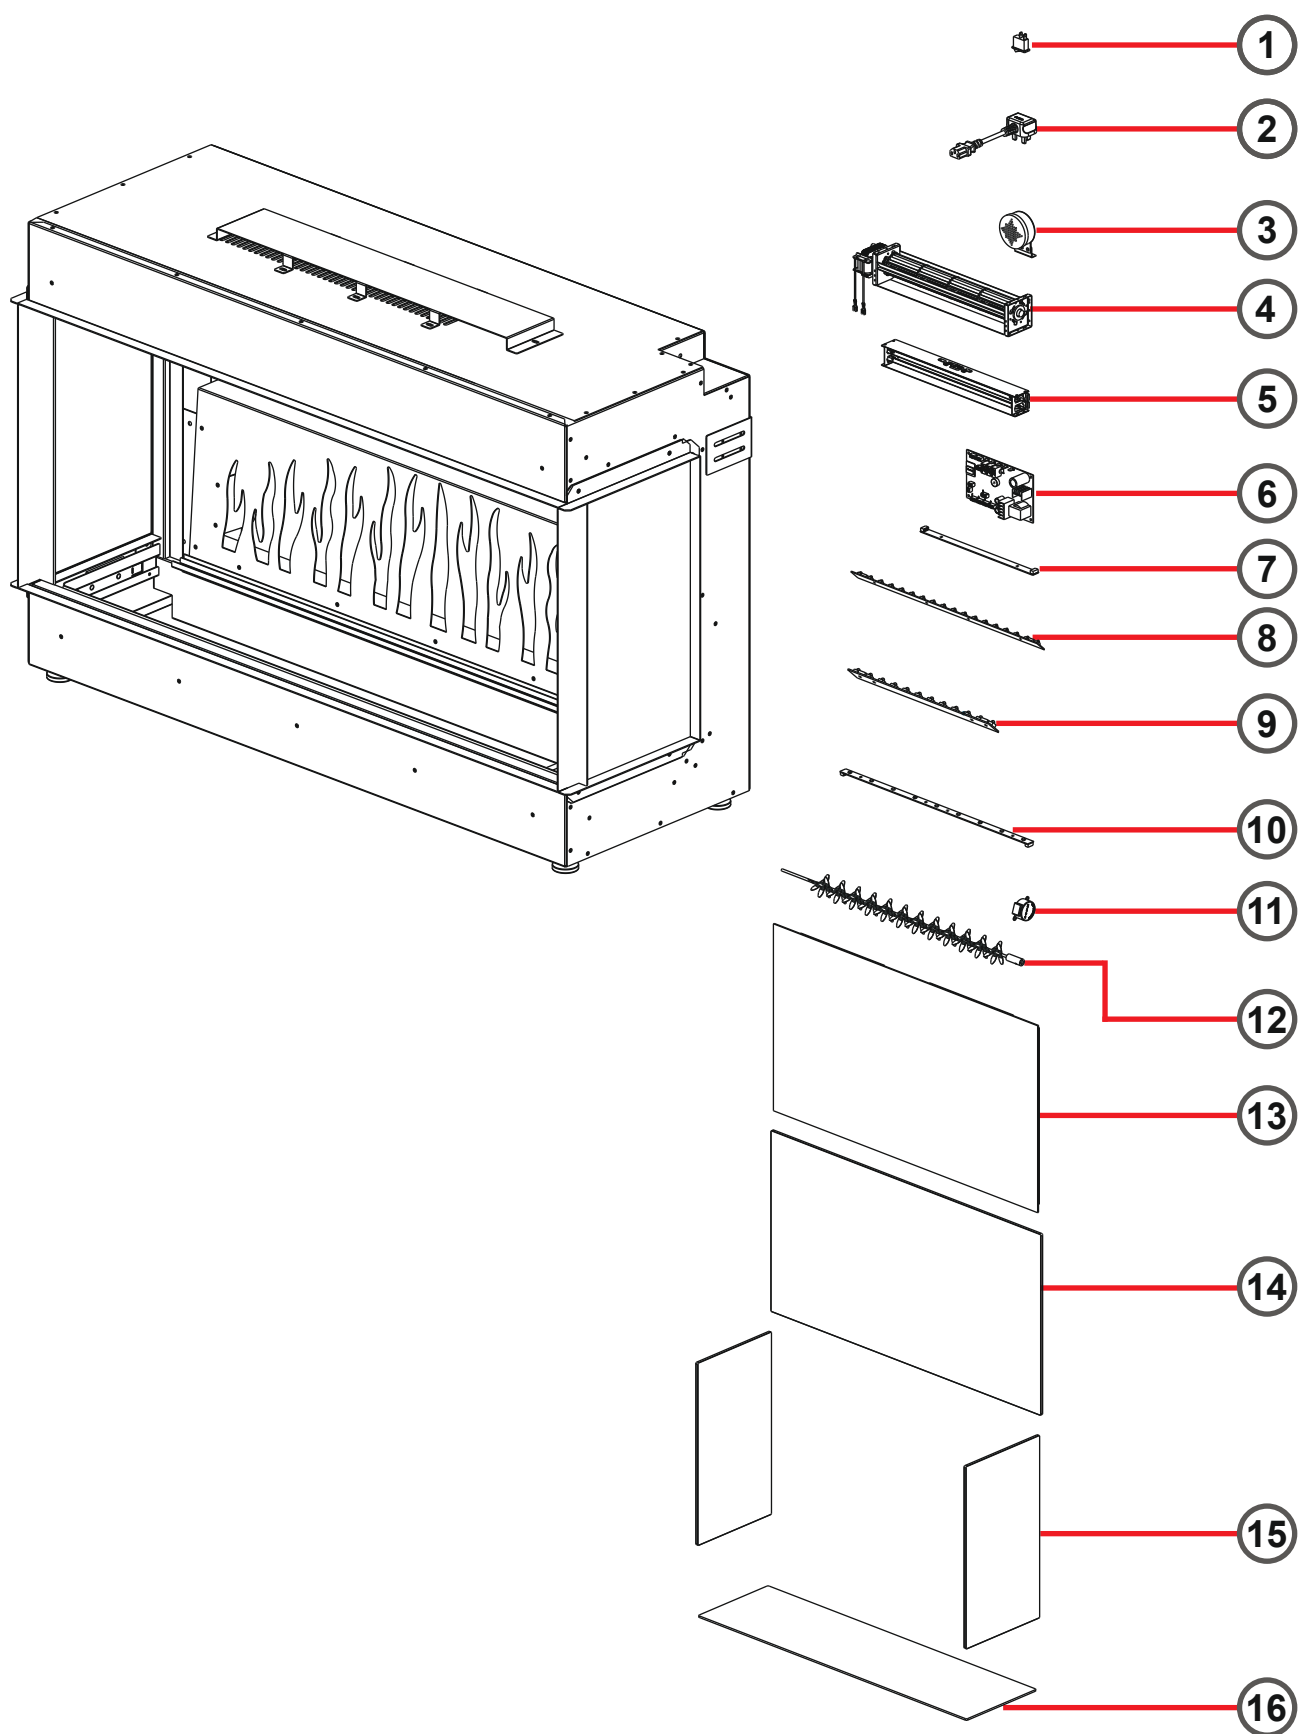

950LAN EXPLODED DIAGRAM


REFERENCE INFORMATION

17. EXPLODED DIAGRAM

Replaceable Parts - 950LAN

No	Description	Part Number	Qty
1	ROCKER SWITCH	4040140007	1
2	POWER PLUG	470000070300-R00	1
3	SPEAKER	4040120592	1
4	FAN	4040010143	1
5	HEATING ELEMENT	4040040146	1
6	MAIN CONTROL BOARD	4040100447	1
7	10 COLOR RGB LED STRIP TOP LIGHT	4040080026	1
8	3 COLOR FLAME LED STRIP (LONG)	4040080206	2
9	3 COLOR FLAME LED STRIP (SHORT)	4040080207	2
10	10 COLOR RGB LED STRIP FUEL BED	4040080083	2
11	SYNCHRONOUS STEPPING MOTOR	4040010139	3
12	FLAME EFFECT ROTTISORRIE	3260168	1
13	DISPLAY BOARD	3320061	1
14	FRONT GLASS	4060011818	1
15	SIDE GLASS	4060011623	2
16	FUEL BED	4010021389	1

REFERENCE INFORMATION
17. EXPLODED DIAGRAM

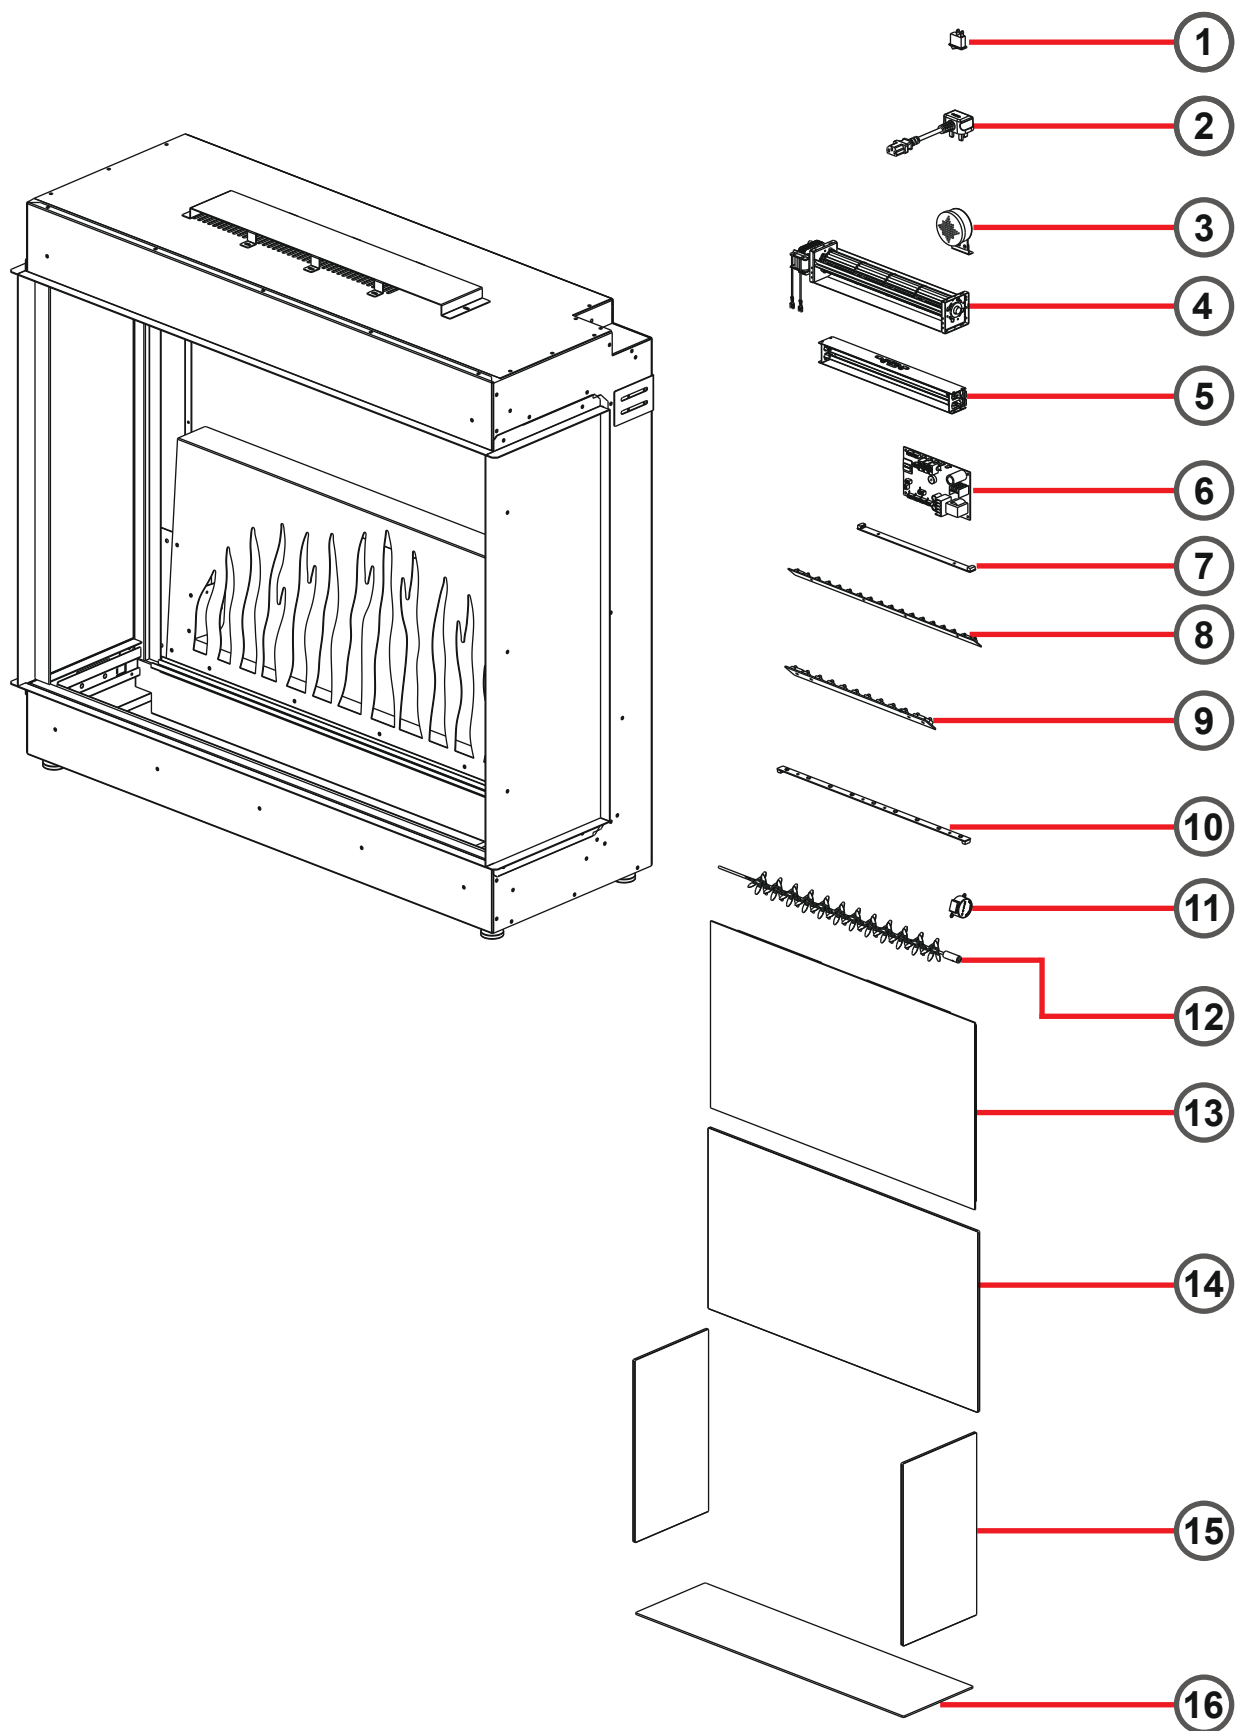

950ASPECT EXPLODED DIAGRAM


REFERENCE INFORMATION

17. EXPLODED DIAGRAM

Replaceable Parts - 950ASPECT

No	Description	Part Number	Qty
1	ROCKER SWITCH	4040140007	1
2	POWER PLUG	470000070300-R00	1
3	SPEAKER	4040120592	1
4	FAN	4040010143	1
5	HEATING ELEMENT	4040040146	1
6	MAIN CONTROL BOARD	4040100447	1
7	10 COLOR RGB LED STRIP TOP LIGHT	4040080026	1
8	3 COLOR FLAME LED STRIP (LONG)	4040080206	2
9	3 COLOR FLAME LED STRIP (SHORT)	4040080207	2
10	10 COLOR RGB LED STRIP FUEL BED	4040080083	2
11	SYNCHRONOUS STEPPING MOTOR	4040010139	3
12	FLAME EFFECT ROTTISORRIE	3260168	1
13	DISPLAY BOARD	3320061	1
14	FRONT GLASS	4060011813	1
15	SIDE GLASS	4060011682	2
16	FUEL BED	4010021385	1

REFERENCE INFORMATION
17. EXPLODED DIAGRAM

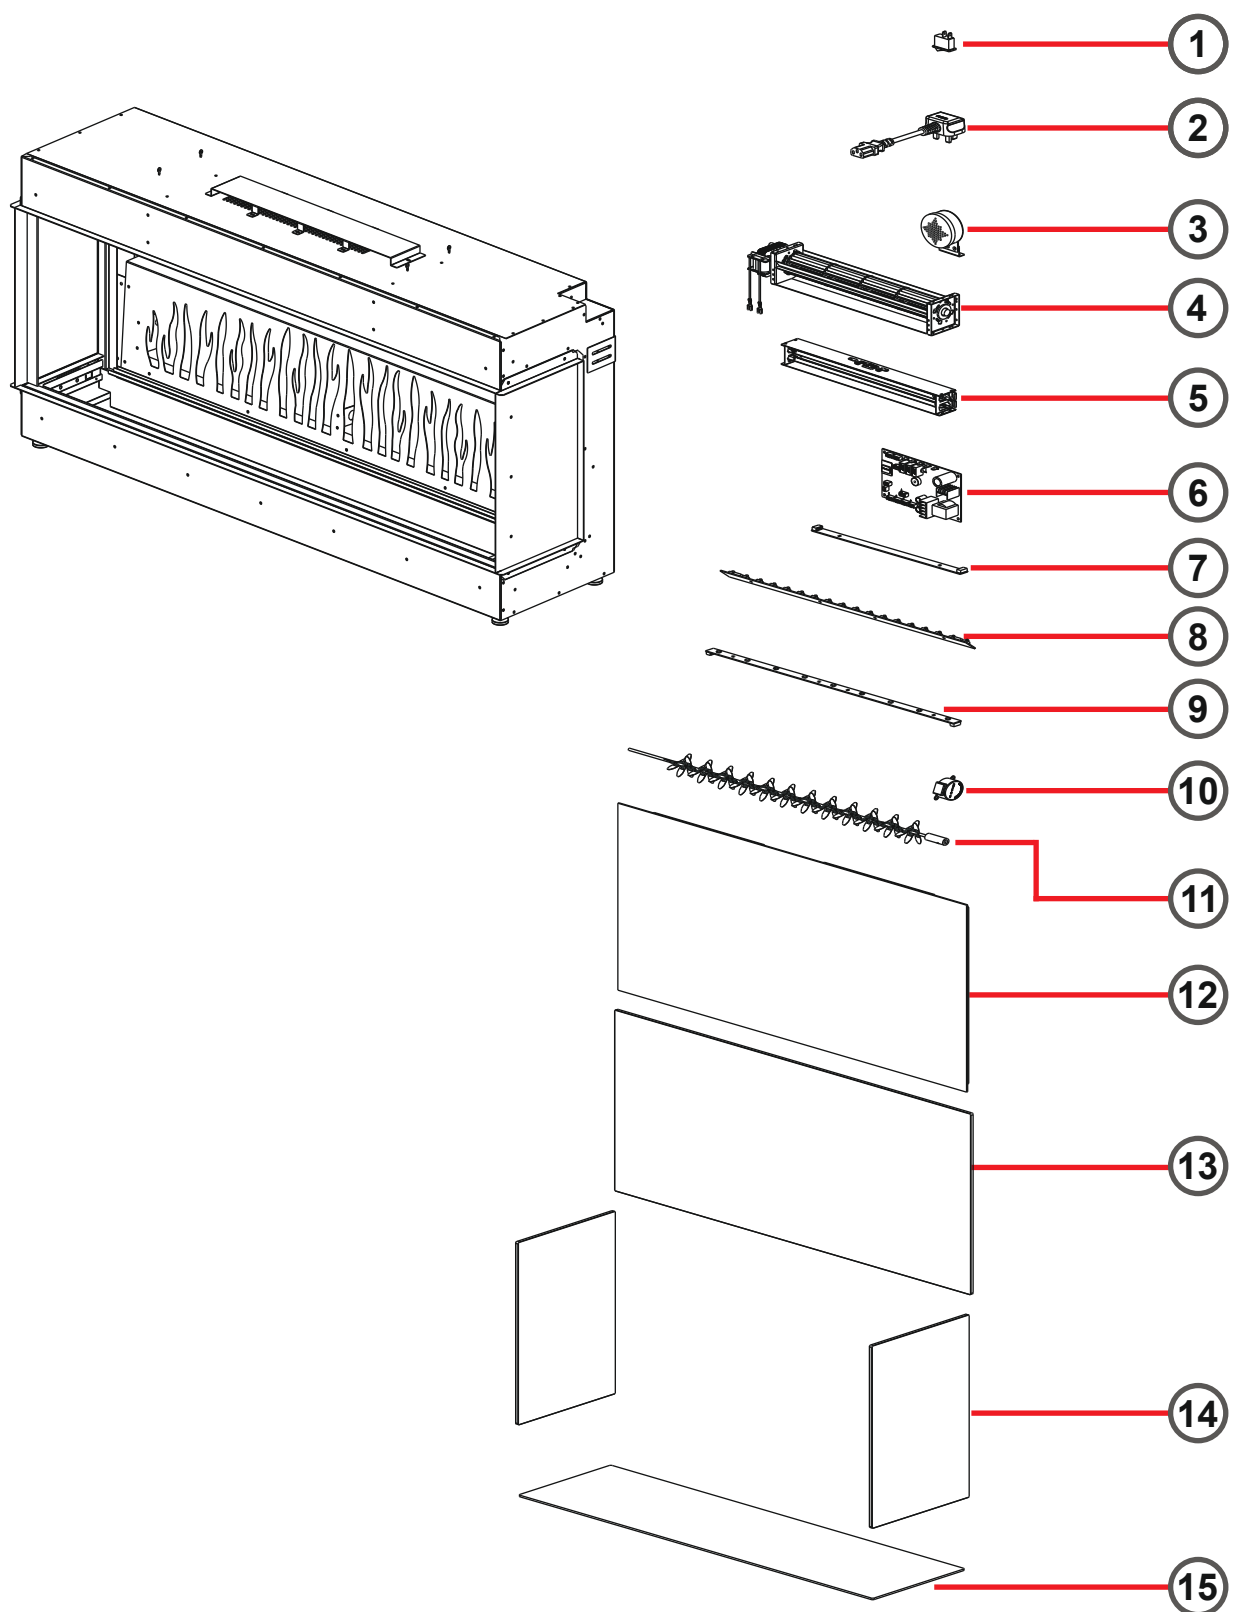

1250LAN EXPLODED DIAGRAM


REFERENCE INFORMATION

17. EXPLODED DIAGRAM

Replaceable Parts - 1250LAN

No	Description	Part Number	Qty
1	ROCKER SWITCH	4040140007	1
2	POWER PLUG	470000070300-R00	1
3	SPEAKER	4040120592	1
4	FAN	4040010143	2
5	HEATING ELEMENT	4040040146	2
6	MAIN CONTROL BOARD	4040100447	1
7	10 COLOR RGB LED STRIP TOP LIGHT	4040080026	2
8	3 COLOR FLAME LED STRIP (LONG)	4040080206	3
9	3 COLOR FLAME LED STRIP (SHORT)	4040080207	3
10	10 COLOR RGB LED STRIP FUEL BED	4040080083	4
11	SYNCHRONOUS STEPPING MOTOR	4040010139	3
12	FLAME EFFECT ROTTISORRIE	3260168	1
13	DISPLAY BOARD	3320061	1
14	FRONT GLASS	4060011623	1
15	SIDE GLASS	4060011623	2
16	FUEL BED	4010021378	1

REFERENCE INFORMATION
17. EXPLODED DIAGRAM

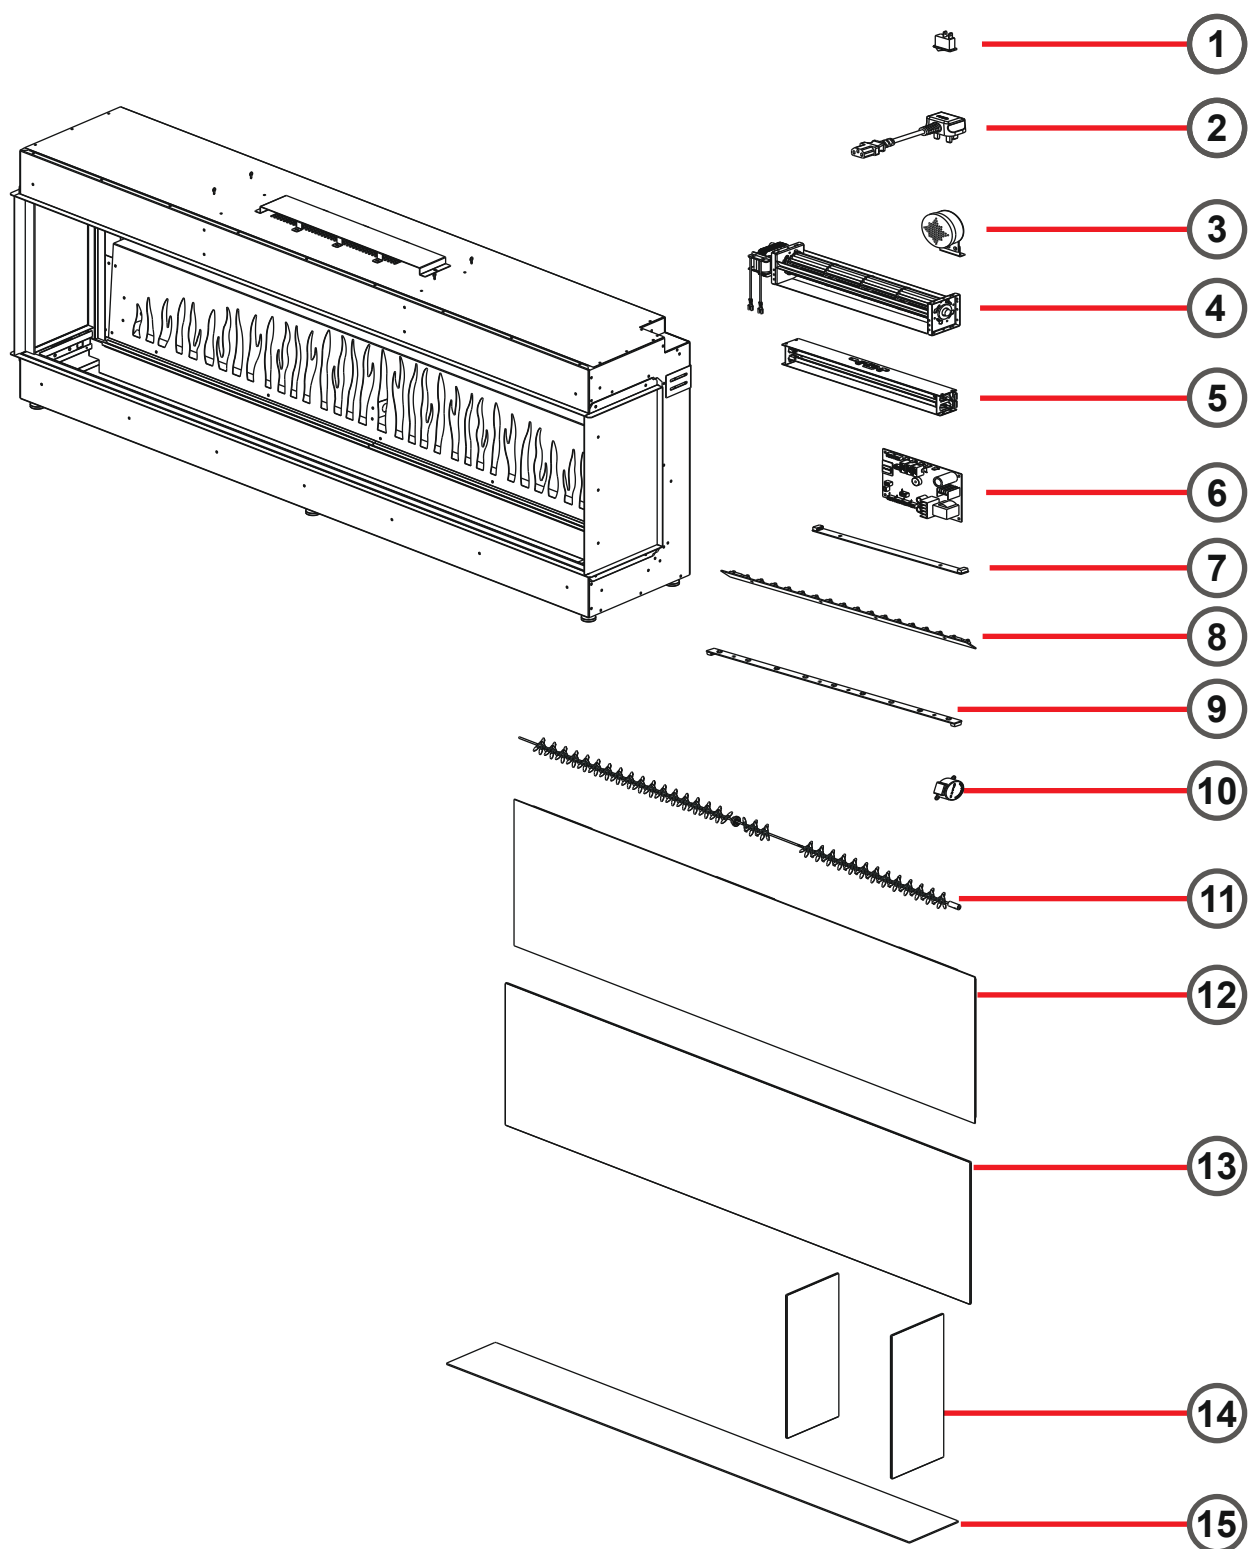

1650LAN EXPLODED DIAGRAM

REFERENCE INFORMATION

17. EXPLODED DIAGRAM

Replaceable Parts - 1650LAN

No	Description	Part Number	Qty
1	ROCKER SWITCH	4040140007	1
2	POWER PLUG	470000070300-R00	1
3	SPEAKER	4040120592	1
4	FAN	4040010143	2
5	HEATING ELEMENT	4040040146	2
6	MAIN CONTROL BOARD	4040100447	1
7	10 COLOR RGB LED STRIP TOP LIGHT	4040080026	3
8	3 COLOR FLAME LED STRIP (LONG)	4040080206	4
9	3 COLOR FLAME LED STRIP (SHORT)	4040080207	4
10	10 COLOR RGB LED STRIP FUEL BED	4040080083	5
11	SYNCHRONOUS STEPPING MOTOR	4040010139	3
12	FLAME EFFECT ROTTISORRIE	3260168	1
13	DISPLAY BOARD	3320061	1
14	FRONT GLASS	4060011622	1
15	SIDE GLASS	4060011623	2
16	FUEL BED	4010021318	1




REFERENCE INFORMATION

17. EXPLODED DIAGRAM

Replaceable Parts - 2000LAN

No	Description	Part Number	Qty
1	ROCKER SWITCH	4040140007	1
2	POWER PLUG	470000070300-R00	1
3	SPEAKER	4040120592	1
4	FAN	4040010143	2
5	HEATING ELEMENT	4040040146	2
6	MAIN CONTROL BOARD	4040100447	1
7	10 COLOR RGB LED STRIP TOP LIGHT	4040080026	3
8	3 COLOR FLAME LED STRIP (LONG)	4040080206	5
9	3 COLOR FLAME LED STRIP (SHORT)	4040080207	5
10	10 COLOR RGB LED STRIP FUEL BED	4040080083	6
11	SYNCHRONOUS STEPPING MOTOR	4040010139	3
12	FLAME EFFECT ROTTISORRIE	3260168	1
13	DISPLAY BOARD	3320061	1
14	FRONT GLASS	4060011677	1
15	SIDE GLASS	4060011623	2
16	FUEL BED	4010021380	1

REFERENCE INFORMATION
17. EXPLODED DIAGRAM

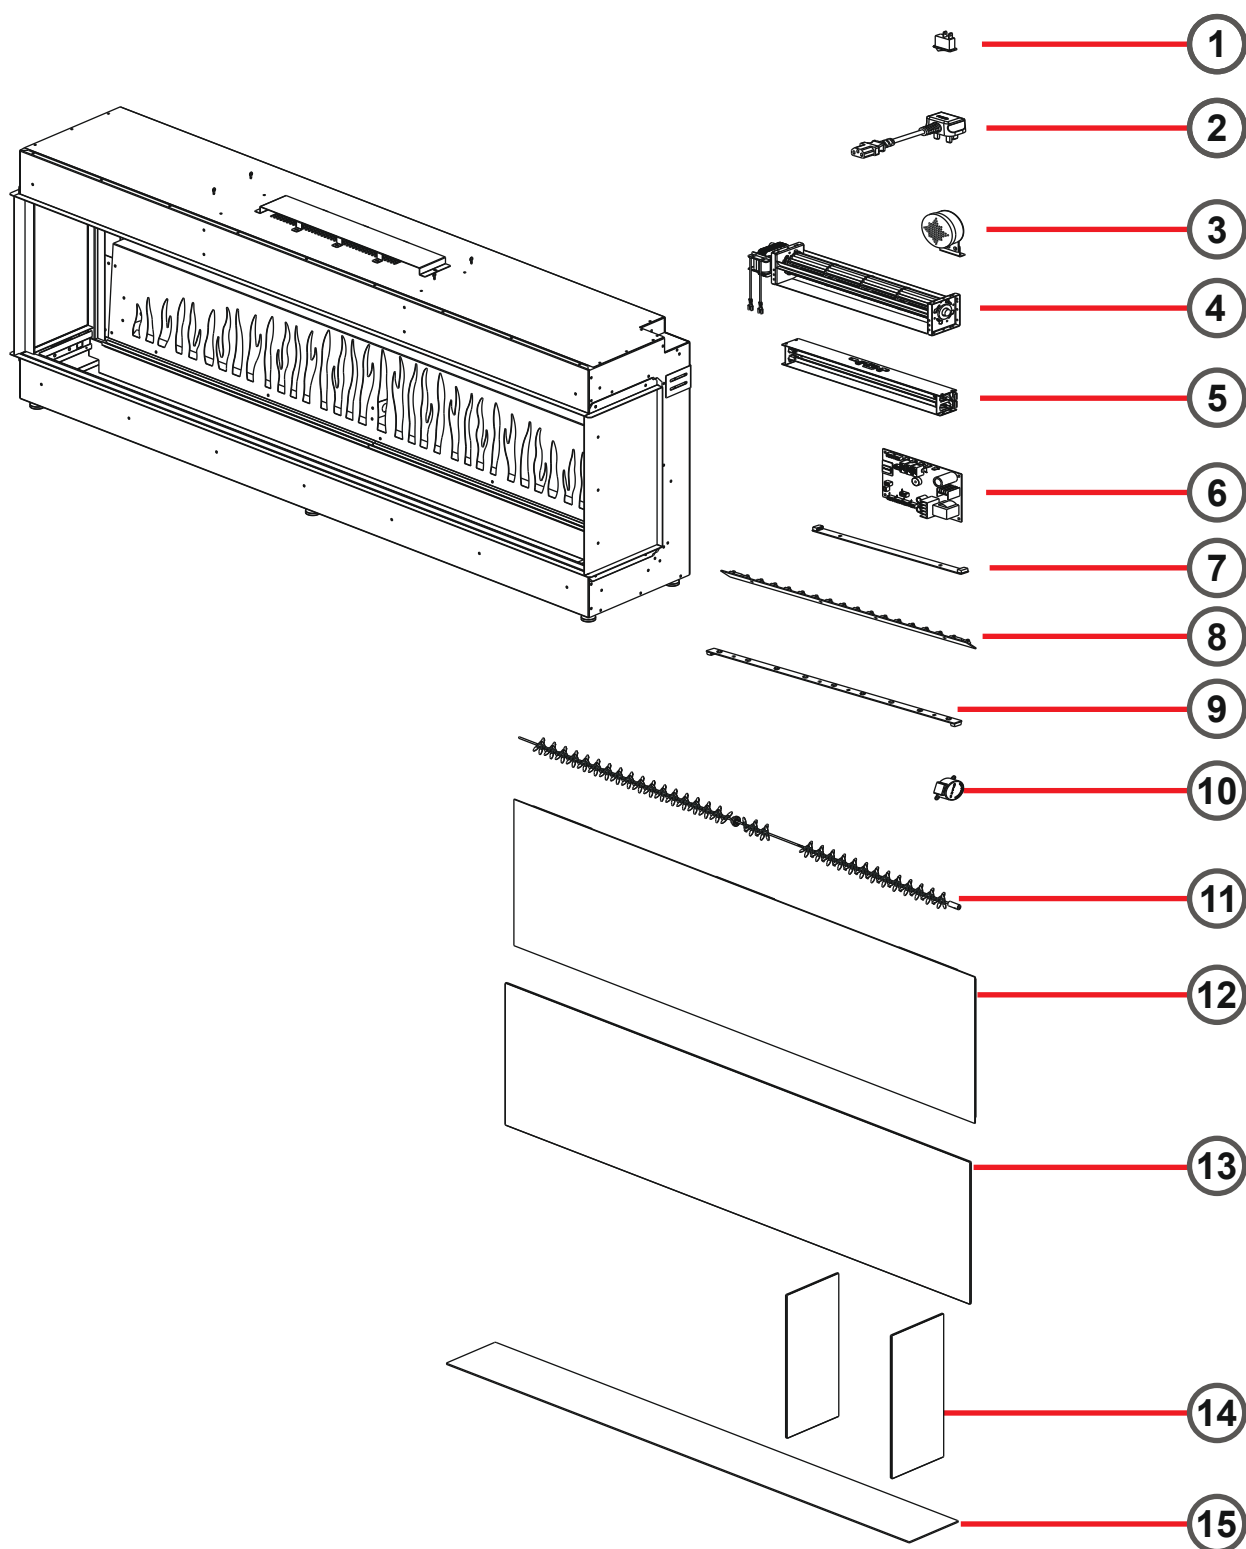

2600LAN EXPLODED DIAGRAM

REFERENCE INFORMATION

17. EXPLODED DIAGRAM

Replaceable Parts - 2600LAN

No	Description	Part Number	Qty
1	ROCKER SWITCH	4040140007	1
2	POWER PLUG	470000070300-R00	1
3	SPEAKER	4040120592	1
4	FAN	4040010143	2
5	HEATING ELEMENT	4040040146	2
6	MAIN CONTROL BOARD	4040100447	1
7	10 COLOR RGB LED STRIP TOP LIGHT	4040080026	4
8	3 COLOR FLAME LED STRIP (LONG)	4040080206	6
9	3 COLOR FLAME LED STRIP (SHORT)	4040080207	6
10	10 COLOR RGB LED STRIP FUEL BED	4040080083	8
11	SYNCHRONOUS STEPPING MOTOR	4040010139	3
12	FLAME EFFECT ROTTISORRIE	3260168	1
13	DISPLAY BOARD	3320061	1
14	FRONT GLASS	4060011679	1
15	SIDE GLASS	4060011623	2
16	FUEL BED	4010021383	1

ilektro

148 Cochranes Road
Moorabbin, Victoria 3189

www.paulagnewdesigns.com.au

info@paulagnewdesigns.com.au