
HORIZON
FIREPLACES

ELECTRIC FIREPLACE

MODEL: Horizon 743 Versatile

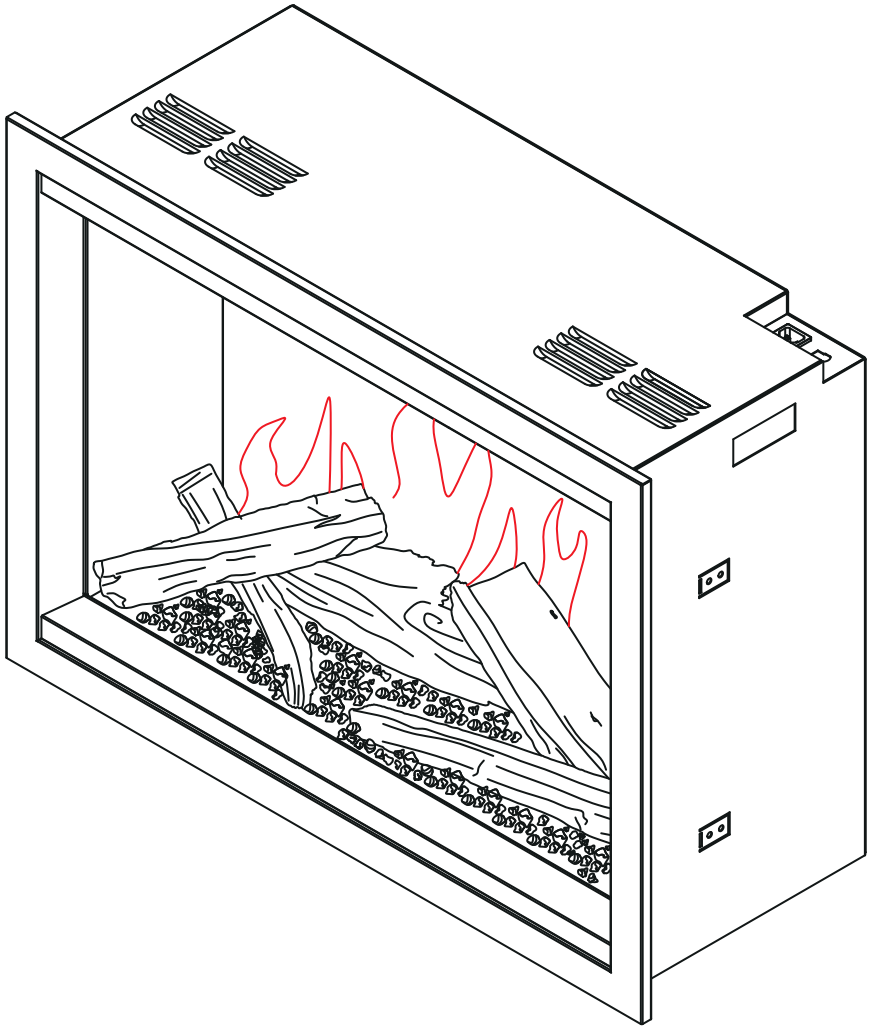

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE INSTALLING AND USING APPLIANCE.

SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE.

CONTENTS

1. Important Safety Information..... 1

2. Technical Specifications..... 3

3. Before Installation..... 4

4. Installation Instructions..... 6

5. Operation Instructions..... 20

5a. Manual Control Panel..... 21

5b. Remote Control..... 23

5c. App Control..... 25

5d. Voice Control..... 25

6. Maintenance..... 28

7. Disposal..... 28

8. Spare Part List..... 29

9. Warranty..... 31

1. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- **Read all of the instructions before using this appliance.**
- **For indoor use only.** This appliance is not suitable for use outside the house and only suitable for well insulated spaces or occasional use.
- **DO NOT** use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- This fire **must not** be located immediately below or in front of a socket outlet.
- This appliance **must be earthed.**
- This appliance **must not** be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility in order to avoid a hazard due to the inadvertent resetting of the thermal cut out.
- If the power cord is damaged, it must be repaired by the manufacturer, its authorized service centre or professional person.
-  The figure in the marking is **“DO NOT COVER”.**
- **WARNING!** In order to avoid overheating, **do not** allow the appliance to be covered or let the air inlet/outlet become obstructed.
- **WARNING!** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 meter from the air outlet.
- Keep the power cord away from hot surfaces and hot conditions. **DO NOT** route the power lead in front of the appliance.
- **DO NOT** use this fire in rooms that have explosive fumes in them (for example petrol), or if you are using solvents, glue, aerosol spray or flammable paints, as these may catch fire.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Caution:** some part of this appliance can become very hot and cause burns. **Particular attention** has to be given where children and vulnerable people are present.
- Children and vulnerable people must be supervised at all times when using this appliance, as some parts can become very hot and cause burns.
- Children aged between 3 and 8 years old should only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and instructions and supervision concerning the safe usage of the appliance are given.
- Cleaning and user maintenance **shall not** be made by children without supervision.
- This appliance **shall not** be played with by children.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **WARNING: Do not** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Keep the power plug accessible after installation.
- **DO NOT** use if there are visible signs of damaged to the appliance.
- **DO NOT** use this heater if it has been dropped.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

SAVE THESE INSTRUCTIONS.

2. TECHNICAL SPECIFICATIONS

Model No.: Horizon 743 Versatile


Supply Voltage: AC 230-240 V, 50 Hz

Maximum Power Consumption: 1830-2000 W

Power For FIame and Fuel Bed Effect: 24.6 W


Dimensions

- **With Slide in Trim**

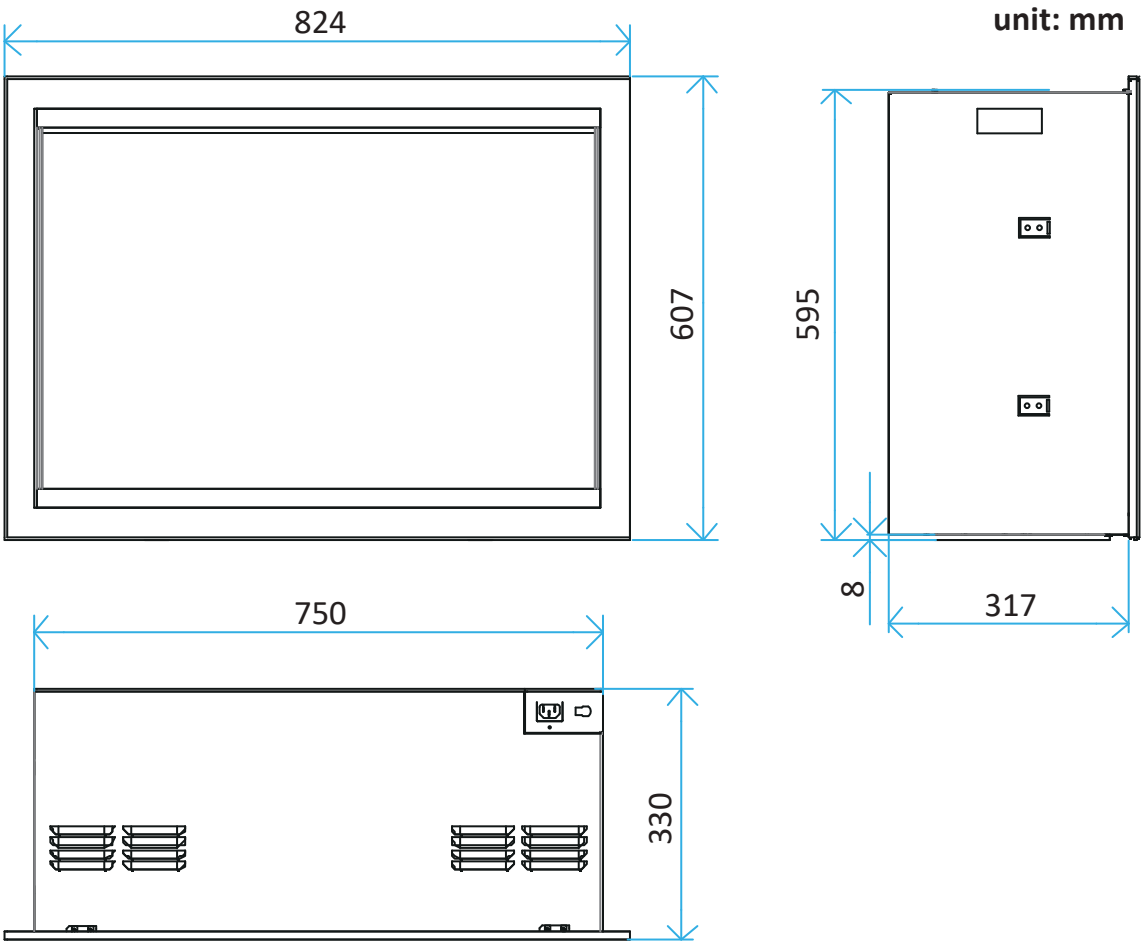














- **With Built in Trim**


unit: mm

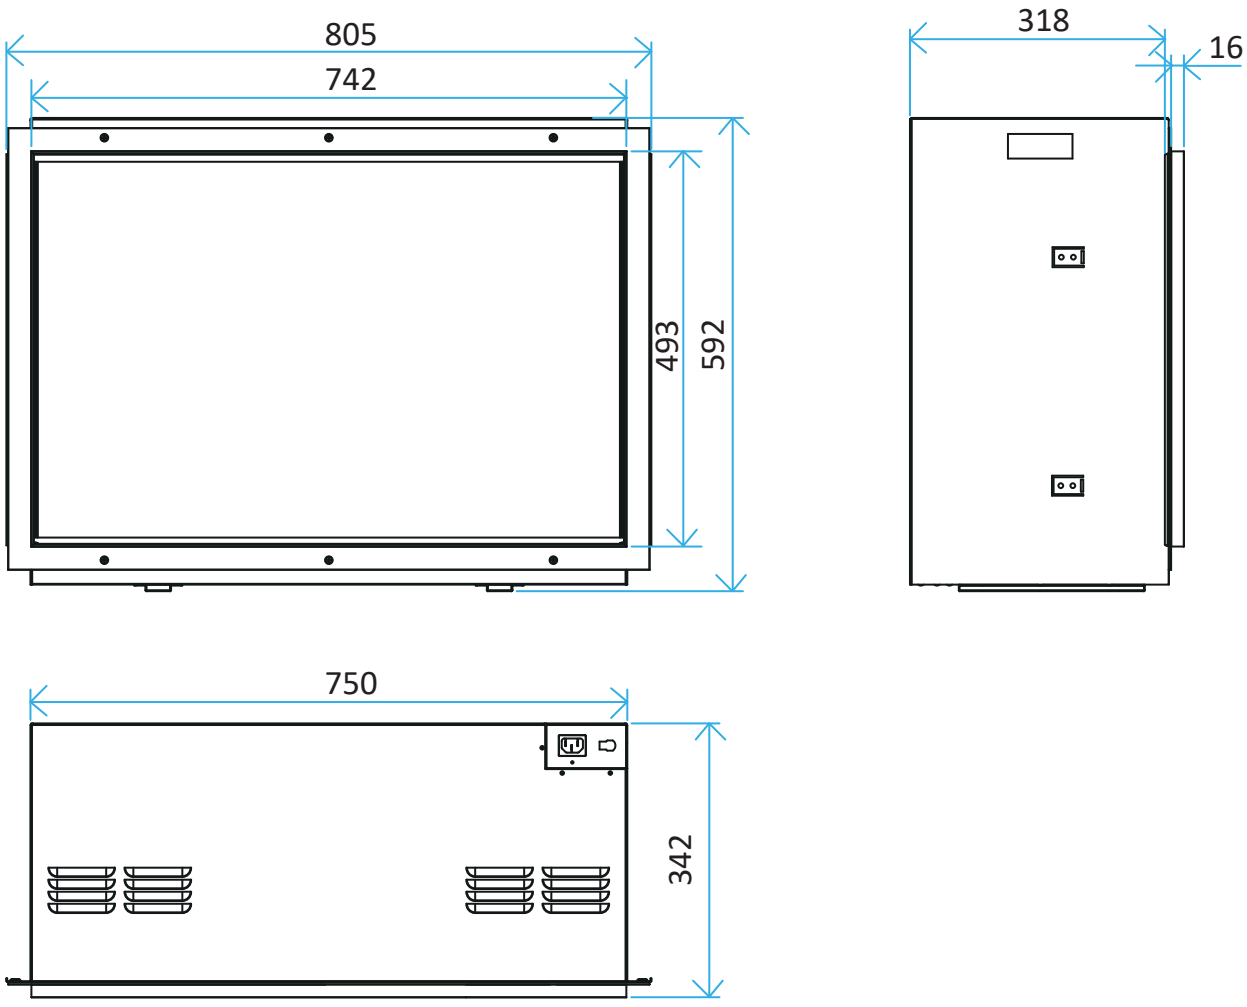

3. BEFORE INSTALLATION

- Unpack the fireplace carefully, make sure that the appliance is intact with no signs of damage caused during transportation and no part has been exposed to water. If in doubt, do not use the appliance and contact an authorized service center.
- Please refer to operating instructions to test the functions first before installation. Should any defects found, please contact Jetmaster Fireplaces Australia technical support.
- Keep plastic wrapping away from children.
- Save the original packaging as this may be required in the event of service complaint with product.
- Check that all parts are removed from the packaging.

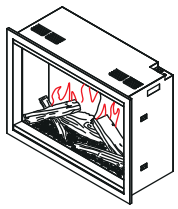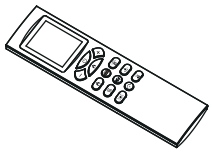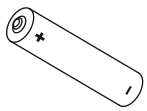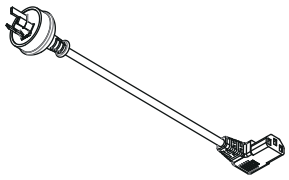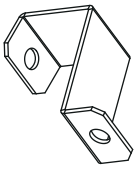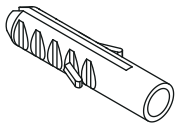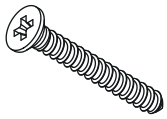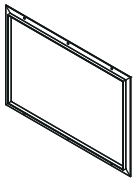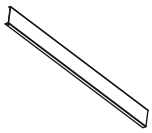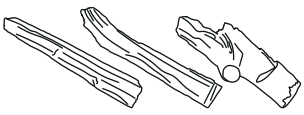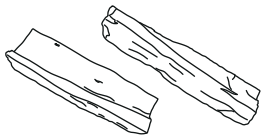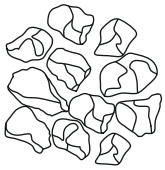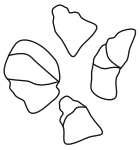
A.  1 x	B.  1 x	C.  2 x	D.  1 x
Fireplace	**Remote**	**AAA Battery**	**Power Cord**
E.  1 x	F.  1 x	G.  4 x	H.  4 x
Power Cord Fixator	**ST4*8 Screw**	**Wall Plug**	**ST4*30 Screw**
I.  4 x	J.  1 x	K.  2 x	L.  6 x
ST4*12 Screw	**Built in Trim**	**Outer Side Panel**	**M4*8 Screw**
M.  3 x	N.  2 x	O.  1 set x	P.  1 set x
Glowing Log	**Eucalyptus**	**Black Embers**	**Curled Grey Chip**

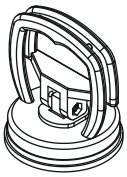Q.	R.	S.	
			
1 x	2 x	1 x	
Magnetic Tool	**Suction Cup**	**Manual**	

4. INSTALLATION INSTRUCTIONS

Tools Required

A screwdriver will be needed.

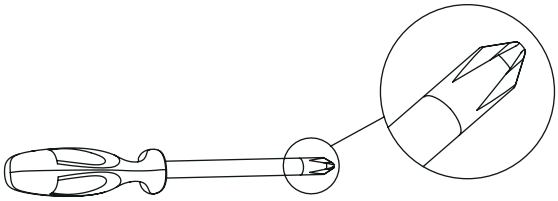

Locate the Appliance

Your new electric fireplace may be installed virtually anywhere in your home. However, when choosing a location, ensure that the general instructions are followed.

- For best results, install out of direct sunlight.
- The appliance should be connected to an earthed electrical outlet and it must be easily accessible to allow disconnection.


Installing the Appliance


This appliance must be installed by an authorized person. The installation must conform to local regulations and must also comply with the instruction supplied by Jetmaster Fireplaces and removal must be carried out by an authorized person.


The appliance can be installed either as a slide-in fireplace or as a built-in fireplace.

Unpack the Appliance


1. Take off slide-in trim on the fireplace and remove the screws on the glass bracket, then take off the glass bracket.

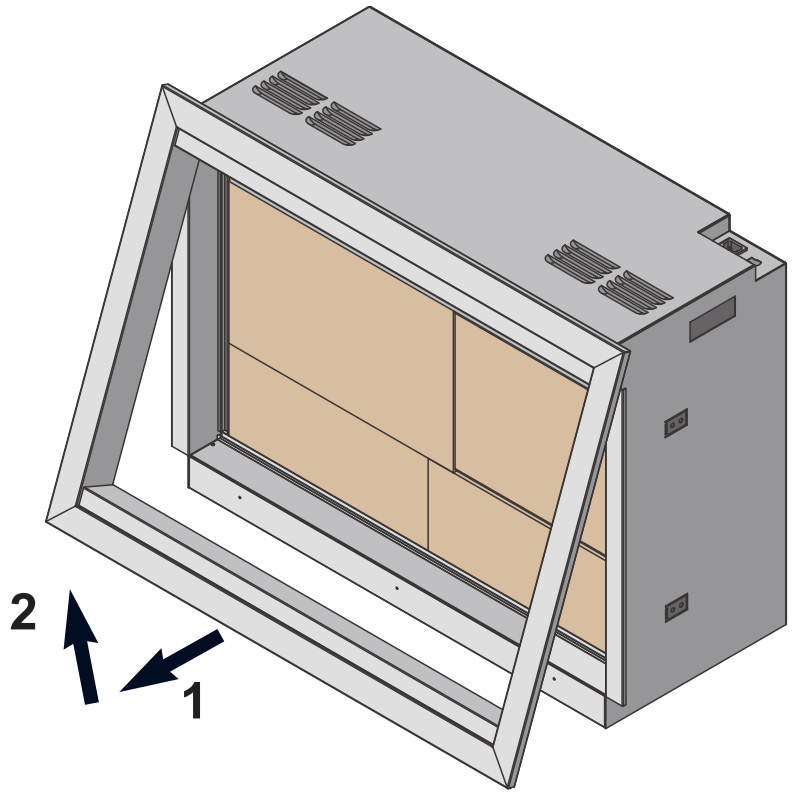

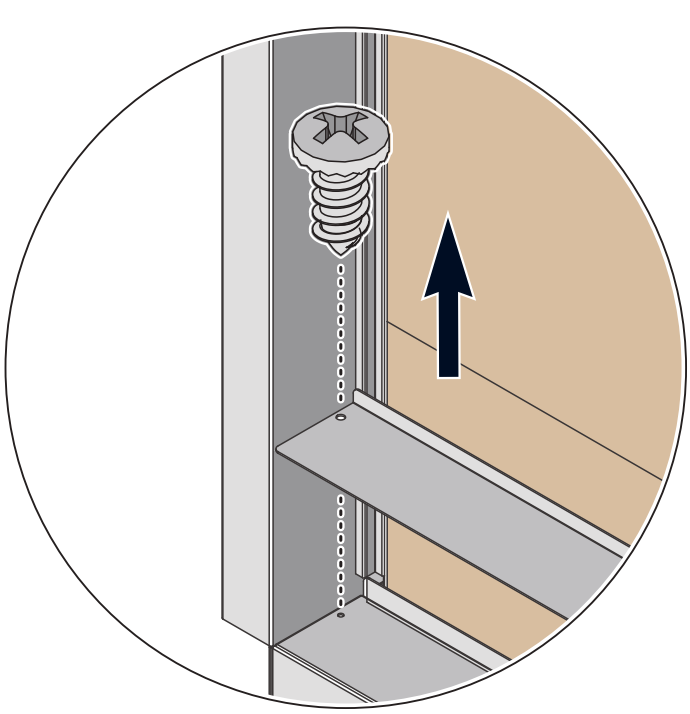

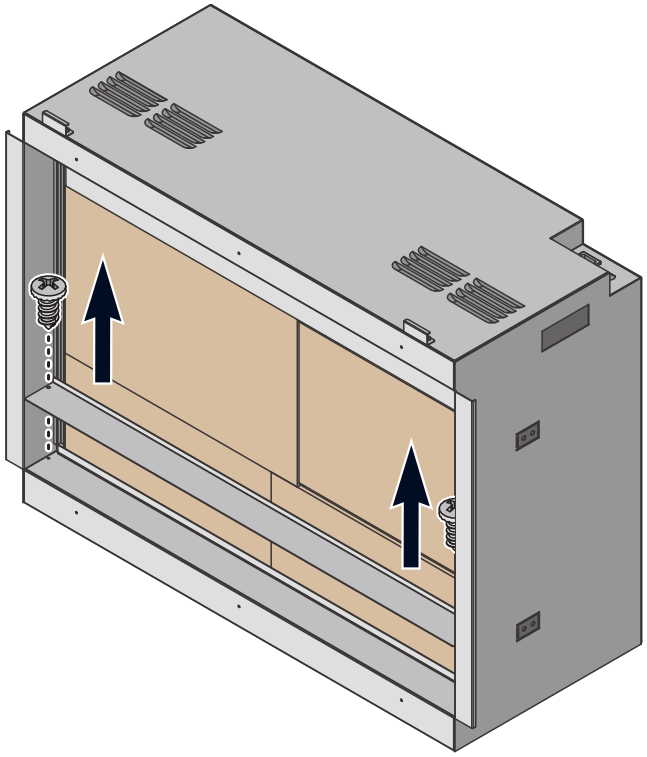


2. Remove the glass with suction cup lifters carefully, take out all the spare parts inside the firebox and check if any parts are missing.

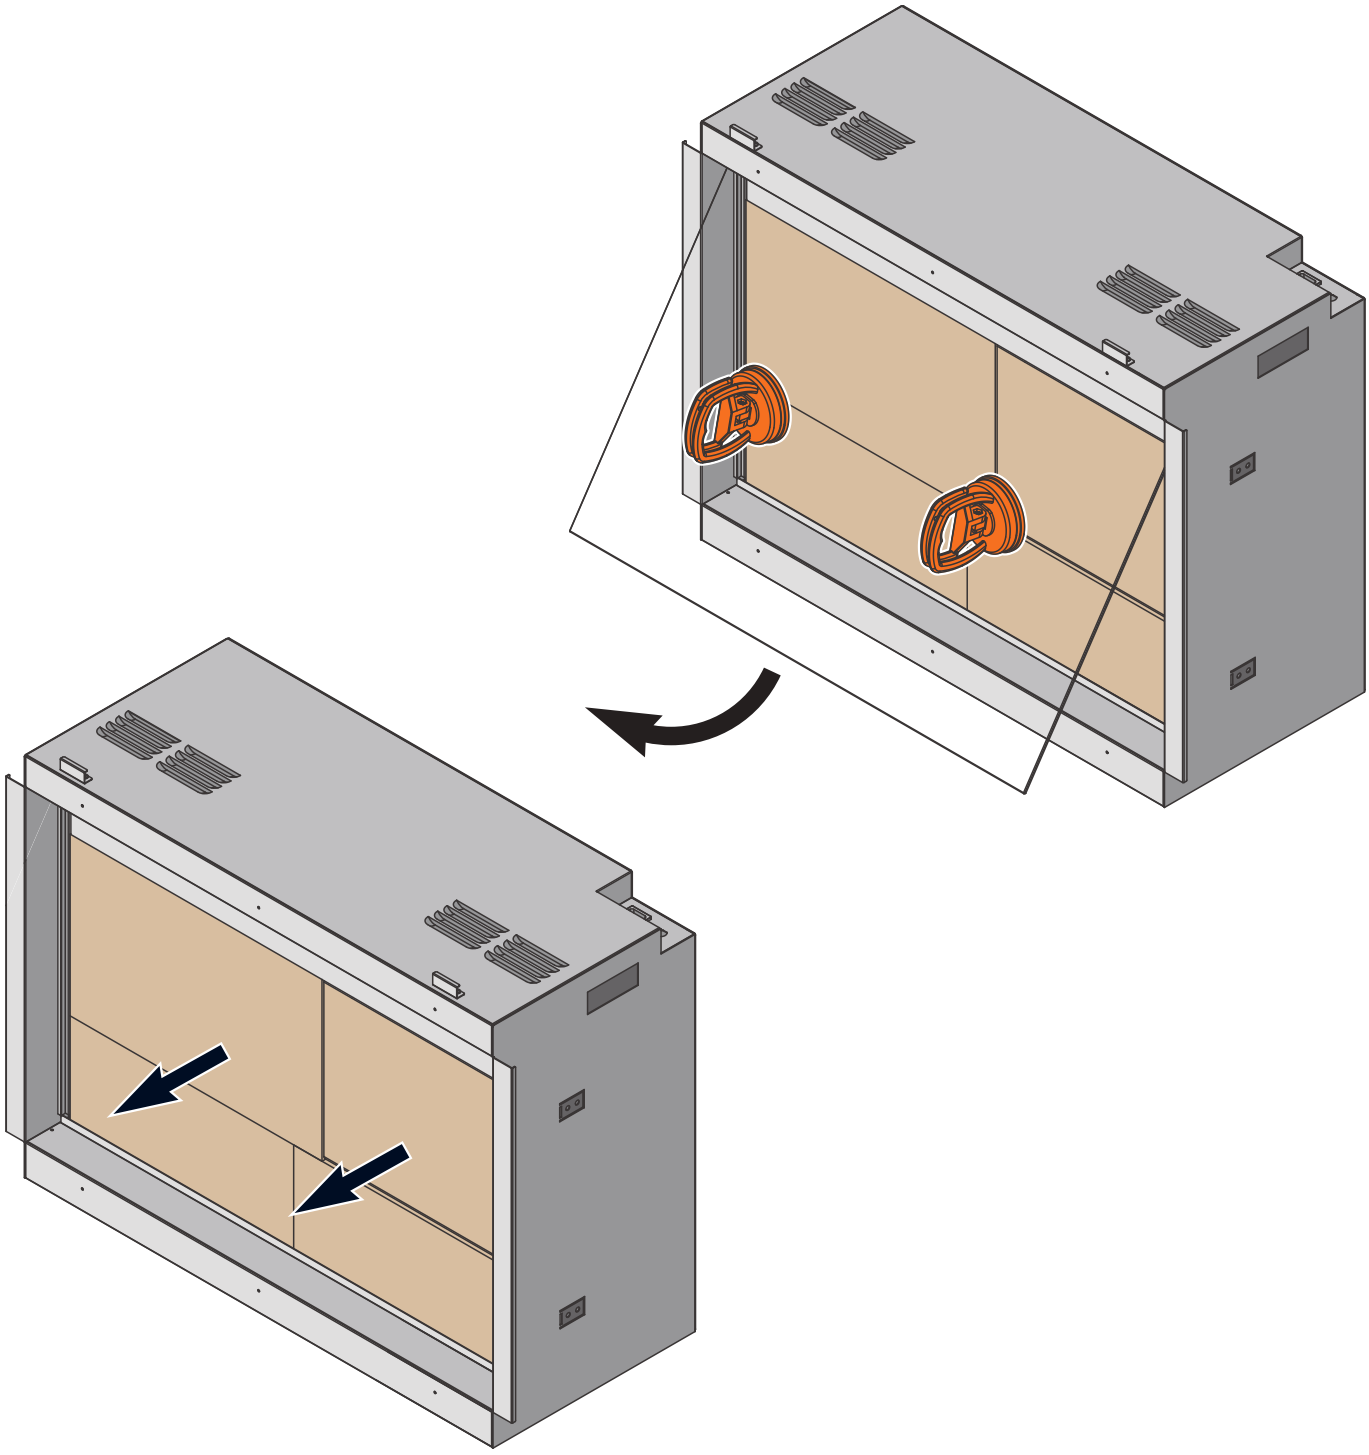


Slide-in Installation

1. Reserve installation opening on the wall according to below dimensions.

unit: mm

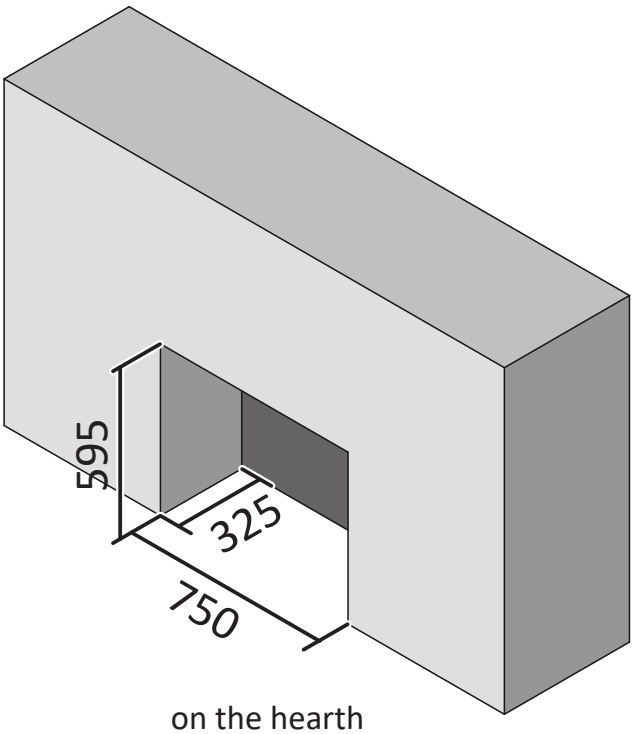


on the hearth

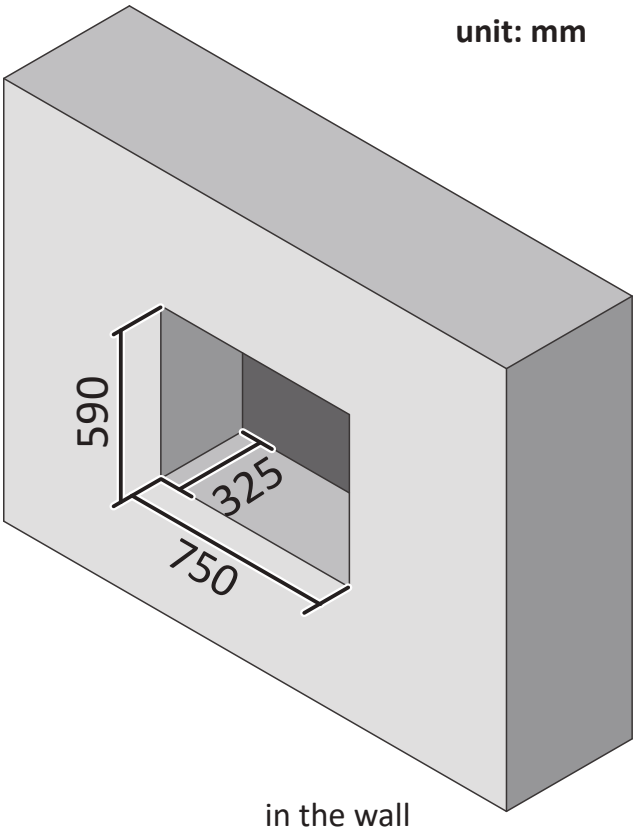


in the wall


2. Remove two leg brackets at the bottom of the fireplace if you intent to install it off-floor. If installed on the hearth, keep the leg brackets at the bottom.

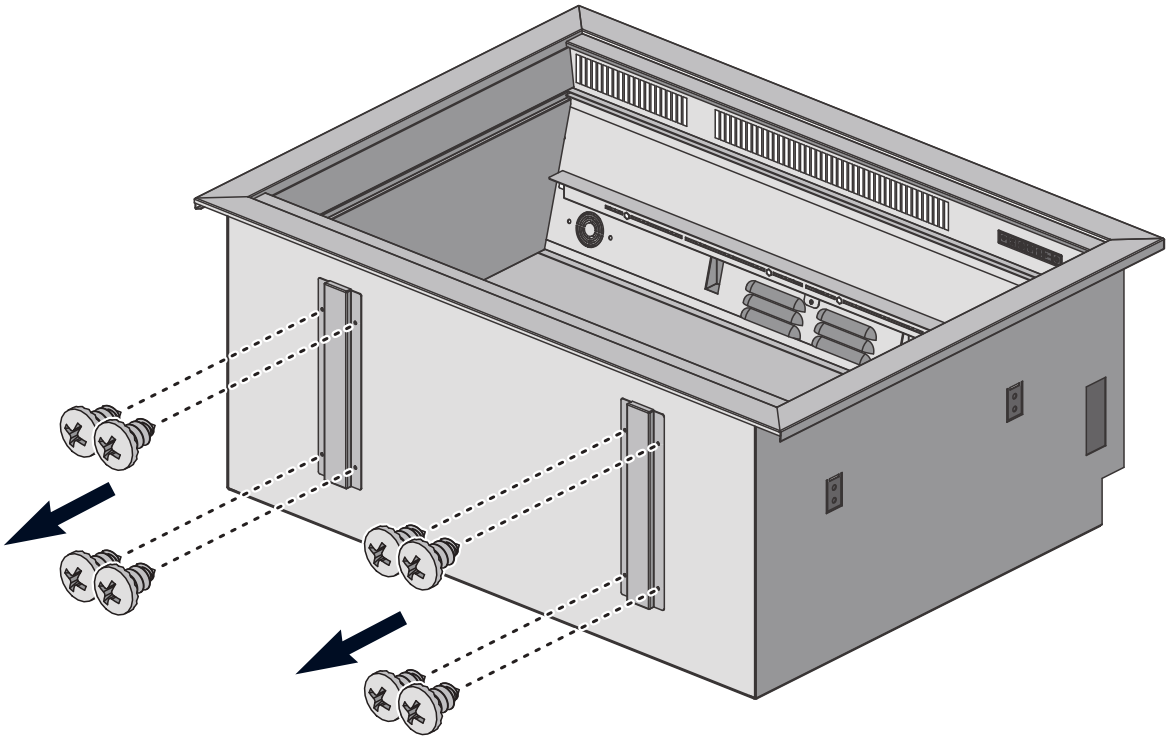


3. Secure the power cord with the fixator and one ST4*8 screw. Connect the ambient light strip (optional). Compatible ambient light strips are available from Jetmaster Fireplaces, **please note other ambient light strips may not be suitable and will void warranty.**

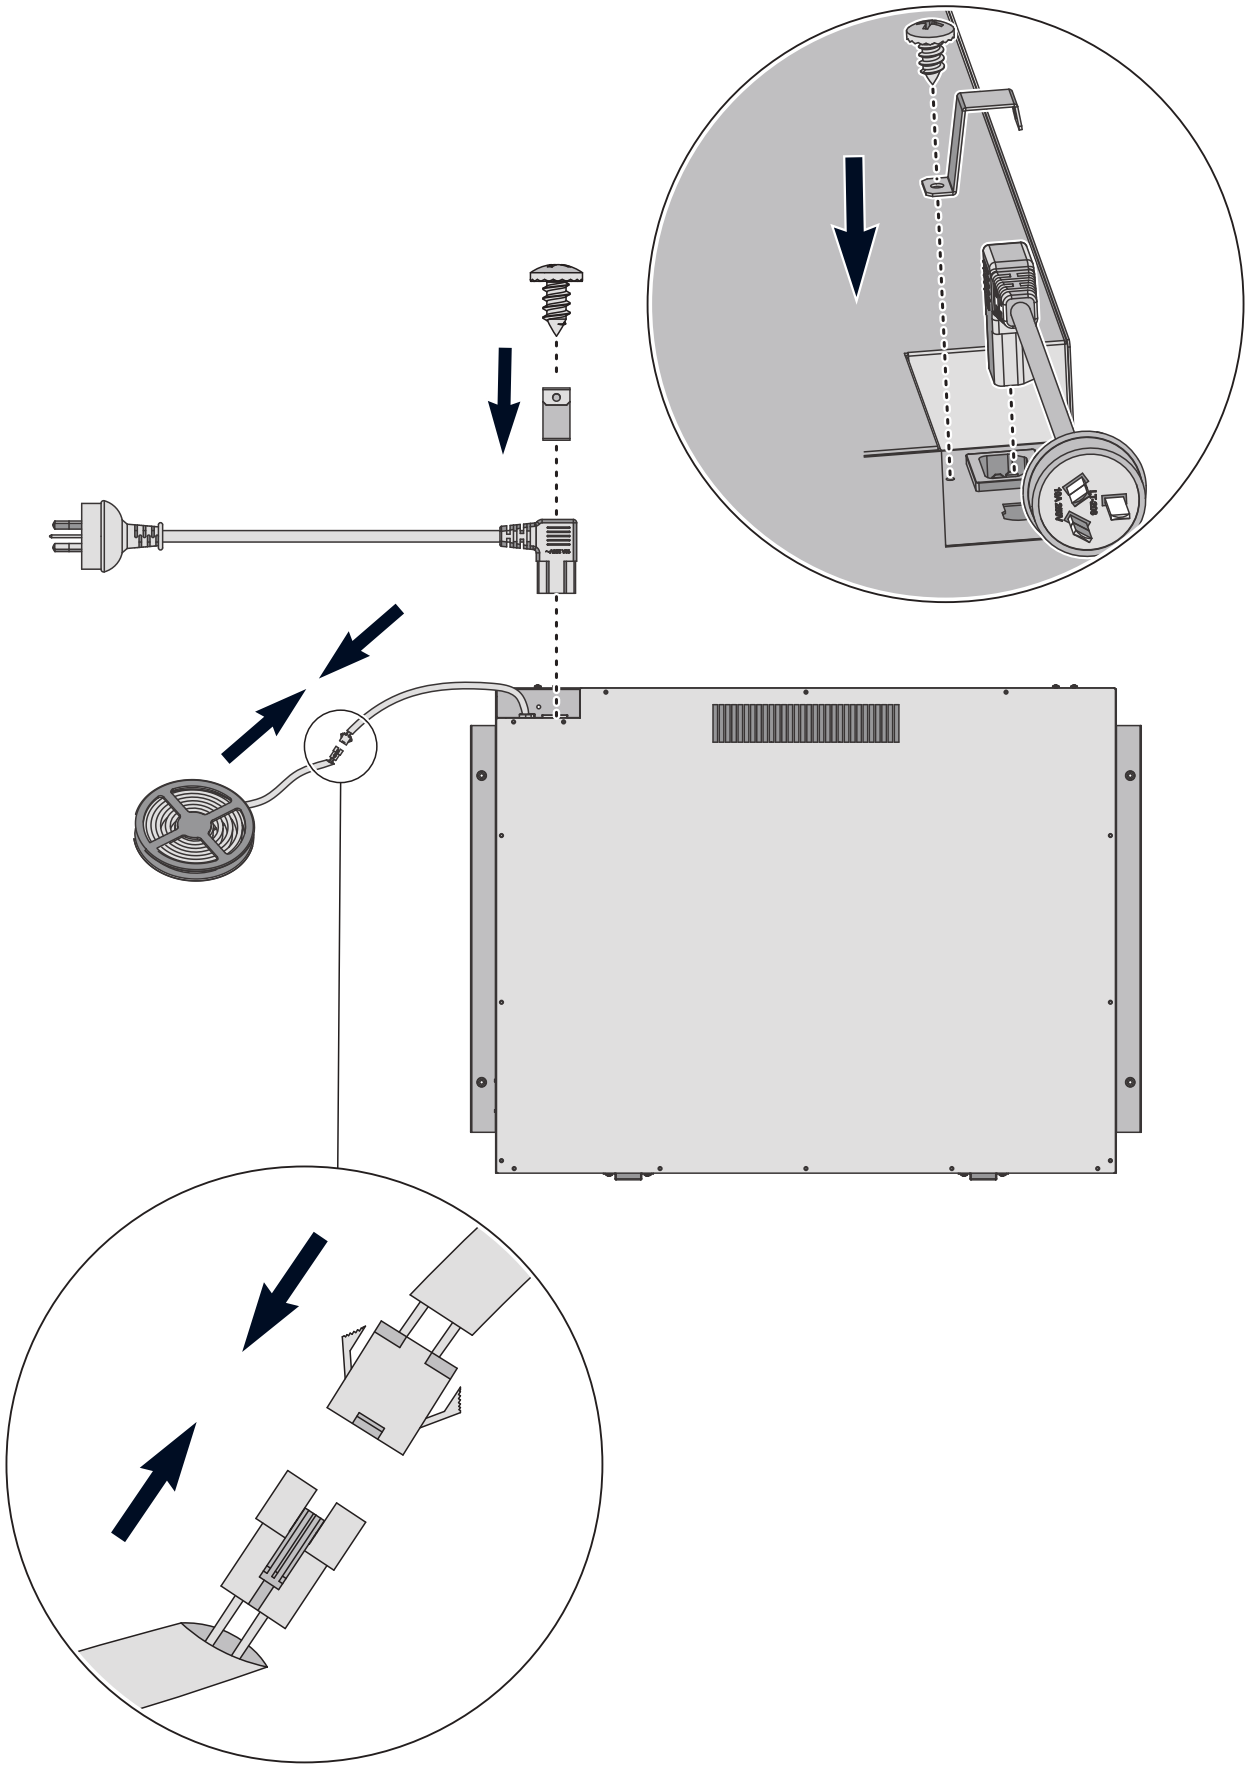



4. Take off the inner side panels with the magnet lifter.

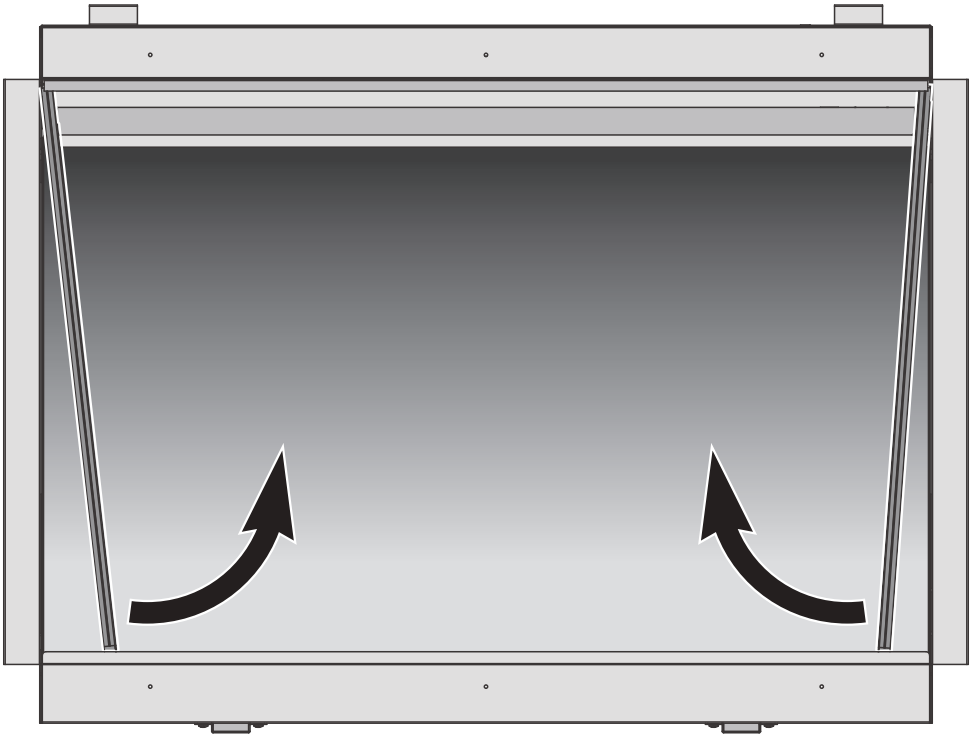


5. Slide the fireplace into the opening on the wall. Using the wall as a template, mark the hole position. Take out the fireplace. Drill holes on the marks and insert four wall plugs. Slide the fireplace into the opening again and fix with four ST4*30 screws.

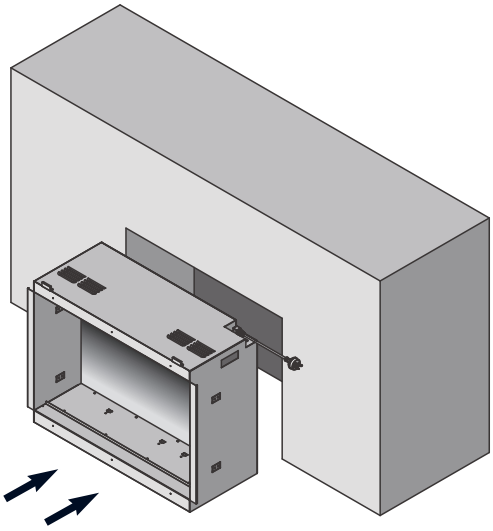

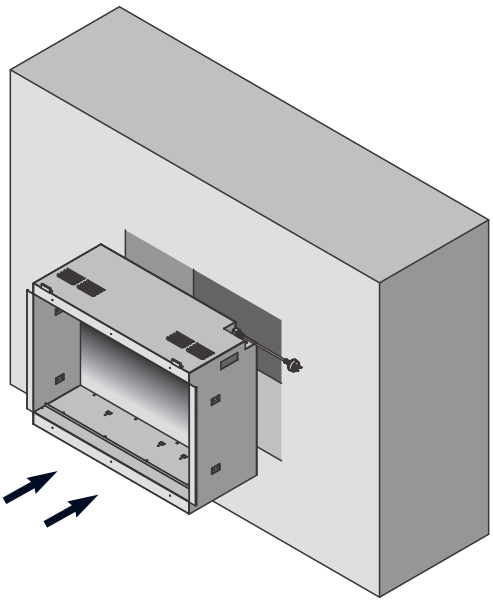

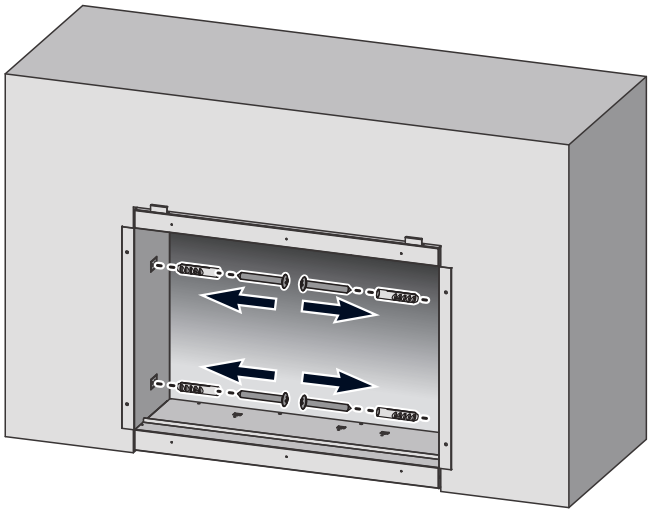


on the hearth

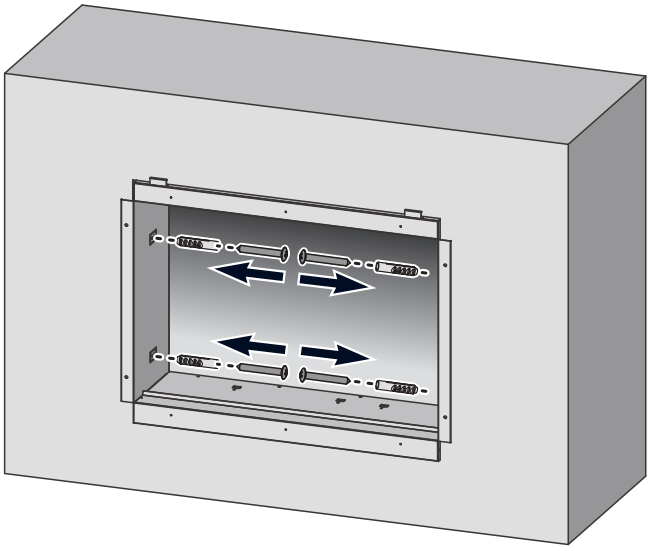


in the wall


6. Install inner side panels back, and arrange fuel bed.

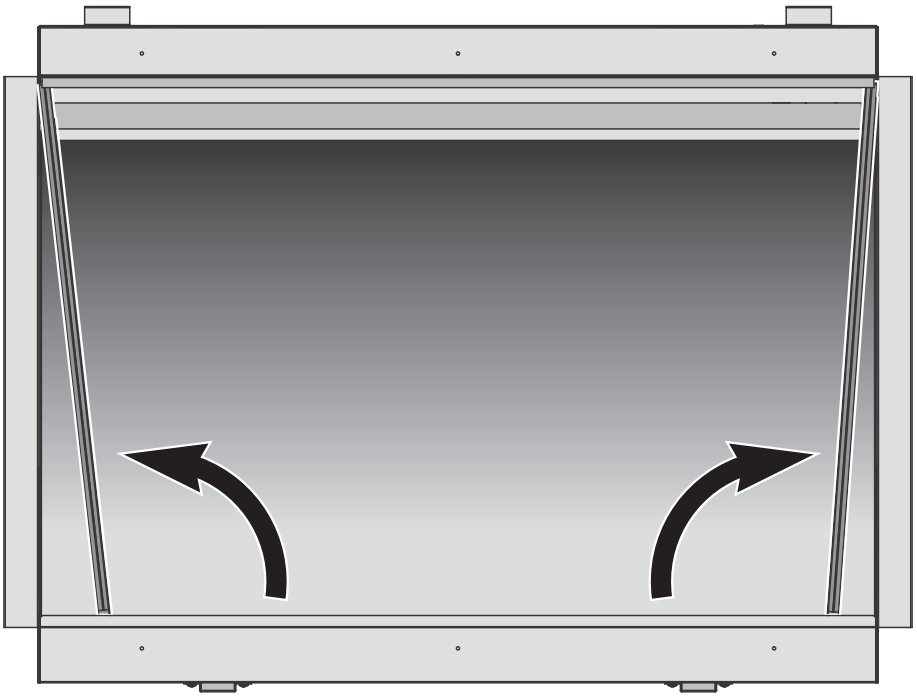

7. Install the appliance back step by step and complete the installation.

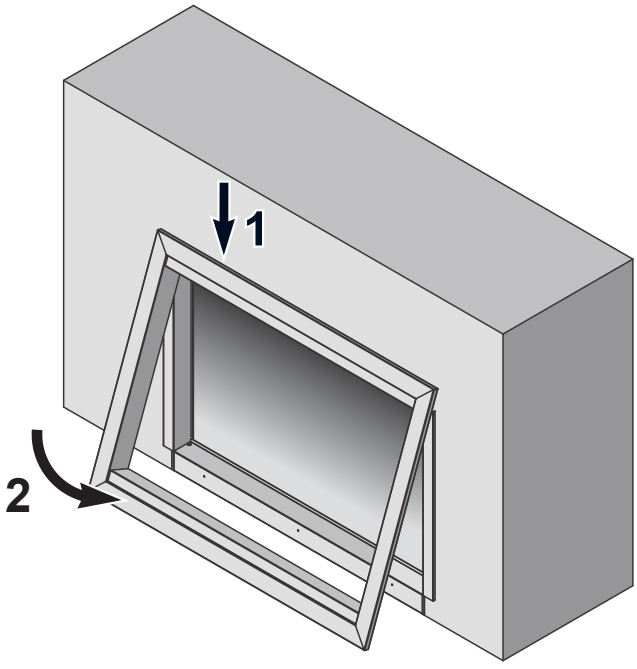


on the hearth

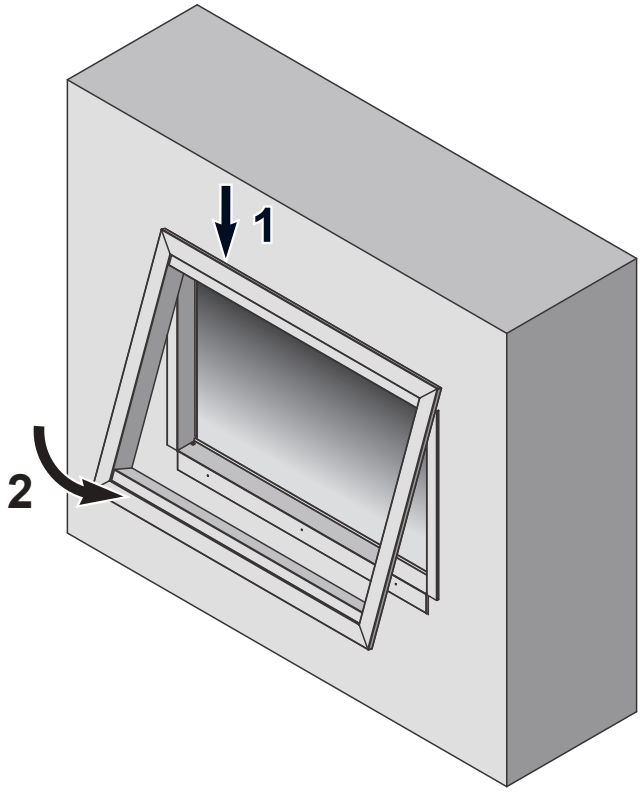


in the wall

Built-in Installation


1. Use wood stud and support panel to make the framework. Below is the opening dimensions for reference.

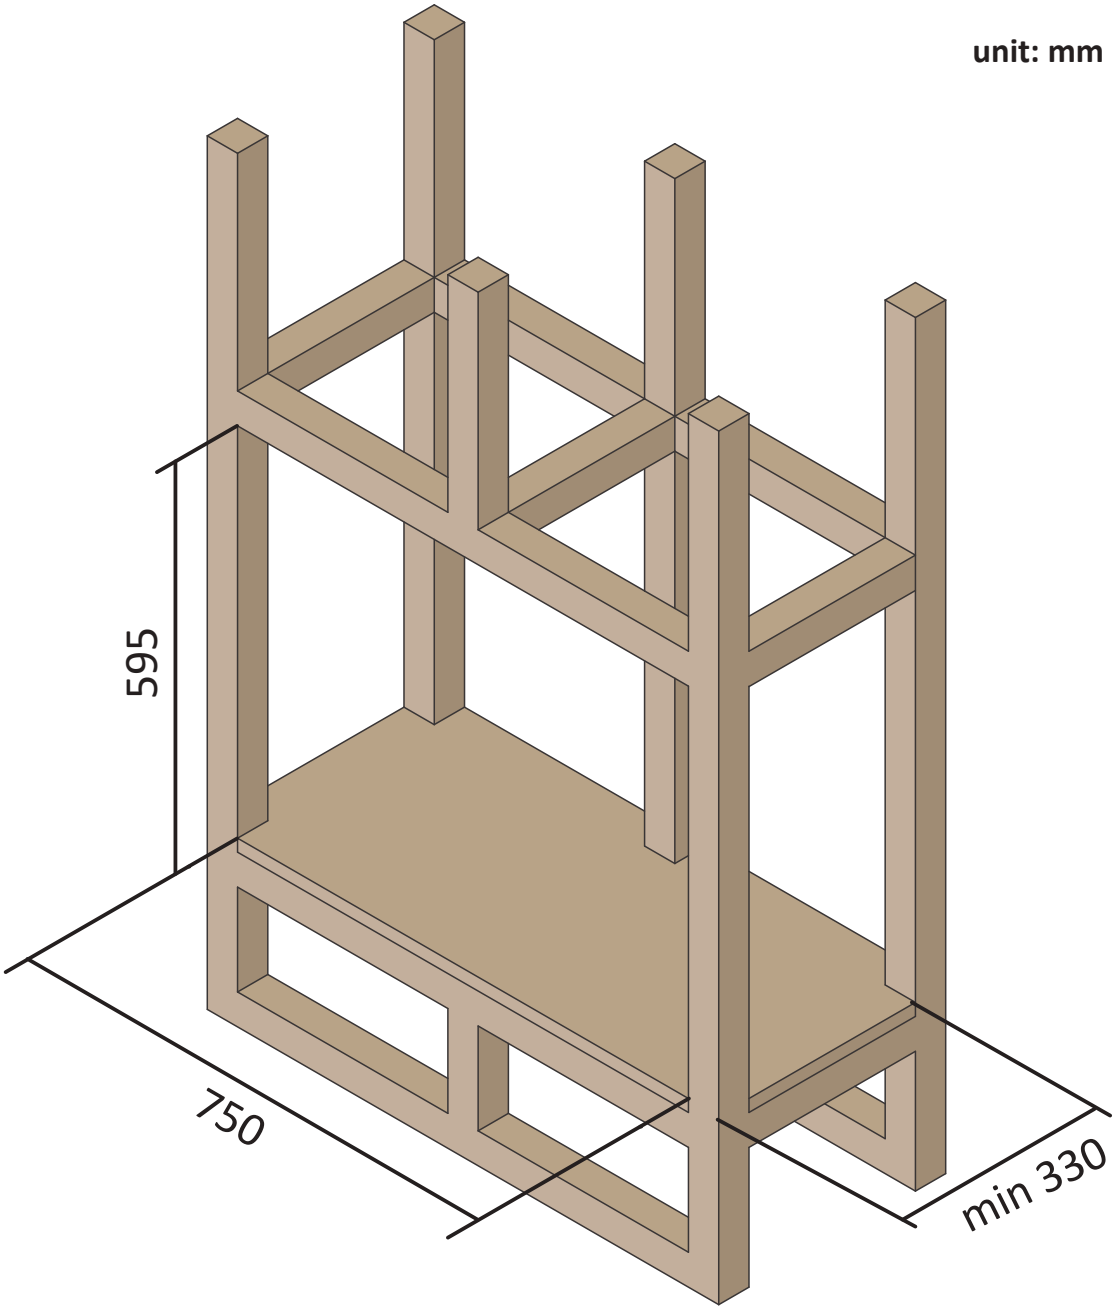


2. Remove the slide-in trim on the fireplace and take off two brackets as shown in the below picture. Take out the spare parts inside, see **Unpack the Appliance**. Secure the power cord and connect the ambient light strip (optional).

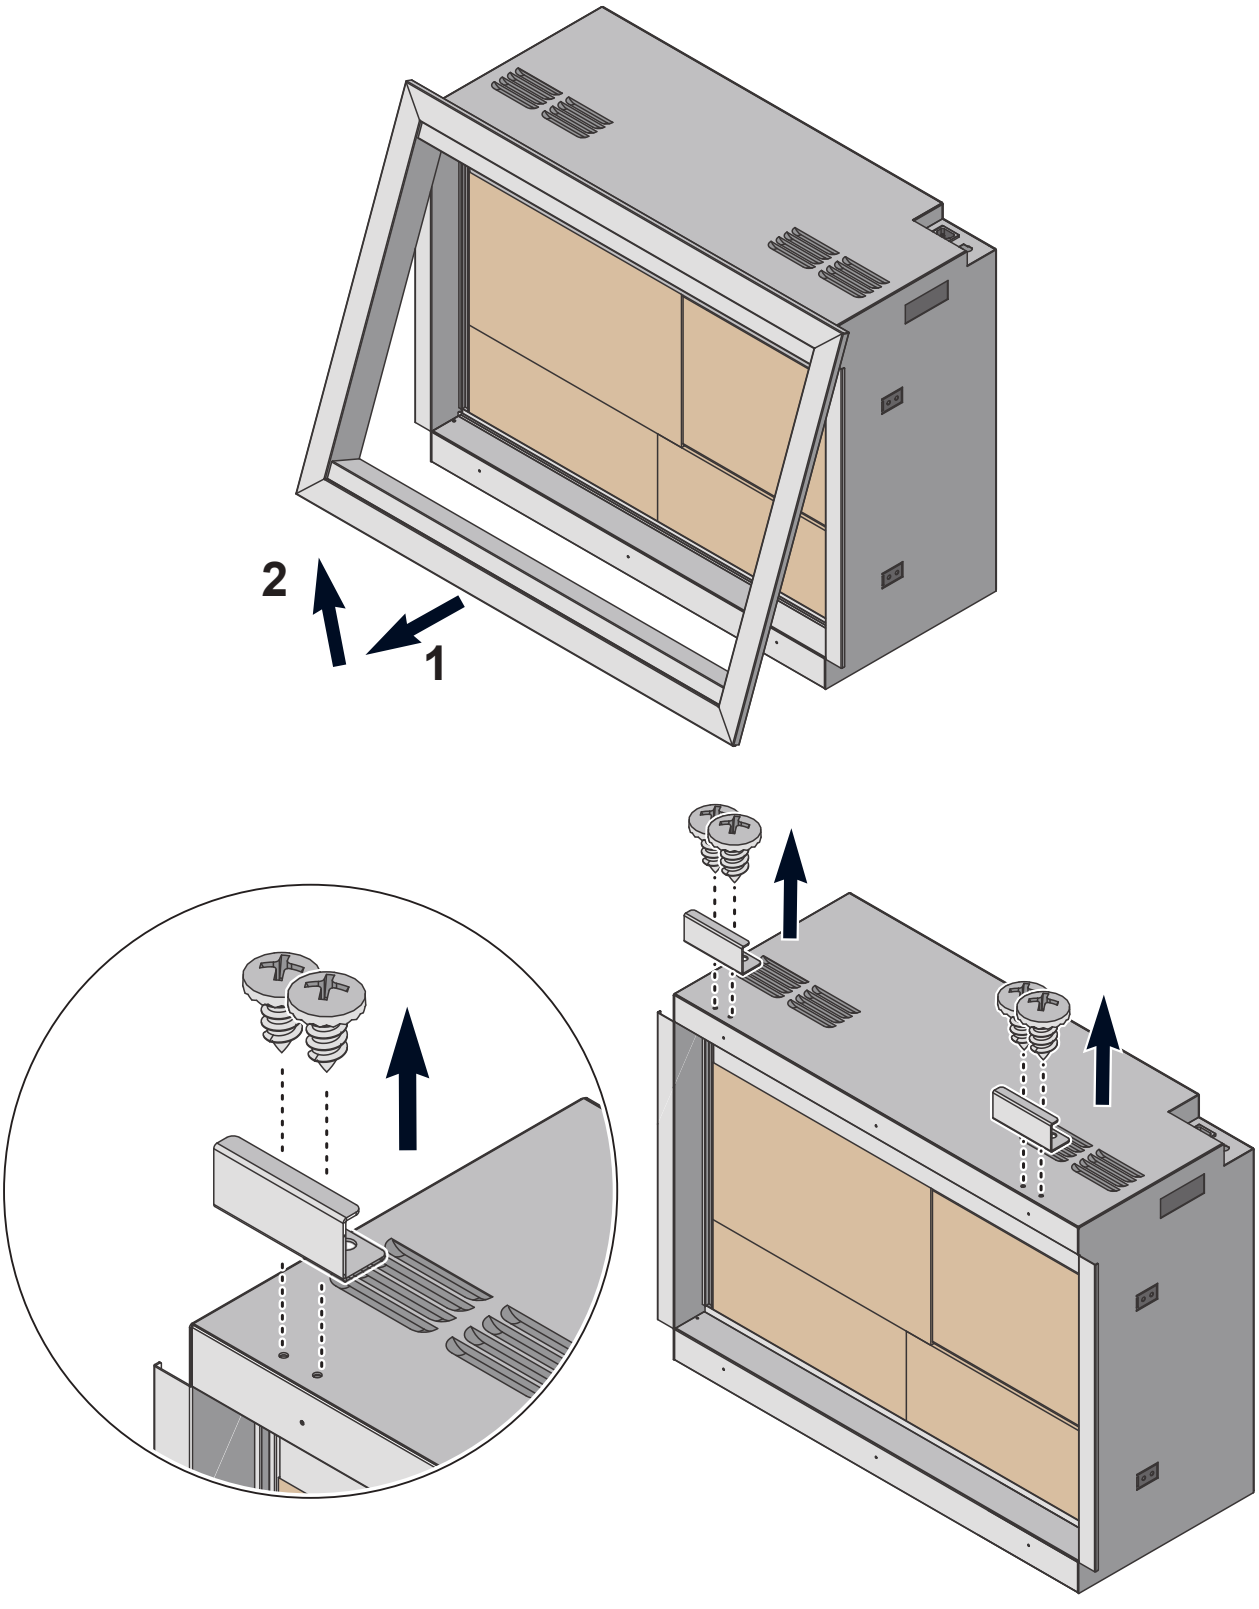


3. Push the fireplace into the framework, and then fix by four ST4*12 screws.

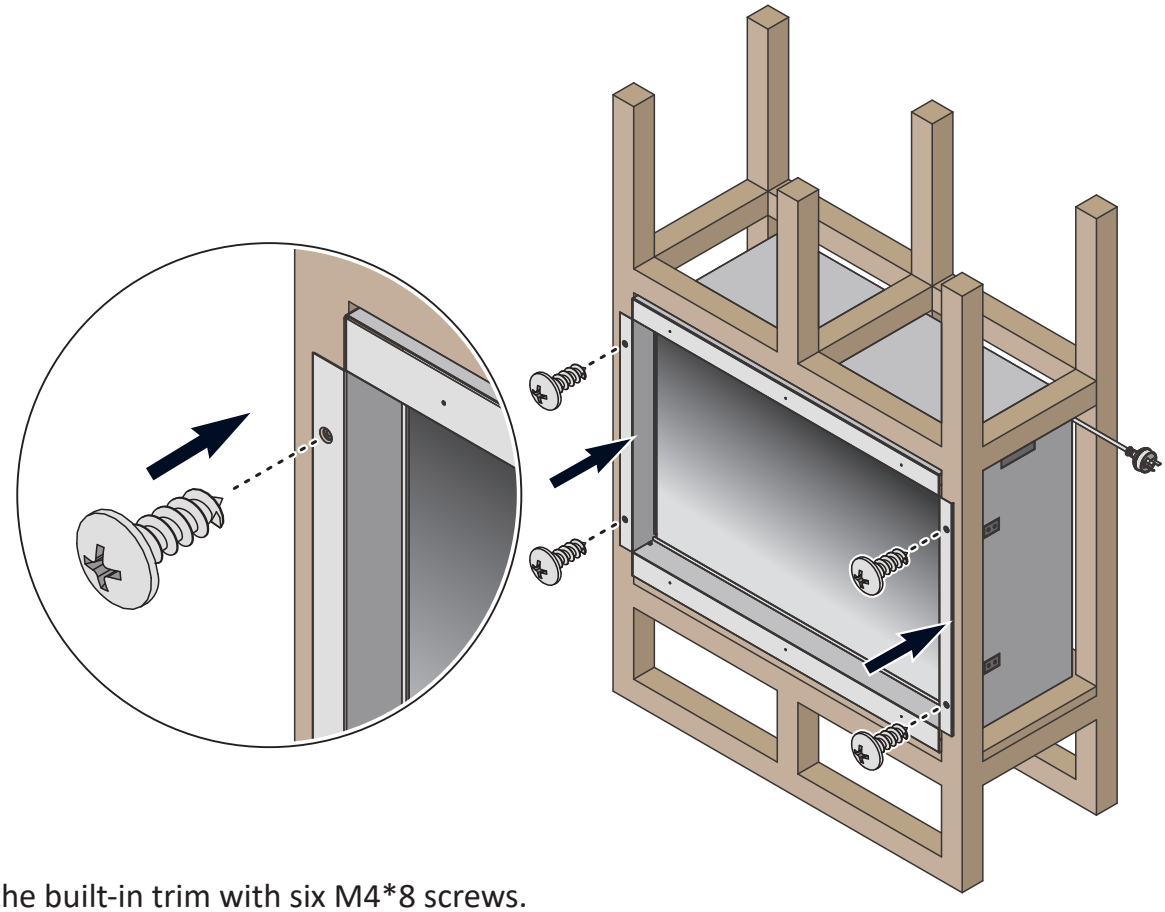


4. Fix the built-in trim with six M4*8 screws.

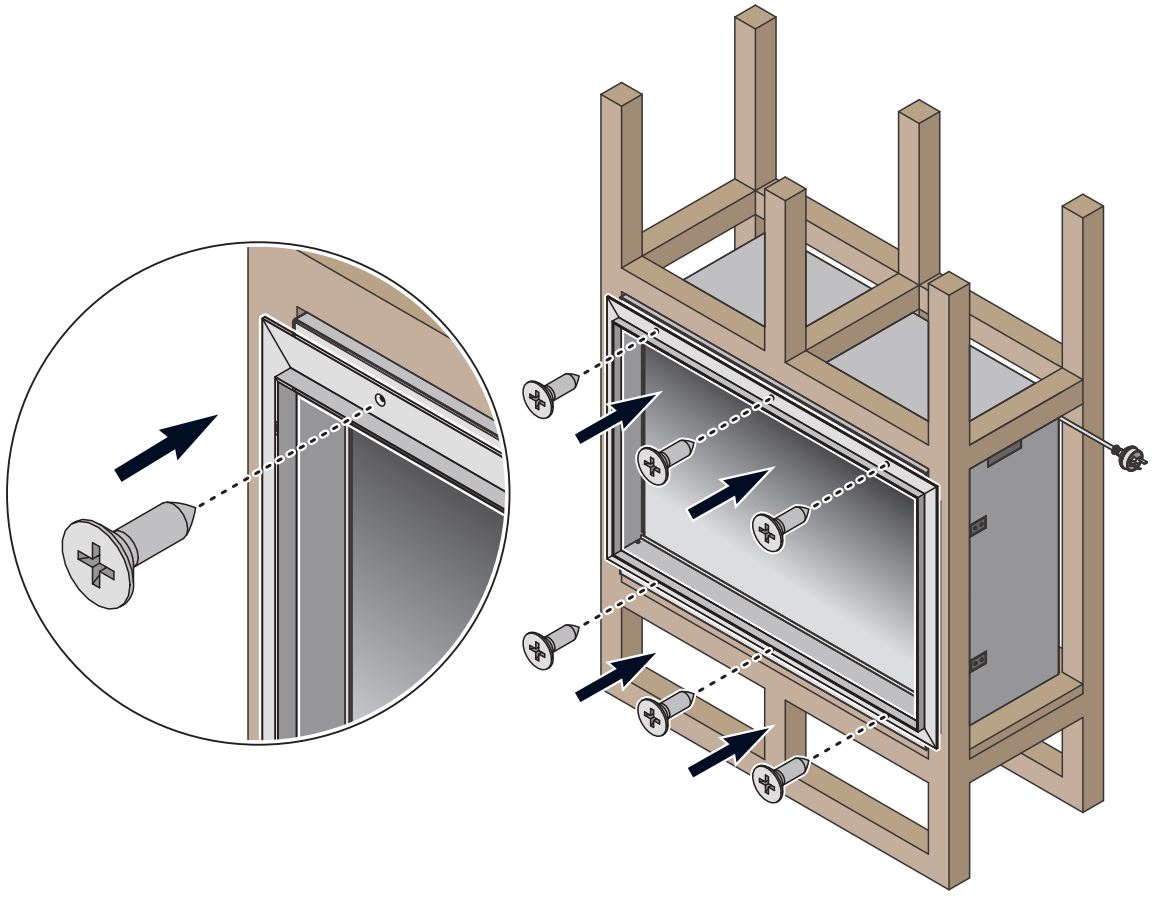


5. Install the glass and its bracket back after arranging the fuel bed.

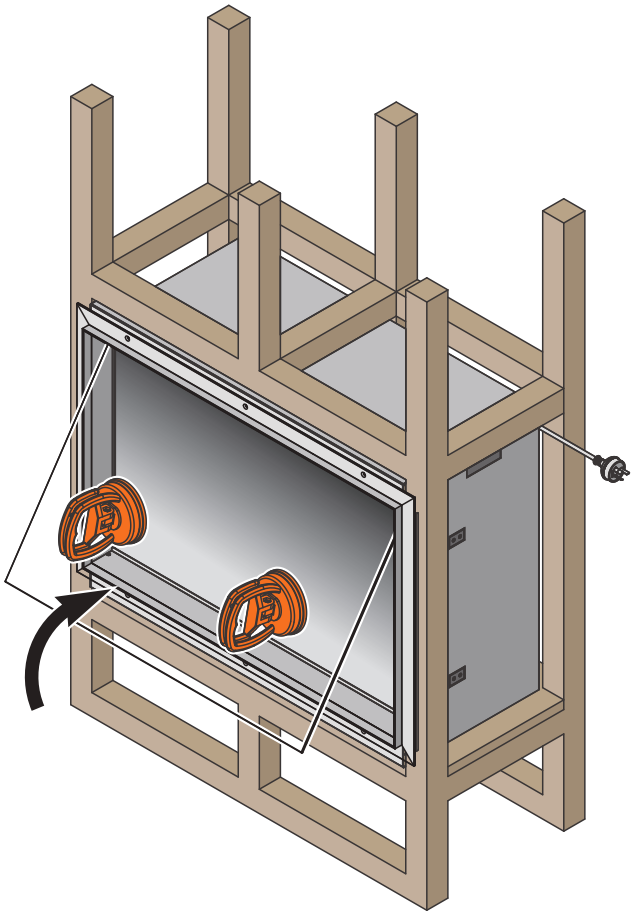

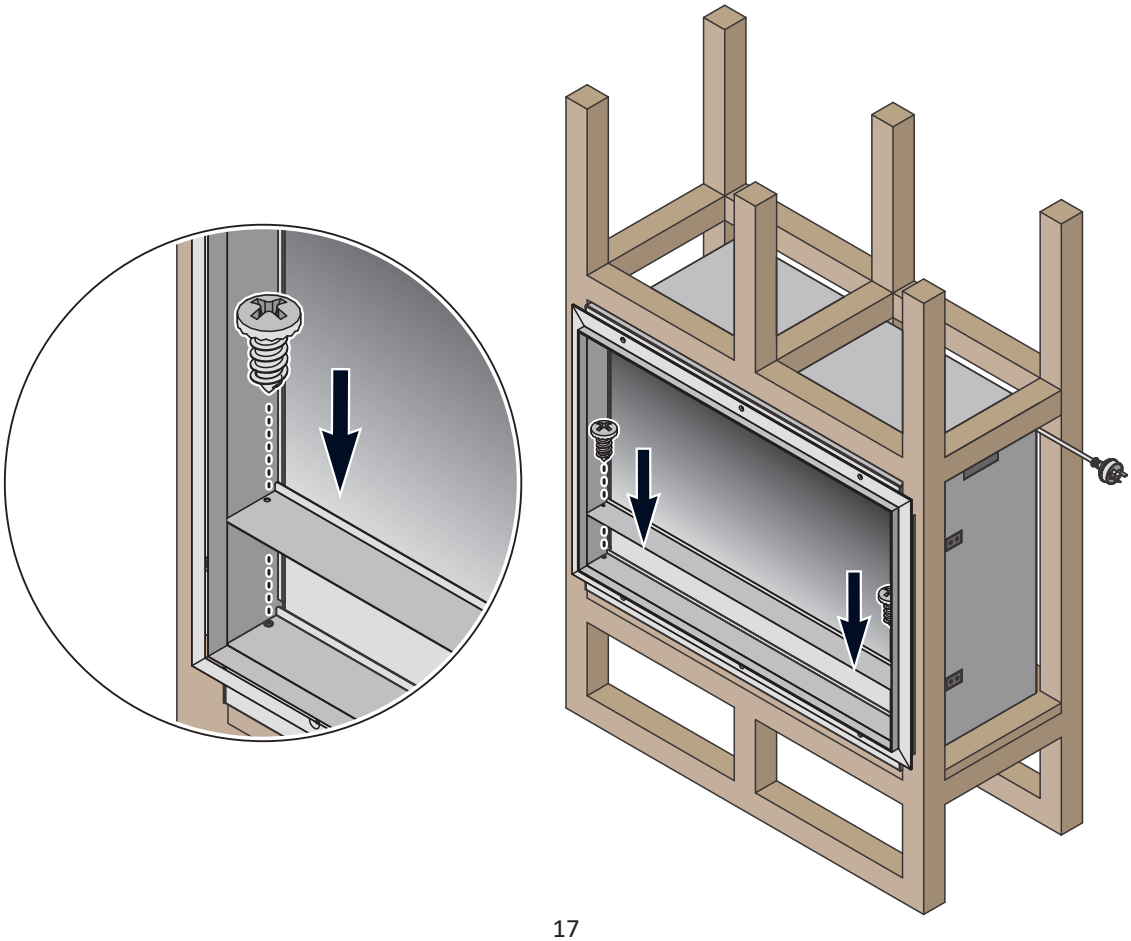


6. Install the outer side panels.

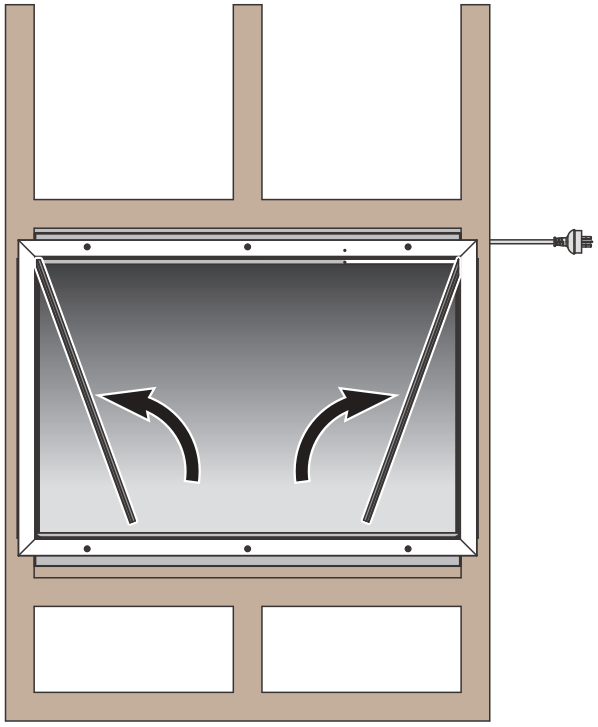

7. Cladding the framework.

Note: Hard surfaces can amplify sound. Consider adding some underlay or similar to the inside surface of the cladding.

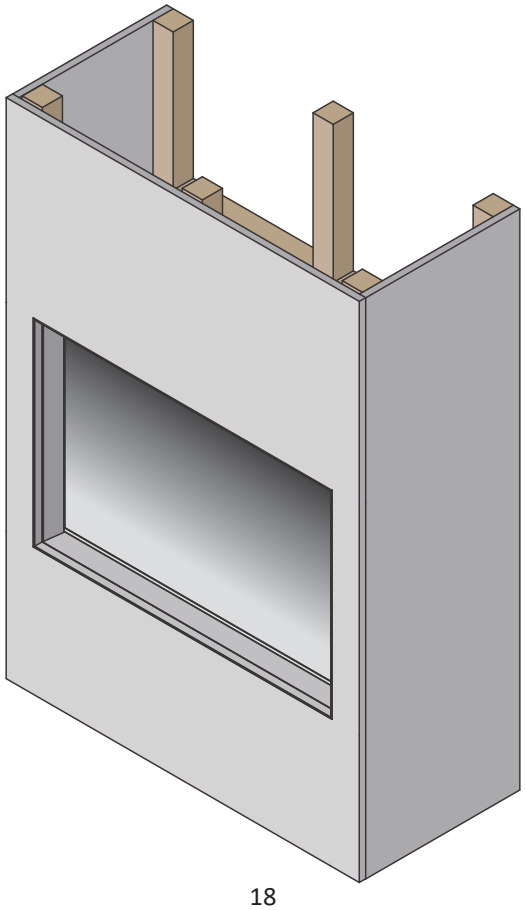


Fuel Bed Arrangement

There are 3pcs glowing logs and 2pcs eucalyptus logs in the carton. Place the logs on the fuel bed according to the layout printed on the fuel bed panel.

Glowing logs	Eucalyptus
	
A B C	D E

Step 1: Take off the labels on the fuel bed and insert 3 glowing logs as shown in the below picture.
Please note other glowing logs may not be suitable and will void warranty.

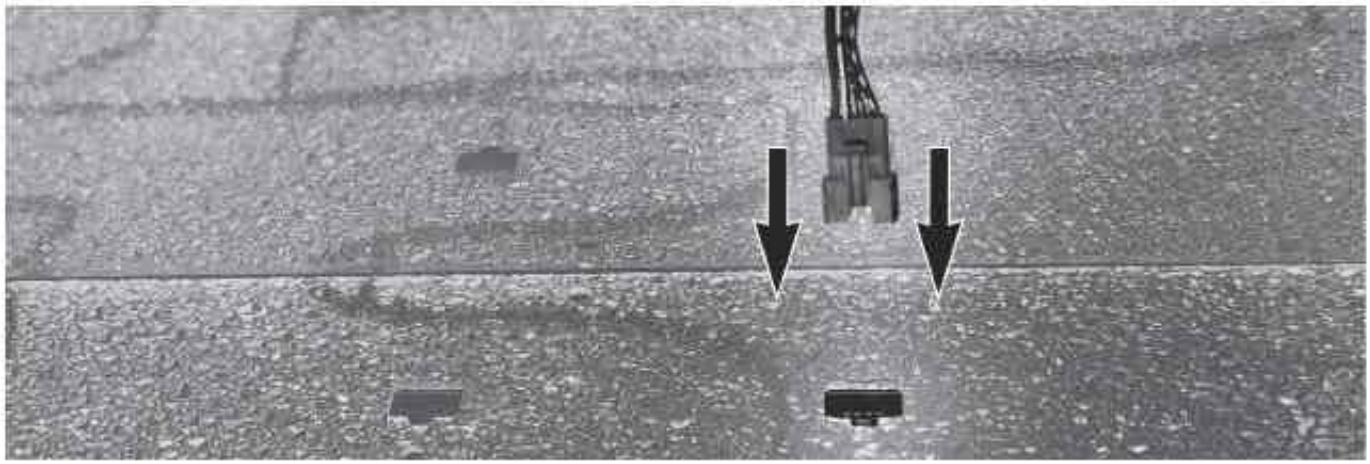




Step 2: Place 2 eucalyptus on the top, ensuring to hide glowing log wires behind for a better effect.



Step 3: Scatter black embers casually around all the logs, ensuring that all visible areas of the fuel bed, including underneath and behind the logs, are covered. Then place the curled grey chip for a better effect.



5. OPERATION INSTRUCTIONS

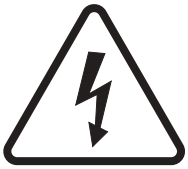


Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in electric shock, fire, serious injury, or death.



WARNING! Do not operate the unit if it is damaged or has malfunctioned. If you suspect the unit is damaged, call a qualified service technician to inspect and replace any part of the electrical system if necessary.

5a. MANUAL CONTROL

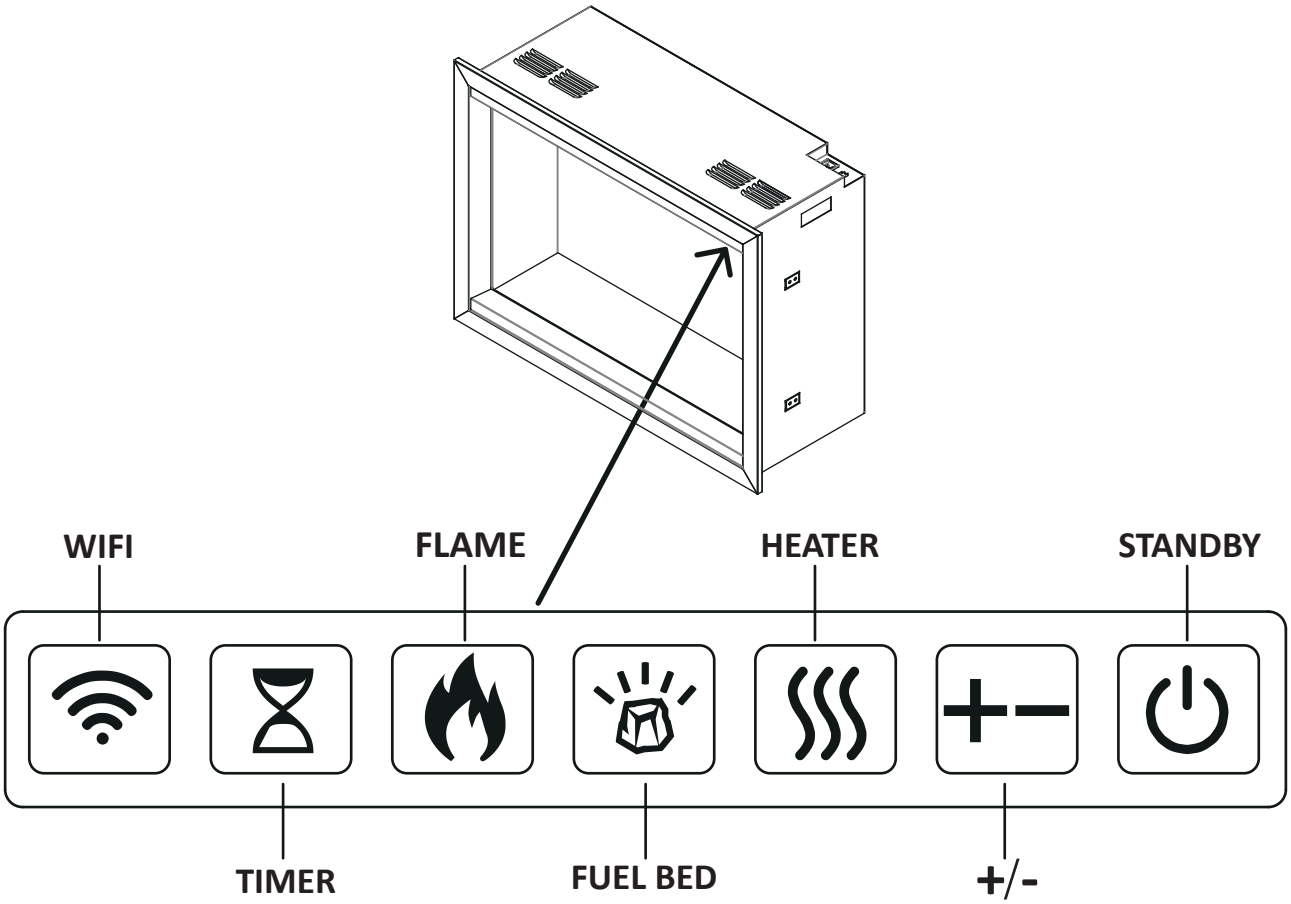

Note: The manual buttons control only basic functions, not a full range of controls. Use the remote or APP to carry out all functions.

Standby: Press to turn on the memorized lights effect, setting temperature and crackling sound or to turn off all functions at the same time.

Hold this button for 3 seconds to restore factory defaults.

+/-: Press to adjust the corresponding setting temperature, flame and fuel bed brightness.

Heater: Press to cycle through heat H.oF/Co.A/H.Lo/H.HI. In H.Lo/H.HI mode, the heater will only work when setting temperature is higher than room temperature; in Co.A mode, the fan blows cold air; in H.oF mode, the heater stops working.

Hold this button for 3 seconds to switch between °C/°F.

Note: In order to prevent the product becoming too hot, there is 10 seconds delay when turning on the heater and 10 seconds delay when turning off the fan.

Fuel Bed: Press to cycle through 9 fuel bed effects and off setting, press +/- within 10 seconds after pressing fuel bed button to adjust 5 levels of fuel bed brightness.

Flame: Press to cycle through 6 flame effects and off setting, press +/- within 10 seconds after pressing flame button to adjust 5 levels of flame brightness.

Hold this button for 3 seconds to enter or cancel the mute mode of button sound. A short beep sound will be heard every time you press a button while the mute mode is canceled.

Timer: Press to cycle through timer 0.0H, 0.5H, 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H, 10H.

WiFi: Press once to turn on or turn off WiFi function.

Adaptive Start Control

According to room temperature and set temperature, the heater will automatically come on in time to heat the room to the set temperature at the set time. For example, if your timer is set to start at 18:00 and temperature is set to 23°C, the fire will come on at 17:30 to ensure the room is 23°C at 18:00.

Window Open Detection


When the remote control detects a rapid drop in room temperature, it will be identified as a window open, the warning icon will be displayed and the heating will be turned off automatically. The fire will return to normal working state once the warning has been overridden manually (by operating control panel, remote control or app).

Resetting the Thermal Cut Out

The appliance is fitted with an Electronic Safety Control (E.S.). This is a safety device, which switches off the fire if, for any reason, the appliance overheats, e.g. when covered. If the heater stops operating while the flame effect continues working normally, this indicates that the E.S. Control is in operation. The E.S. Control can only be re-set after the appliance has cooled down, and the appliance has been reset. Resetting of the E.S. Control proceeds is as follows:

1. Switch off the appliance (Manual switch) and leave it off for approximately 10-15 minutes.
2. Remove any obstruction to the fan heater outlet or fan blades etc. Make sure that the power supply is disconnected with the plug socket outlet while doing this.
3. Switch on the appliance and the E.S. Control will be reset.
4. Ensure that the appliance is functioning correctly. If the E.S. Control operates again, the appliance should be checked by a competent electrician.

5b. REMOTE CONTROL

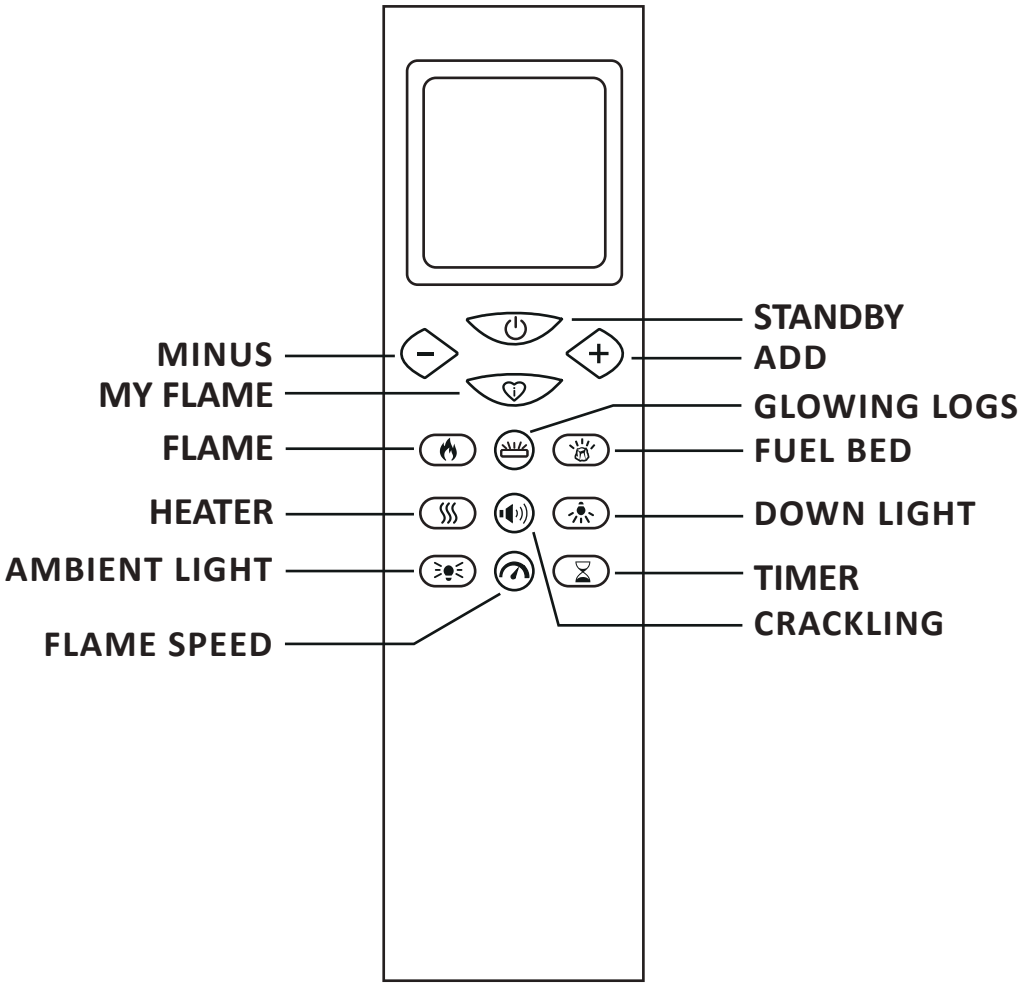

Standby: Press to turn on the memorized lights effect, setting temperature and crackling sound or to turn off all functions at the same time.

My Flame: Hold this button for 3 seconds after power is on to memorize the current crackling and lights effects. Press once to enter or cancel the preset effects.

+/-: Press to adjust the corresponding crackling volume, setting temperature, lights brightness, and flame speed.

Flame: Press to cycle through 6 flame effects and off setting, press +/- within 10 seconds after pressing flame button to adjust 5 levels of flame brightness.

Flame Speed: Press +/- after pressing this button to adjust 5 levels of flame speed.

Fuel Bed: Press to cycle through 9 fuel bed effects and off setting, press +/- within 10 seconds after pressing fuel bed button to adjust 5 levels of fuel bed brightness.

Heater: Press to cycle through heat H.oF/Co.A/H.Lo/H.HI. In H.Lo/H.HI mode, the heater will only work when setting temperature is higher than room temperature; in Co.A mode, the fan blows cold air; in H.oF mode, the heater stops working.

Hold this button for 3 seconds to switch from °C/°F.

Down Light: Press to cycle through 2 down light effects and off setting, press +/- within 10 seconds after pressing Down Light button to adjust 5 levels of down light brightness.

Ambient Light: Press to cycle 14 ambient light effects and off setting, press +/- within 10 seconds after pressing Ambient Light button to adjust 5 levels of ambient light brightness.

Timer: Press to cycle through timer 0.0H, 0.5H, 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H, 10H.

Glowing Logs: Press to cycle through 4 log light effects and off setting, press +/- within 10 seconds after pressing Glowing Logs button to adjust 5 levels of log light brightness.

Crackling: Press to turn on or turn off crackling sound. Press +/- after turning on the crackling sound to adjust 3 levels of the volume.

Set up the communication between the remote and fireplace

Below operations should be carried out before programming, when changing to a new remote or in the event the fireplace cannot be controlled by the remote:

Hold the standby button on the fireplace for 3 seconds until two long beeps are heard while power is on, and then press the standby button on the remote within 10 seconds, the programming is finished when a long beep is heard. Otherwise, just repeat the above steps.

Hold the ambient light and timer buttons on the remote simultaneously for 3 seconds until "---" shows on the remote screen, the remote is decoded and can reset up the communication with the fireplace by repeating above steps.

Important Safety Information for Battery

1. Two AAA batteries are required for the remote control;
2. Use the thumb press and push the bar figure on the back cover down simultaneously, then take out the cover and remove the battery or insert the battery, after this, place the cover back on the rear of the remote;
3. This AAA battery is not to be charged;
4. Different types of batteries or new and used batteries are not to be mixed;
5. Battery is to be inserted with the correct polarity;
6. Exhausted batteries are to be removed from the appliance and safely disposed of;
7. If the remote control is to be stored unused for a long period, the battery should be removed;
8. The supply terminals are not to be short-circuited.

5c. APP CONTROL

Visit your APP store (IOS or Android) to download the TUYA SMART APP. Follow the onscreen instructions to create an account. Once installed, follow the procedure below to pair the device with your appliance.

Start the APP and click “Add Device” on screen.

Ensure the appliance is powered on, then press WiFi button on the fireplace to turn on WiFi function. Hold the WiFi button on the fireplace until you hear 3 beeps at bluetooth mode. If failed in bluetooth mode, try WiFi mode. Hold the WiFi button on the fireplace until you hear all together 8 beeps. Fuel Bed will turn green if successfully connected.

Follow the instructions on the APP to input your home network details. Please note that your device must be connected to the same home network as the fireplace.

5d. VOICE CONTROL

Note: Before using voice control, ensure that the appliance is connected to the TUYA APP and that Amazon Alexa or Google Assistant APP is installed.

Below are the voice commands for reference:

Google Assistant Commands

Note: Use your “device name” in place of “my fireplace” below.

No.	Function	Commands in Manual
1	Fireplace On/Off	OK Google, turn on <my fireplace> OK Google, turn off <my fireplace>
2	Flame On/Off	OK Google, activate flame for the <my fireplace> OK Google, cancel flame for the <my fireplace>
3	Heater On/Off	OK Google, activate heater for the <my fireplace> OK Google, cancel heater for the <my fireplace>
4	Heat Mode Low/High/Cool Air	OK Google, set heat mode on <my fireplace> to low OK Google, set heat mode on <my fireplace> to high OK Google, set heat mode on <my fireplace> to cool air
5	Forced Air Heating On/Off	OK Google, activate forced air heating for the <my fireplace> OK Google, cancel forced air heating for the <my fireplace>
6	Flame Color	OK Google, set flame colour on <my fireplace> to colour 1 (or 2, 3, 4, 5, 6)
7	Flame Brightness	OK Google, set brightness on <my fireplace> to 1 (or 2, 3, 4, 5)
8	Fuel Bed On/Off	OK Google, activate fuel bed for the <my fireplace> OK Google, cancel fuel bed for the <my fireplace>
9	Down Light On/Off	OK Google, activate down light for the <my fireplace> OK Google, cancel down light for the <my fireplace>
10	Glowing Logs On/Of	OK Google, activate glowing logs for the <my fireplace> OK Google, cancel glowing logs for the <my fireplace>
11	Ambient Light On/Off	OK Google, activate ambient light for the <my fireplace> OK Google, cancel ambient light for the <my fireplace>
12	Set Room Temperature	OK Google, set <my fireplace> temperature to N Celsius (N=16-28)

Amazon Alexa Commands

Note: Use your “device name” in place of “my fireplace” below.

No.	Function	Commands in Manual
1	Fireplace On/Off	Alexa, turn on <my fireplace> Alexa, turn off <my fireplace>
2	Flame On/Off	Alexa, turn on flame on <my fireplace> Alexa, turn off flame on <my fireplace>
3	Heater On/Off	Alexa, turn on heater on <my fireplace> Alexa, turn off heater on <my fireplace>
4	Heat Mode Low/High/Cool Air	Alexa, set the heat mode on the <my fireplace> to low Alexa, set the heat mode on the <my fireplace> to high Alexa, set the heat mode on the <my fireplace> to cool air
5	Forced Air Heating On/Off	Alexa, turn on forced air heating on <my fireplace> Alexa, turn off forced air heating on <my fireplace>
6	Flame Color	Alexa, set the flame colour on the <my fireplace> to 1 (or 2, 3, 4, 5, 6)
7	Flame Brightness	Alexa, set the brightness on the <my fireplace> to 1 (or 2, 3, 4, 5)
8	Fuel Bed On/Off	Alexa, turn on fuel bed on <my fireplace> Alexa, turn off fuel bed on <my fireplace>
9	Down Light On/Off	Alexa, turn on down light on <my fireplace> Alexa, turn off down light on <my fireplace>
10	Glowing Logs On/Of	Alexa, turn on glowing logs on <my fireplace> Alexa, turn off glowing logs on <my fireplace>
11	Ambient Light On/Off	Alexa, turn on ambient light on <my fireplace> Alexa, turn off ambient light on <my fireplace>
12	Set Room Temperature	Alexa, set <my fireplace> temperature to N Celsius (N=16-28)

6. MAINTENANCE

WARNING: Before any maintenance or cleaning of the exterior of the fireplace, the unit should be disconnected from the power supply until it is cool off.

Remote Handset Battery Replacement

Replace with two AAA batteries. Make sure the batteries are installed correctly in the remote control.

Maintenance of Motors

The motors used on the fan and flame effect are pre-lubricated for extended bearing life and require no further lubrication. However, periodic cleaning/vacuuming of the fan/heater unit is recommended.

Cleaning the Fireplace

You can clean the exterior of the fireplace with a soft, damp, lint-free cloth. Do not use cleaning or polishing products. To remove fingerprints or other marks on the front glass panel, use a soft, damp, lint-free cloth with a good quaglowingy household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel.

CAUTION: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

7. DISPOSAL




Electrical appliances should not be disposed as household waste. Separate collection faciglowingies should be used in the disposal of electrical appliances. Contact your local government for information about the available collection systems. If electrical appliances are disposed of in landfills or dumps,hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



This fire complies with the Safety Standards AS/NZS 60335.1 and AS/NZS 60335.2.30 which covers the essential requirements of the Electrical Equipment (Safety) Regulations and the EMC standards AS/NZS CISPR 14.1 which covers the essential requirements of the Electromagnetic Compatibility Regulations.

8. SPARE PART LIST

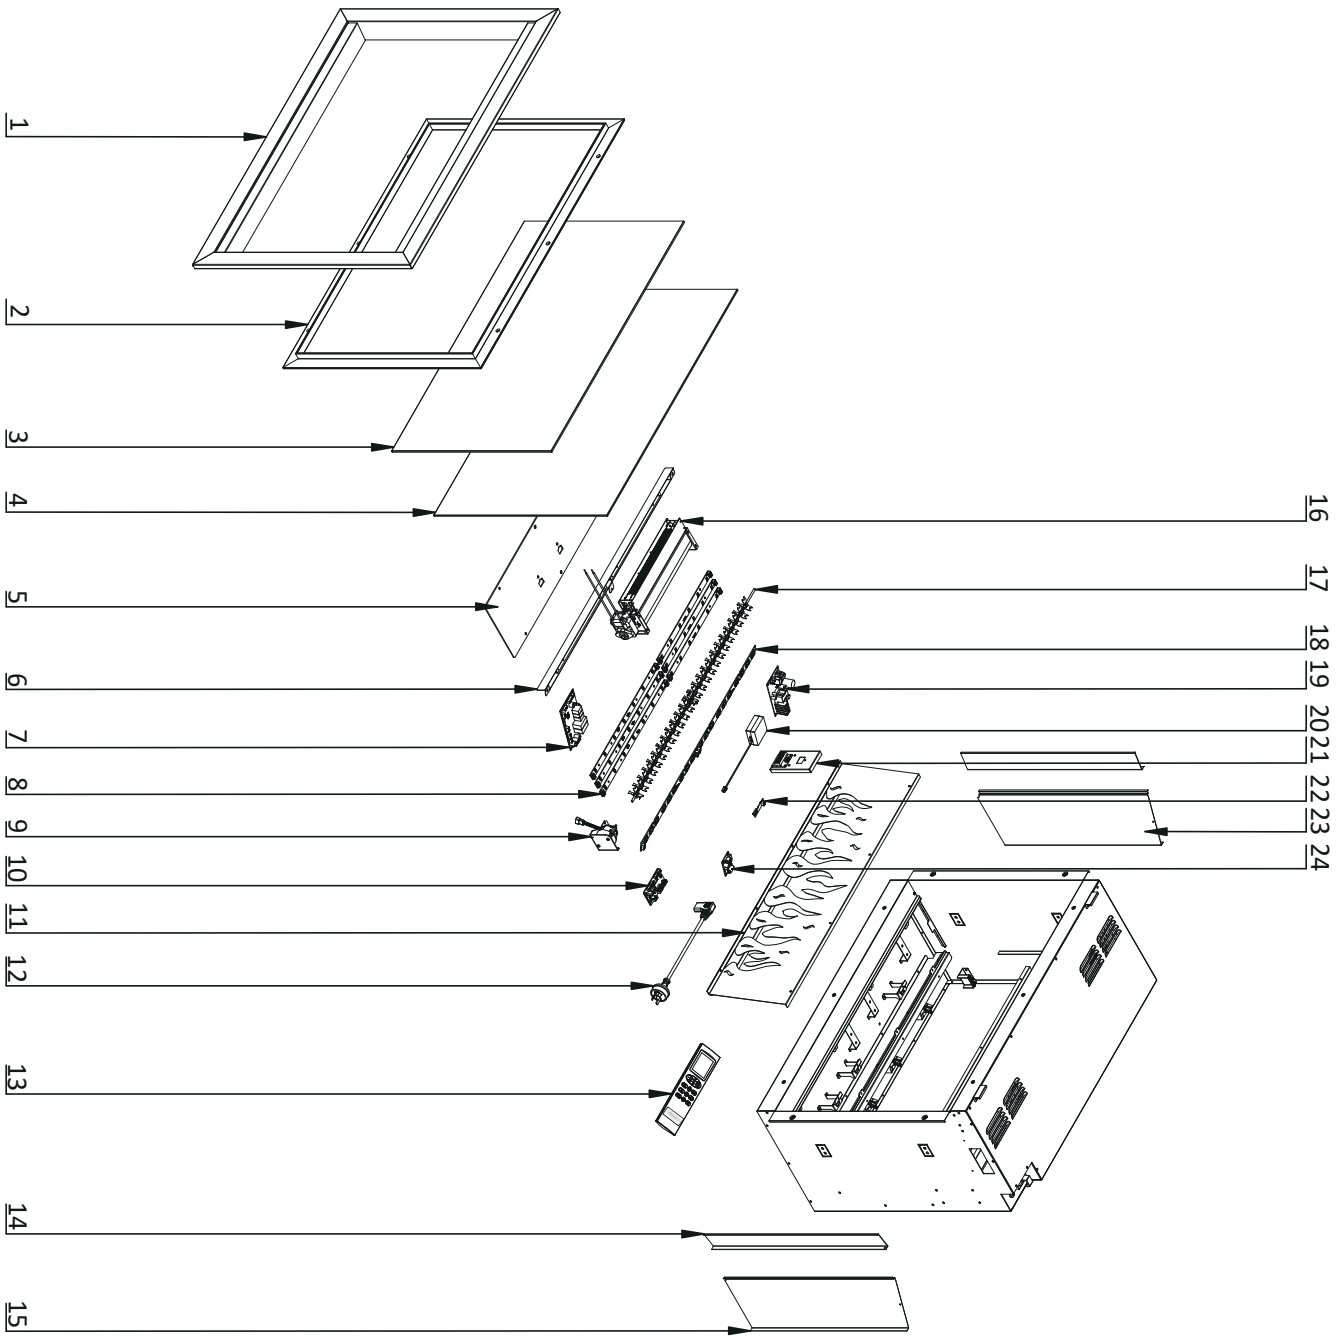

For compatible Horizon 743 Versatile replacement, please refer to below spare part list for reference.

No.	Item	Part No.	LED Model	Qty
1	Silde-in Trim	HOR743VSTRIM		1
2	Built-in Trim	HOR743VBTRIM		1
3	Front Glass	HOR743VGLASS		1
4	Flame Effect Display Screen	HOR743VSCREEN		1
5	Fuel Bed Panel	HOR743VFUELBED		1
6	Down Light	HOR743VDOWNLIGHT		1
7	Printed Circuit Board	HOR743VPCB		1
8	Fuel Bed LED Board	HOR743VFBLEDBOARD	RC07-288A	3
			RC07-289A	3
9	Flame Motor	HOR743VMOTOR		1
10	LED Driver Board	HOR743VDRIVER		1
11	Flame Pattern Panel	HOR743VFILTERPANEL		1
12	Power Cord	HOR743VPOWERCORD		1
13	Remote Control	HOR743VREMOTE		1
14	Outer Side Panel	HOR743VOSPANEL		2
15	Right Inner Side Panel	HOR743VRISPANEL		1
16	Fan/Heating Element Assembly	HOR743VELEMENTASS		1
17	Flame Effect Spindle	HOR743VBRUSH		1
18	Flame LED Board	HOR743VFLLEDBOARD	RC07-432A	1
			RC07-433A	1
19	Power Supply Board	HOR743VPOWERSUPPLY		1
20	Speaker	HOR743VSPEAKER		1
21	Display Board	HOR743VDISPLAYBOARD		1
22	Receiver	HOR743VRECBOARD		1
23	Left Inner Side Panel	HOR743VLISPANEL		1
24	WiFi Receiver	HOR743VWIFIRECBOARD		1
25	Log Set	HOR743VLOGSET		5
26	Black Embers and Curled Grey Chips	HOR743VEMBERS		1
27	Mood Light Strip	HOR743VLIGHTSTRIP		1

9. WARRANTY

HORIZON ELECTRIC FIREPLACES

5 YEAR PARTS & LABOUR WARRANTY

Model: Versatile 743

WARRANTY COVERAGE

Horizon warrants that the Versatile 743 Electric Fireplace is free from defects in materials and workmanship under normal residential use.

Subject to correct installation and operation in accordance with the supplied instructions, Horizon will repair or replace defective parts and cover labour costs for a period of five (5) years from the original date of purchase.

Proof of purchase is required for all warranty claims.

WARRANTY EXCLUSIONS

This warranty does not cover:

- Failure to follow installation, operating, or maintenance instructions.
- Damage caused by incorrect installation.
- Normal wear and tear.
- Cosmetic damage including scratches, dents, fading, or discolouration.
- Damage caused by misuse, neglect, accidents, water ingress, or power surges.
- Rust or corrosion caused by environmental conditions.
- Unauthorised repairs, modifications, or non-approved replacement parts.
- Costs associated with removal, reinstallation, transportation, or freight.
- Inspection costs where no fault is found.

MAKING A CLAIM

To make a warranty claim:

1. Contact the Horizon dealer or distributor from whom the appliance was purchased.
2. Provide proof of purchase and details of the fault.
3. Horizon may request photographs or further information for assessment.
4. Approved claims will be repaired or replaced at Horizon's discretion.

INSTALLATION REQUIREMENTS

The appliance must be installed in accordance with all applicable local electrical and building regulations and the installation instructions supplied with the product.

Failure to comply may void this warranty.

CUSTOMER RECORD

Model: Versatile 743

Date of Purchase: _____

Purchased From: _____

Invoice Number: _____

Installation Date: _____

Installer: _____

HORIZON ELECTRIC FIREPLACES

Model Covered: Versatile 743

Warranty Period: 5 Years Parts & Labour

Please retain this document and your proof of purchase for warranty purposes.

HORIZON
FIREPLACES

NOTES

Reliability ı Innovation ı Service ı Quality

For the entire Jetmaster range, visit your nearest showroom
jetmaster.com.au ı 1300 538 627

NSW - 55 Marrickville Road Marrickville 2204
QLD - 13 French Ave Brendale 4500
S.A - 40 Maple Ave Forestville 5035
W.A - 277 Lord Street Perth 6000

3.EF.743.05.014 A0